When writing
ALWAYS quote your Car Number



List of SPARE PARTS

353 K

PRICE 2/6

THE
AUSTIN MOTOR CO. LTD.
LONGBRIDGE :: BIRMINGHAM

INDEX

(Eleventh Edition)

This List applies to any car the number of which is prefaced by A1, A2, A3, A4 *or* CH.A1.

	Page
Accumulator	25
Axle, front	41
Axle, rear	53
Battery	25
Brake, foot	51
Brake, hand	39
Cables	15
Camshaft	7
Carburettor	21
Carden Shaft	59
Change Speed	33
Clutch	37
Connecting Rod	11
Control Gear	23
Crankcase	1
Crankshaft	7
Cylinder	9
Differential	53
Dynamo	25
Electric Starter	31
Exhaust	21
Flywheel	37
Foot Control	51
Frame	63
Front Axle	41
Gear Box	33
Hand Brake	39
Horns	27
Ignition	5
Induction Pipe	21
Lamps	27
Magneto	5
Oil Pump	5
Pedal Control	51
Petrol Tank	19
Pistons	11
Propellor Shaft	59
Radiator	15
Radius Arms	49
Rear Axle	53
Road Springs	63
Road Wheels	69
Shock Absorbers	67
Silencer	21
Speedometer	29
Springs and Shackles	63
Starter, electric	31
Starting Handle	13
Steering Box & Column	45
Steering Rods or Tubes	49
Sump	3
Switchboard	25
Tappets	11
Tool Kit	65
Torque Tube	59
Track Rod	49
Universal Joints	59
Valves	11
Wheels	69
Wiring	15 and 17

AUSTIN MOTOR Co., Ltd., Longbridge, BIRMINGHAM.
Telephone, Cent. 4140. Telegrams, " Speedily, Northfield."

LONDON:

479-483, Oxford Street, W.1 (near Marble Arch).
Telephone, Mayfair 6230. Telegrams, "Austinette."
Code: Bentley's.

Items shown in italics are not used on current models.

PUBLICATION 353k.

Manufacturers' Warranty

SUBJECT to the conditions hereinafter mentioned all goods—other than complete cars or chassis—manufactured by the Company, shall be accepted by the purchaser subject to the following express warranty, which includes all warranties, conditions and liabilities whatsoever whether statutory or otherwise, which might exist against the Company but for this provision, viz. :—In the event of any defect being disclosed in any part or parts of the goods and if the part or parts alleged to be defective are returned to the Company's works, carriage paid, within ninety days after delivery, the Company undertakes to examine same, and should any fault, due to defective material or workmanship, be found on examination by the Company, it will repair the defective part or supply, free of charge, a new part in place thereof.

The Company's responsibility is limited to the terms of this guarantee, and it shall not be answerable for any contingent or resulting liability, or loss arising through any defects. This guarantee does not relate to defects caused by motor racing wear and tear, misuse or neglect, or to the defects in any goods which have been altered after leaving the Company's works, or which have been let out on hire, or the identification numbers or marks on which have been altered or removed. The Company accepts no responsibility for tyres, speedometers or the electrical equipment or other goods (including coachwork) not of its own manufacture.

The Austin Motor Co. Ltd. issues no warranty of the goods except as stated herein, but desires and expects that customers shall make a thorough examination before purchasing. This warranty is limited to the despatch to the purchaser without charge except for transportation, of the part or parts, whether new or repaired, in exchange for those acknowledged by the Company to be defective, and is dependent upon the strict observance of the following clauses :—

(*a*) The purchaser shall send to the Company's works, such part or parts as are alleged or claimed to be defective promptly on the discovery of the claimed defect. Transportation is to be prepaid by the purchaser, and said part or parts to be properly packed for transit and clearly marked for identification with the name and full address of the owner, and with the number of the vehicle from which the said part or parts were taken.

(*b*) The purchaser shall post to the Company at its works on or before despatch of such part or parts alleged to be defective, a full and complete description of the claim and the reasons therefore.

(*c*) The judgment of the Austin Motor Co. Ltd. in all cases of claims shall be final and conclusive, and purchaser agrees to accept their decision on all questions as to defects and to the exchange of part or parts. After the expiration of six days from the despatch of notification of the Company's decision the part or parts submitted may be scrapped or returned carriage forward by the Company.

TERMS OF BUSINESS

All Austin Agents carry stocks of Replacements, and applications for Spares should be made to them. Correspondence with the Company relating to Spare Parts, Accessories, and Replacements should be addressed to the Service Department.

Quotations obtained from the Company hold good for 14 days from the date thereof, when they are automatically cancelled, and fresh quotations must be applied for.

Cash with order, unless purchaser already has an account with the Company or is able to furnish approved references.

Bearing in mind alterations due to improvements, the Company in no way holds itself liable or responsible as to alterations in details in respect to orders.

The Company retains the right of making alterations to this list without notice, should it be deemed necessary.

Delivery on any specified date is not guaranteed.

TELEGRAPH AND TELEPHONE ORDERS

To protect itself against fraud, it is compelled to decline to deliver goods ordered by telegram or telephone to the address of any persons unknown to it, unless covered by telegraphic remittance.

DAMAGE IN TRANSIT

It does not hold itself responsible for goods lost or damaged in transit. All packages, upon receipt, should be signed for as " unexamined," and in the event of loss or damage to the contents, claim made upon the carriers without delay.

PACKING

Packing and cases, when necessary, are charged for.

*** **See special Note re Articles of Equipment and Accessories at end of book.**


CRANKCASE

DESCRIPTION	Number per Car	Reference Number
Crankcase, including BA25, 54 to 61 and 65 ...	1	**BA1**
Timing gear case	1	**BA2**
Joint washer	1	**BA3**
Set-screws	3	**BA4**
Timing gear cover (for cars fitted with camshaft BB18)	1	**BA5**
Timing gear cover (for cars fitted with camshaft, BB38)	1	**BA84**
Joint washer	1	**BA6**
Bolts	3	**BA7**
Spring washers	3	**BA8**
Nuts	3	**BA9**
Set-screw	1	**BA10**
Spring washer	1	**BA11**
Set-screws	2	**BA12**
Spring washers	2	**BA13**
Locating ring for timing cover	1	**BA14**
Starting nut felt housing (for cars with fan) ...	1	**BA15**
Starting nut felt housing (for cars without fan) ...	1	**BA16**
Plate	1	**BA17**
Felt	1	**BA18**
Housing washer	1	**BA19**
Set-screws	2	**BA20**
Spring washers	2	**BA21**
Locking wire	1	**BA22**
Locking screw	1	**BA23**
Spring washers	8	**BA24**
Cylinder foot studs	8	**BA25**
Plain nuts	5	**BA26**
Barrel nuts	3	* **BA38**
Spring Washer	8	**BA27**
Camshaft front bearing (plain) for BB18 ...	1	**BA28**
Camshaft front bearing (grooved) for BB38 ...	1	**BA83**
Stud	1	**BA29**
Spring washer	1	**BA30**
Camshaft rear bearing	1	**BA31**
Set-screws	2	**BA32**
Spring washers	2	**BA33**
Joint washer	1	**BA34**
Thrust button	1	**BA35**
Packing shims	*as required*	**BA36**
Oil baffles	4	**BA37**

* For illustration see page 69.

When ordering parts quote your car number.

Items shown in italics are not used on current models.

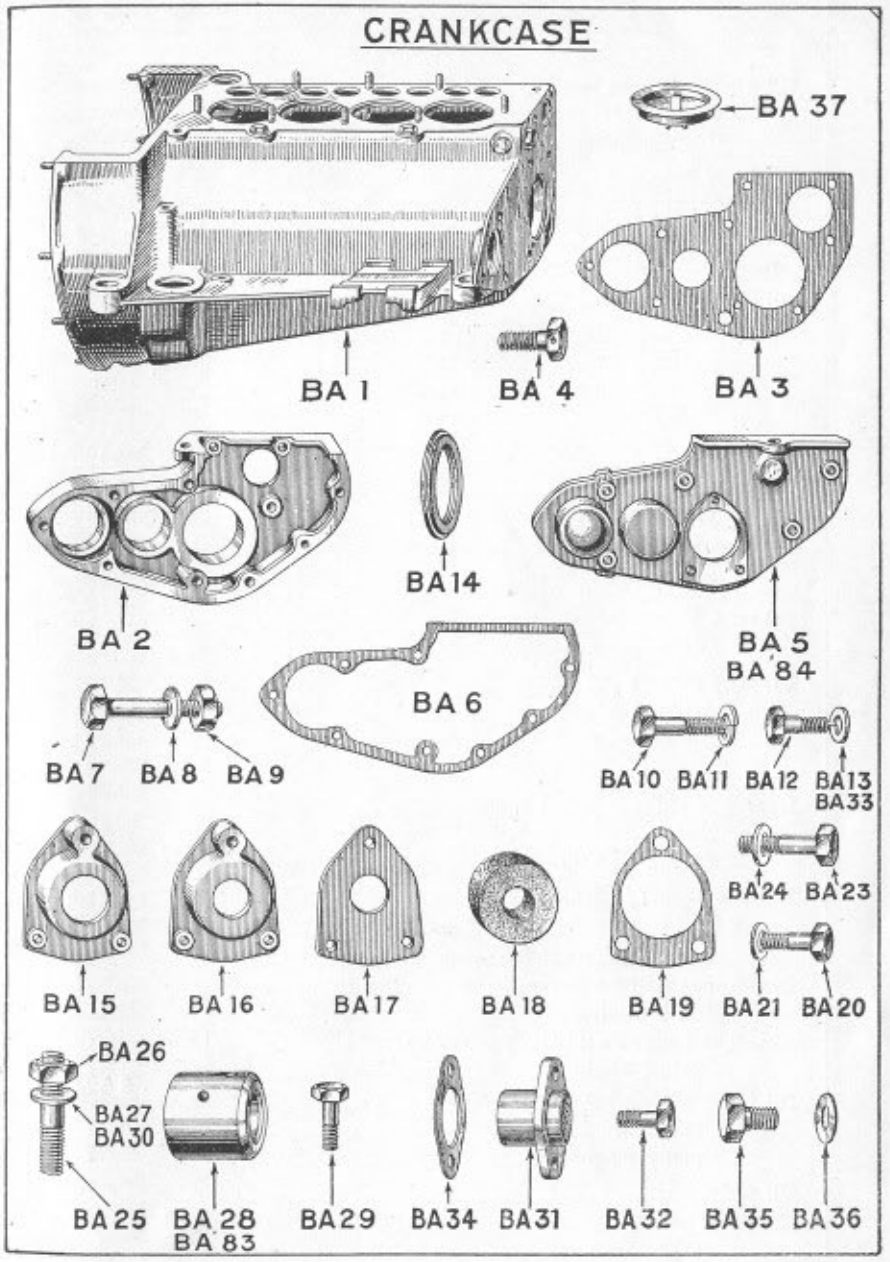


CRANKCASE, contd.

DESCRIPTION	Number per Car	Reference Number
Oil pump spindle bush	1	**BA41**
Cover	1	**BA42**
Joint washer	1	**BA43**
Oil filler cap	1	**BA44**
Spring and standard	1	**BA45**
Oil filler strainer	1	**BA47**
Washer	1	**BA48**
Oil dipper rod	1	**BA49**
Oil release adjusting screw	1	**BA50**
Spring	1	**BA51**
Valve washer	1	**BA52**
Ball	1	**BA53**
Oil jets	2	**BA54**
Oil way plugs (small)	2	**BA55**
Washers	2	**BA56**
Oil way plugs (medium)	1	**BA57**
Washers	1	**BA58**
Oil way plugs (large)	2	**BA59**
Washers	2	**BA60**
Oil way screws	2	**BA61**
Flywheel pit covers	1 set	**BA62**
Set-screws	2	**BA63**
Spring washers	2	**BA64**
Gear box studs	8	**BA65**
Nuts	8	**BA66**
Spring washers	8	**BA67**
Bolts—engine to frame	4	**BA68**
Nuts	4	**BA69**
Washers	4	**BA70**
Crankcase bottom cover, with oil plug flange ...	1	**BA71**
Joint washer	1	**BA72**
Set-screws (bottom cover to case) ...	14	**BA73**
Spring washers	14	**BA74**
Oil tray, with gauze	1	**BA75**
Set-screws	10	**BA76**
Spring washers	10	**BA77**
Oil plug	1	**BA79**
Washer	1	**BA80**

When ordering parts quote your car number.

Items shown in italics are not used on current models.

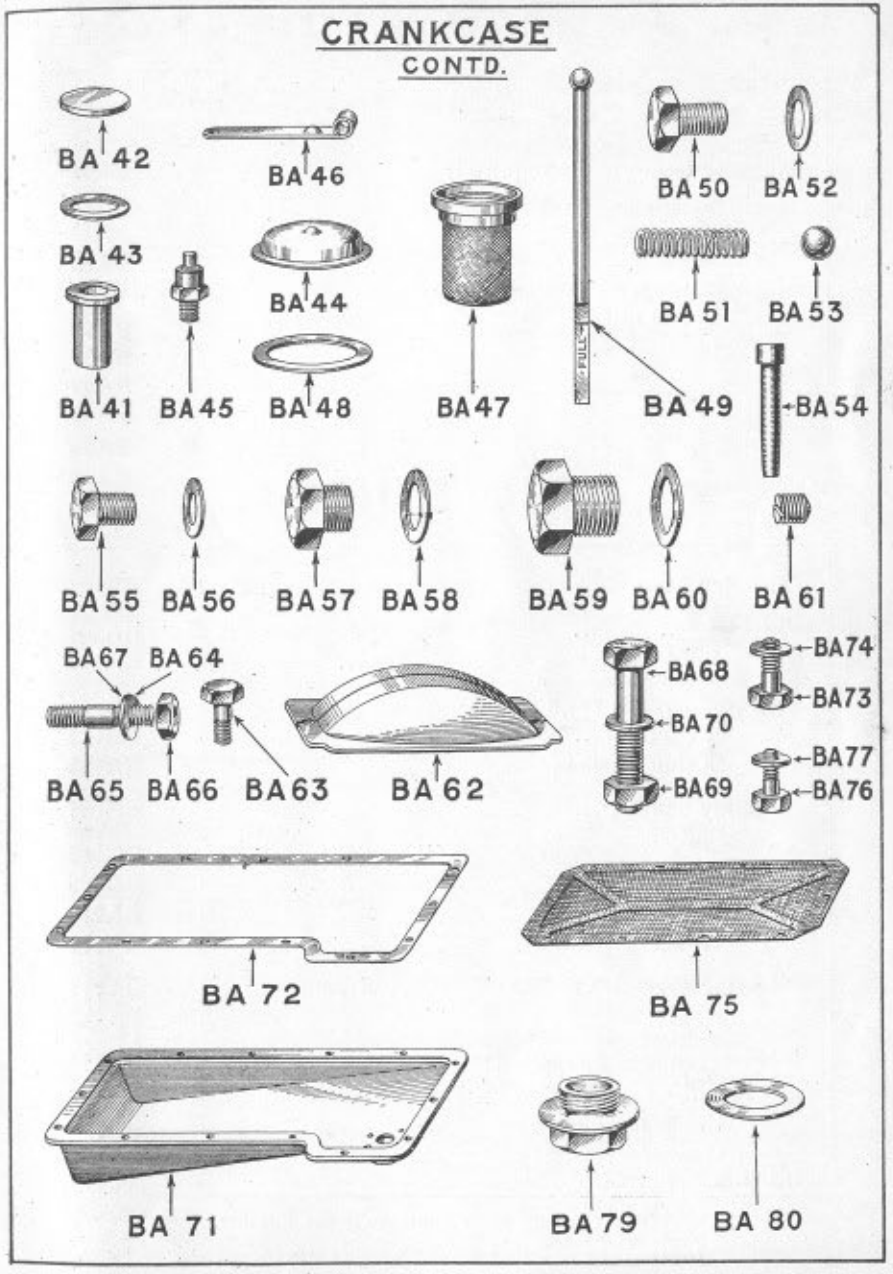

MAGNETO


DESCRIPTION	Number per Car	Reference Number
Magneto (state make required)	1	**BA100**
Magneto coupling flange	1	**BA92**
Magneto coupling ring	1	**BA93**
Magneto strap, with swivels and nuts	1	**BA94**
Barrel nut	1	**BA98**
Locknut	1	**BA99**

OIL PUMP

Oil-pump body	1	**BA101**
Plugs	2	**BA102**
Joint washer	1	**BA103**
Oil pump bottom cover	1	**BA104**
Set-screws	2	**BA105**
Spring washers	2	**BA106**
Oil pump vanes	2	**BA107**
Springs	2	**BA108**
Oil pump spindle	1	**BA109**
Nut	1	**BA110**
Washer	1	**BA111**
Oil pump gear	1	**BA112**
Key	1	**BA113**
Oil gauge pipe and nipple	1	**BA114**
Nut	1	**BA115**
Union (crankcase)	1	**BA116**
Washer	1	**BA117**
Oil pressure gauge	1	BG

When ordering parts quote your car number.

Items shown in italics are not used on current models.

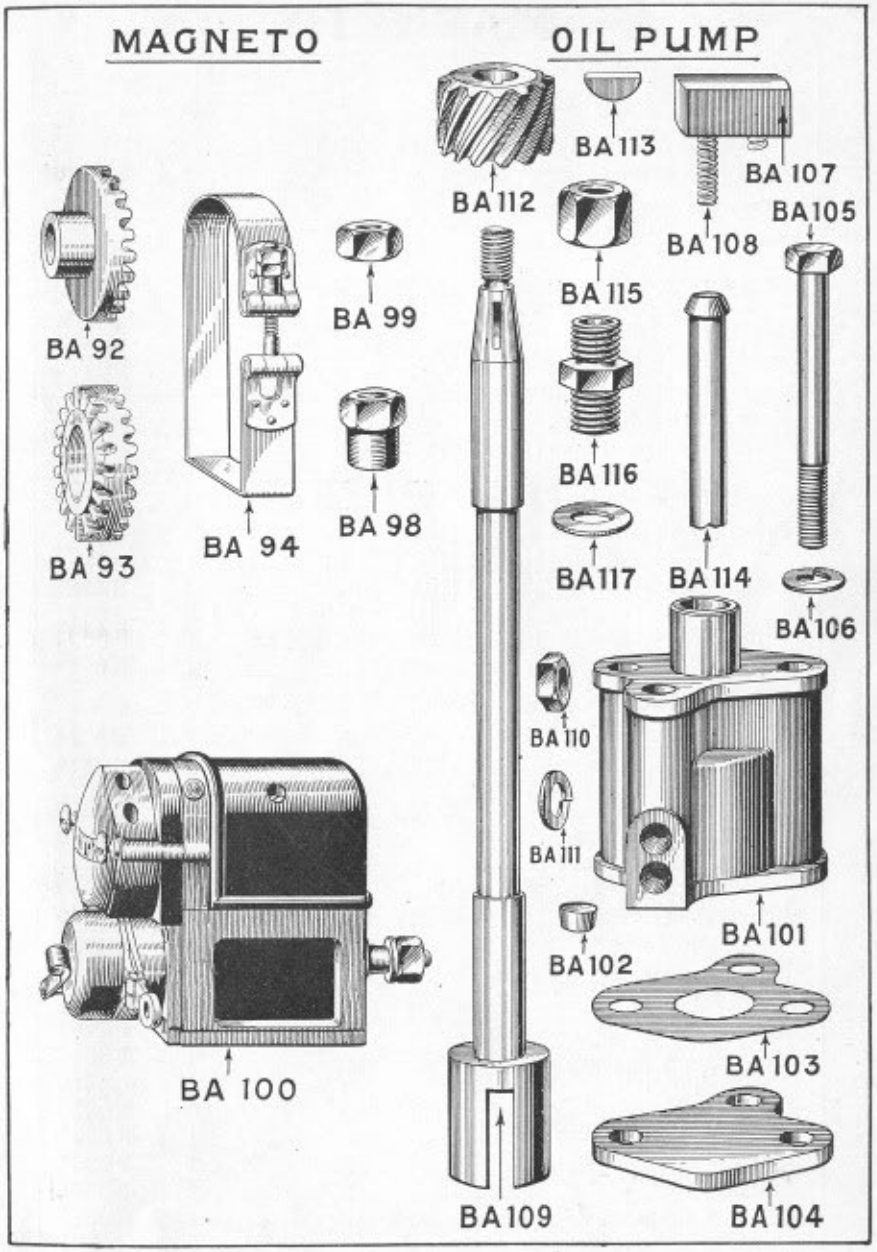


CRANKSHAFT, CAMSHAFT, and GEARS

DESCRIPTION	Number per Car	Reference Number
Crankshaft, with bearings, BB15 and 17, for main journals	1	**BB1**
Plugs	6	**BB2**
Packing shims	as required	**BB3**
Gear	1	**BB4**
Key	1	**BB5**
Felt plate (large)	1	**BB6**
Felt (rear)	1	**BB7**
Felt plate (small)	1	**BB8**
Washer (packing)	1	**BB9**
Rear bearing housing	1	**BB10**
Washer (paper)	1	**BB11**
Set-screws	4	**BB12**
Lockwashers	4	**BB13**
Flywheel distance piece	1	**BB14**
Ball Bearing $1\frac{1}{4}$in. $\times 2\frac{13}{16}$in. $\times \frac{13}{16}$in. ...	1	**BB15**
Ball Bearing $\frac{5}{8}$in. $\times 1\frac{13}{16}$in. $\times \frac{5}{8}$in. ...	4	**BB16**
Roller Bearing $1\frac{1}{8}$in. $\times 2\frac{13}{16}$in. $\times \frac{13}{16}$in. ...	2	**BB17**
Camshaft (the end thrust of which is taken on thrust button in timing gear case BA5)	1	**BB18**
Camshaft (the end thrust of which is taken on front bearing BA83)	1	**BB38**
Roller race	1	**BB19**
Rollers	9	**BB20**
Gear	1	**BB21**
Key	1	**BB22**
Nut	1	**BB23**
Lockwasher	1	**BB24**
Intermediate gear	1	**BB25**
Pin	1	**BB26**
Magneto gear	1	**BB27**
Spindle	1	**BB28**
Nut	1	**BB29**
Key	1	**BB30**
Split-pin	1	**BB31**
Packing shims (magneto spindle)	as required	**BB32**
Felt (magneto spindle)	1	**BB33**
Plate	1	**BB34**
Starting nut	1	**BB36**
Lockwasher	1	**BB37**

When ordering parts quote your car number.

Items shown in italics are not used on current models.

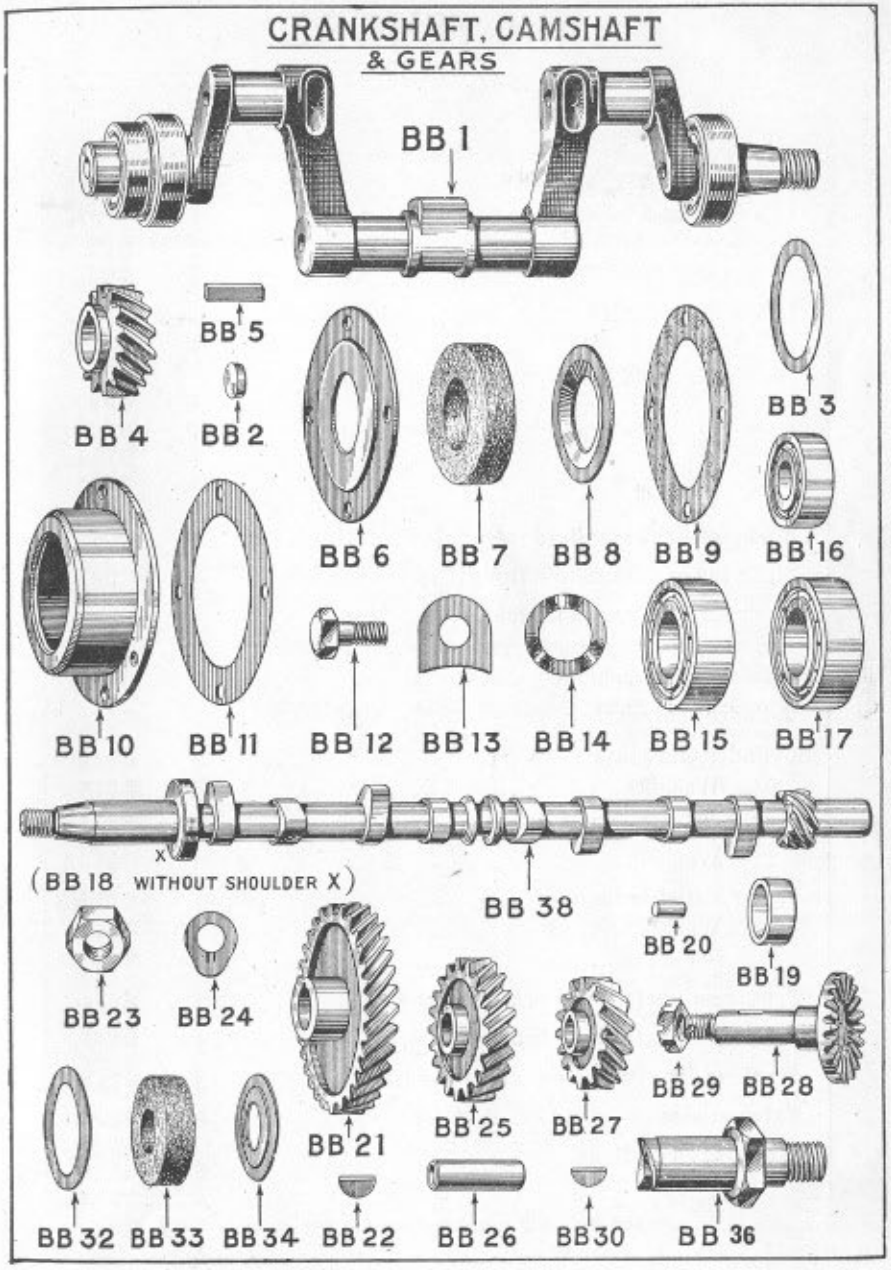


CYLINDER

DESCRIPTION	Number per Car	Reference Number
Cylinder Head (2.2in. bore)	1	**BC28**
Joint washer	1	**BC29**
Cylinder Head (2.125 in. bore)	1	**BC1**
Joint washer	1	**BC3**
Cylinder monobloc (2.2in. bore), including BC5, 8, 9, 10, 14, 15 and 24	1	**BC30**
Cylinder monobloc (2.125 bore), including BC5, 8, 9, 10, 14, 15 and 24	1	**BC4**
Studs	14	**BC5**
Nuts	14	**BC6**
Washers	14	**BC7**
Studs for exh. manifold (middle)	1	**BC8**
Studs for exh. manifold (long)	4	**BC9**
Studs for exh. manifold (short)	2	**BC10**
Nuts	7	**BC11**
Plain washers	7	**BC12**
Cylinder foot washer	1	**BC13**
Cylinder end plugs	2	**BC14**
Washers	2	**BC15**
Combustion chamber plugs	4	**BC16**
Washers	4	**BC17**
Water outlet branch	1	**BC18**
Washer	1	**BC19**
Set-screw	1	**BC20**
Set-screw (water inlet branch), long	1	**BC21**
Set-screw (water inlet branch), short	1	**BC22**
Washers for water pipe set-screws (fibre) ...	3	**BC23**
Valve guides	8	**BC24**
Crankcase breathers	2	**BC25**

When ordering parts quote your car number.

Items shown in italics are not used on current models.

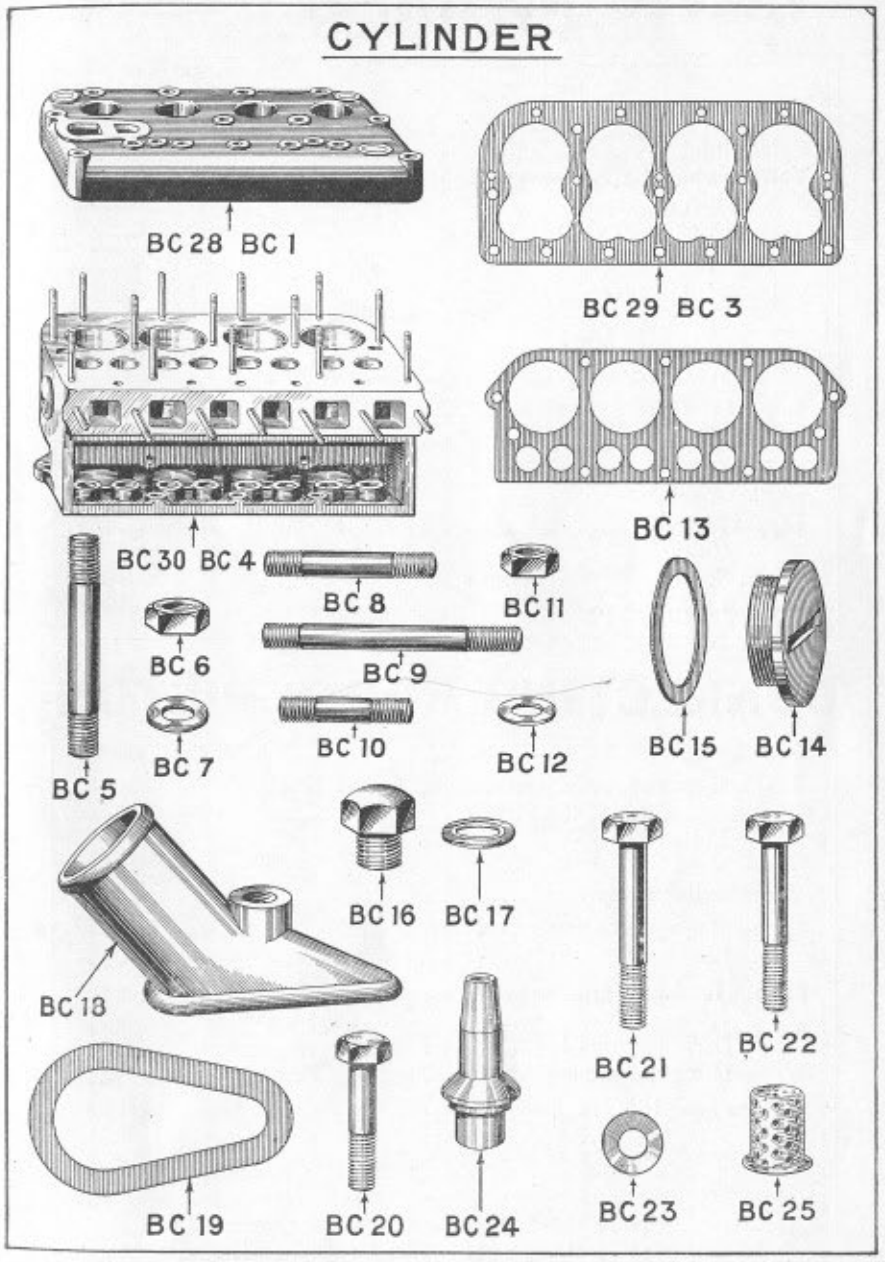

VALVE AND TAPPET GEAR


DESCRIPTION	Number per Car	Reference Number
Valve (inlet with plain top)	4	**BC61**
Valve (exhaust with boss on top)	4	**BC62**
Springs	8	**BC32**
Cups	8	**BC33**
Split cotters	8	**BC34**
Valve spring cover	1	**BC35**
Studs	2	**BC36**
Nuts	2	**BC37**
Washer (cork)	1	**BC38**
Tappet plungers	8	**BC39**
Screws	8	**BC40**
Locknuts	8	**BC41**
Tappet guides	8	**BC42**
Tappet plungers	8	**BC53**
Guides	8	**BC54**
Screws	8	**BC55**
Locknuts	8	**BC60**


CONNECTING ROD & PISTON

Connecting rod with cap (white metal lined) including BC44 to 48	4	**BC43**
Bolts	8	**BC44**
Nuts	8	**BC45**
Split-pins	8	**BC46**
Connecting rod clamping pins	4	**BC47**
Lockwashers	4	**BC48**
Pistons for 2.2in. cylinders	4	**BC56**
Rings	8	**BC57**
Scraper rings	4	**BC58**
Gudgeon pins	4	**BC59**
Pistons for 2.125in. cylinders	4	**BC50**
Rings	8	**BC51**
Scraper rings	4	**BC52**
Gudgeon pins	4	**BC49**

When ordering parts quote your car number.

Items shown in italics are not used on current models.

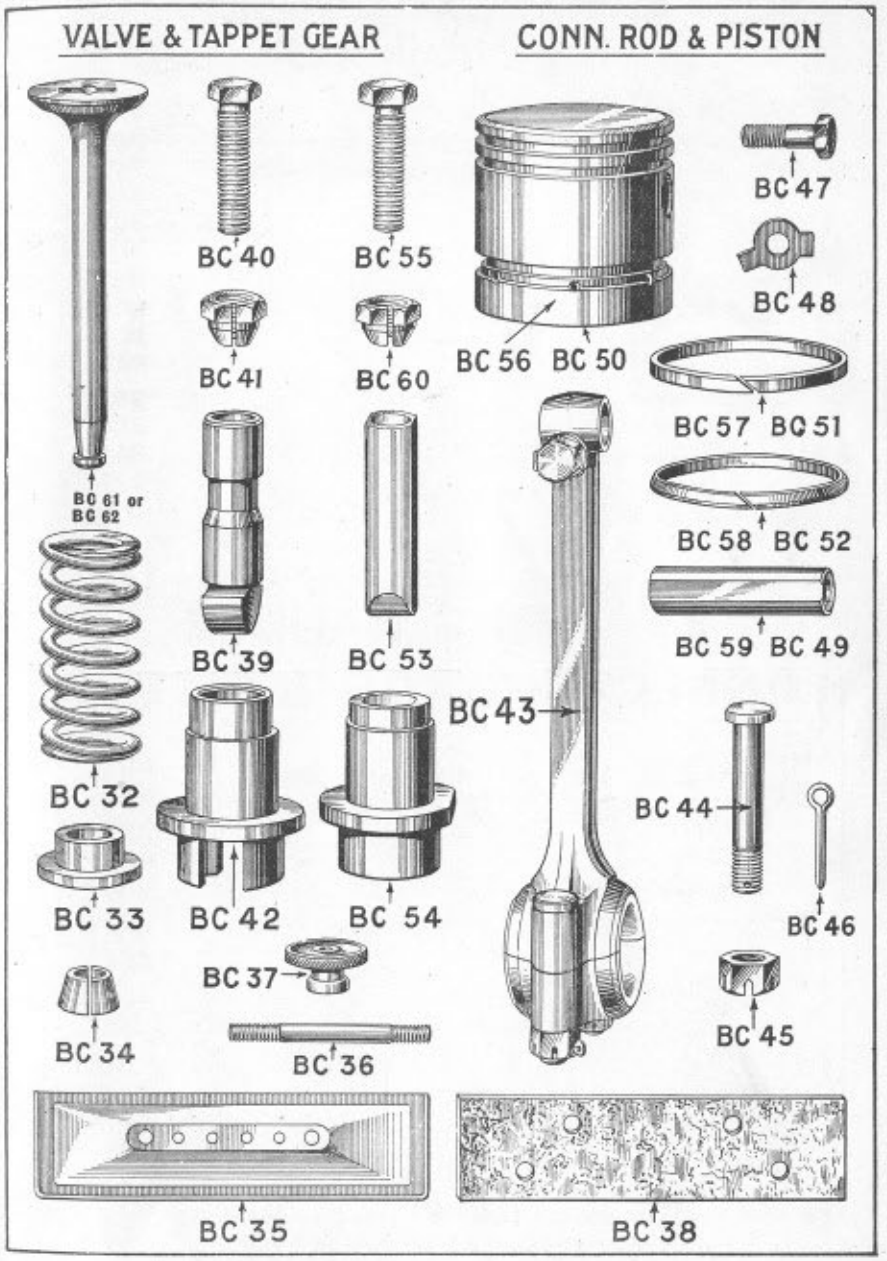

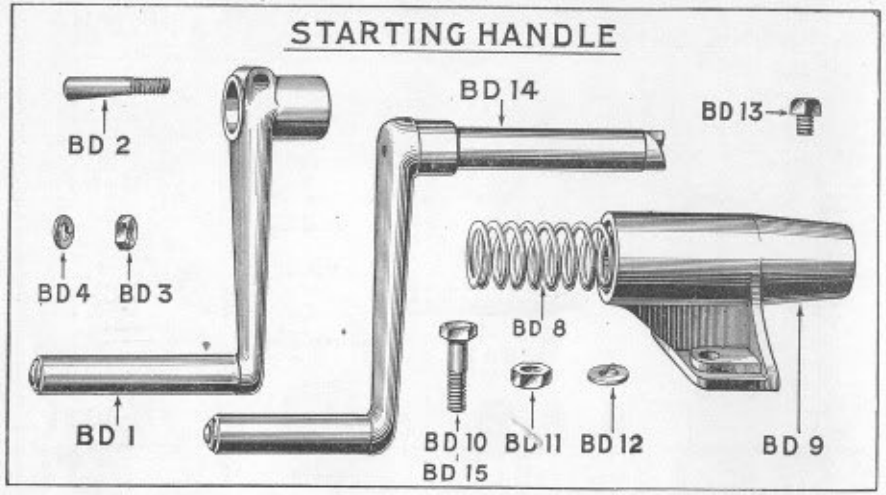


STARTING HANDLE

DESCRIPTION	Number per Car	Reference Number
Starting handle	1	**BD14**
Starting handle for Brooklands model ...	1	**BD1**
Cotter	1	**BD2**
Nut	1	**BD3**
Spring washer	1	**BD4**
Spring	1	**BD8**
Bracket	1	**BD9**
Bolts (with shock absorbers)	2	**BD10**
Bolts (without shock absorbers)	2	**BD15**
Nuts	2	**BD11**
Spring washers	2	**BD12**
Square head set-screws	1	**BD13**
Peg for starting handle	1	**BD16**

When ordering parts quote your car number.

Items shown in italics are not used on current models.

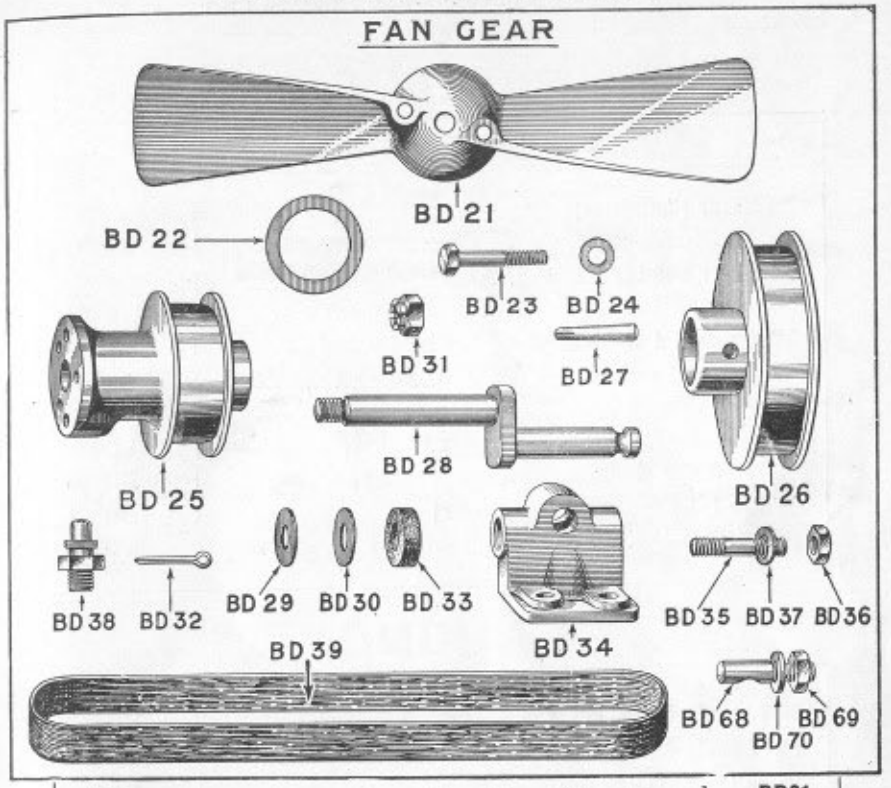

Fan	1	**BD21**
Joint Washer	1	**BD22**
Bolts	2	**BD23**
Fibre Washers	2	**BD24**
Fan bearing, including BD49 and 50	1	**BD25**
Driving pulley	1	**BD26**
Split taper pin	1	**BD27**
Spindle	1	**BD28**
Bush (short)	1	**BD49**
Bush (long)	1	**BD50**
Washer	1	**BD29**
Thrust washer	1	**BD30**
Nut	1	**BD31**
Split-pin	2	**BD32**
Felt ring	1	**BD33**
Clamping pin	1	**BD68**
Nut	1	**BD69**
Washer	1	**BD70**
Bracket	1	**BD34**
Studs	2	**BD35**
Nuts	2	**BD36**
Spring washers	2	**BD37**
Grease gun nipple	1	**BD38**
Grease gun nipple (conical type)	1 *	**BX1**
Belt	1	**BD39**

*For illustration see page 69.

When ordering parts quote your car number.

Items shown in italics are not used on current models.

RADIATOR

DESCRIPTION	Number per Car	Reference Number
Radiator (complete)	1	**BD41**
Strainer	1	**BD97**
Radiator cowl	1	**BD98**
Radiator cap	1	**BD40**
Water outlet connection	1	**BD42**
Water inlet connection	1	**BD43**
Clips	4	**BD44**
Drain tap	1	**BD45**
Joint washer	1	**BD46**
Water inlet branch (on cylinder)	1	**BD47**
Washer	1	**BD48**


WIRING

H.T. cable Nos. 1, 2, and 3	3	**BD51**
H.T. cable No. 4	1	**BD52**
Wire (magneto to mg. switch)	1	**BD53**
Rubber rings (H.T. cables)	2	**BD54**
Wiring clips on flitch plate	2	**BD55**
Wiring clips for door front pillar	2	**BD56**
Chater Lea terminals for H.T. cables	4	**BD57**
Terminal for cable (battery to frame)	1	**BD58**
Ferrules complete (battery connections)	2	**BD59**
Earth wire in switchboard	1	**BD60**
Cheese-head screws (wiring clip)	2	**BD61**
Nuts	2	**BD62**
Spring washers	2	**BD63**
Bolt (clip, battery cable to frame)	1	**BD64**
Nut	1	**BD65**
Spring washer	1	**BD66**
Cable bush and nut	3	**BD67**

Also see page 17.

When ordering parts quote your car number.

Items shown in italics are not used on current models.

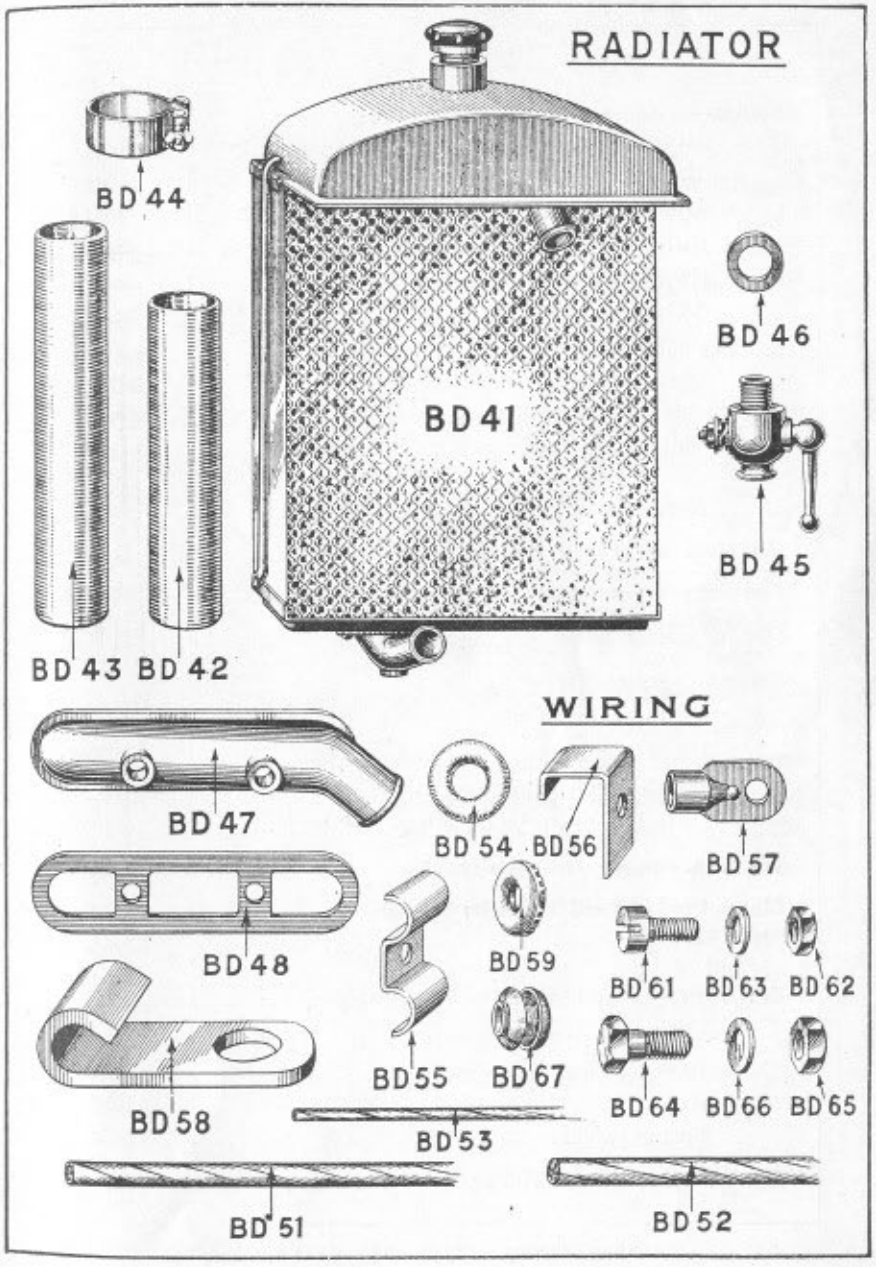


WIRING, contd.

DESCRIPTION	Number per Car	Reference Number
Cables—		
Horn to instrument board	1	**BD71**
Battery to switchboard, including BD87	1	**BD72**
Dynamo to switchboard, including BD88	1	**BD73**
Switchboard to cut-out	1	**BD74**
Switchboard to nearside light	1	**BD75**
Switchboard to offside light	1	**BD76**
Switchboard to rear light	1	**BD77**
Battery to starter switch, including BD85, 94 and 95	1	**BD78**
Starter to starter switch, including BD84 and 94	1	**BD79**
Battery to frame, including BD86 and 96	1	**BD80**
Felt strip (wires from switchboard)	1	**BD81**
Felt strip (wires from switchboard)	1	**BD82**
Clip for starter cable	1	**BD83**
Terminals for starter—		
Switch to starter	2	**BD84** ✓
On starter switch	1	**BD85**
Earth wire to frame	1	**BD86** ✓
Switch to battery on battery terminal ...	1	**BD87** ✓
Terminal dynamo to switchboard	2	**BD88** ✓
Clamp lug terminal for battery (positive) ...	1	**BD95** ✓
" " " (negative) ...	1	**BD96** ✓
Earth wire—switchboard to oil gauge pipe ...	1	**BD89**
Clip	1	**BD90**
Bolt	1	**BD91**
Nut	1	**BD92**
Spring washer	1	**BD93**
Rubber ferrules for starter switch cables ..	3	**BD94** ✓

When ordering parts quote your car number.

Items shown in italics are not used on current models.

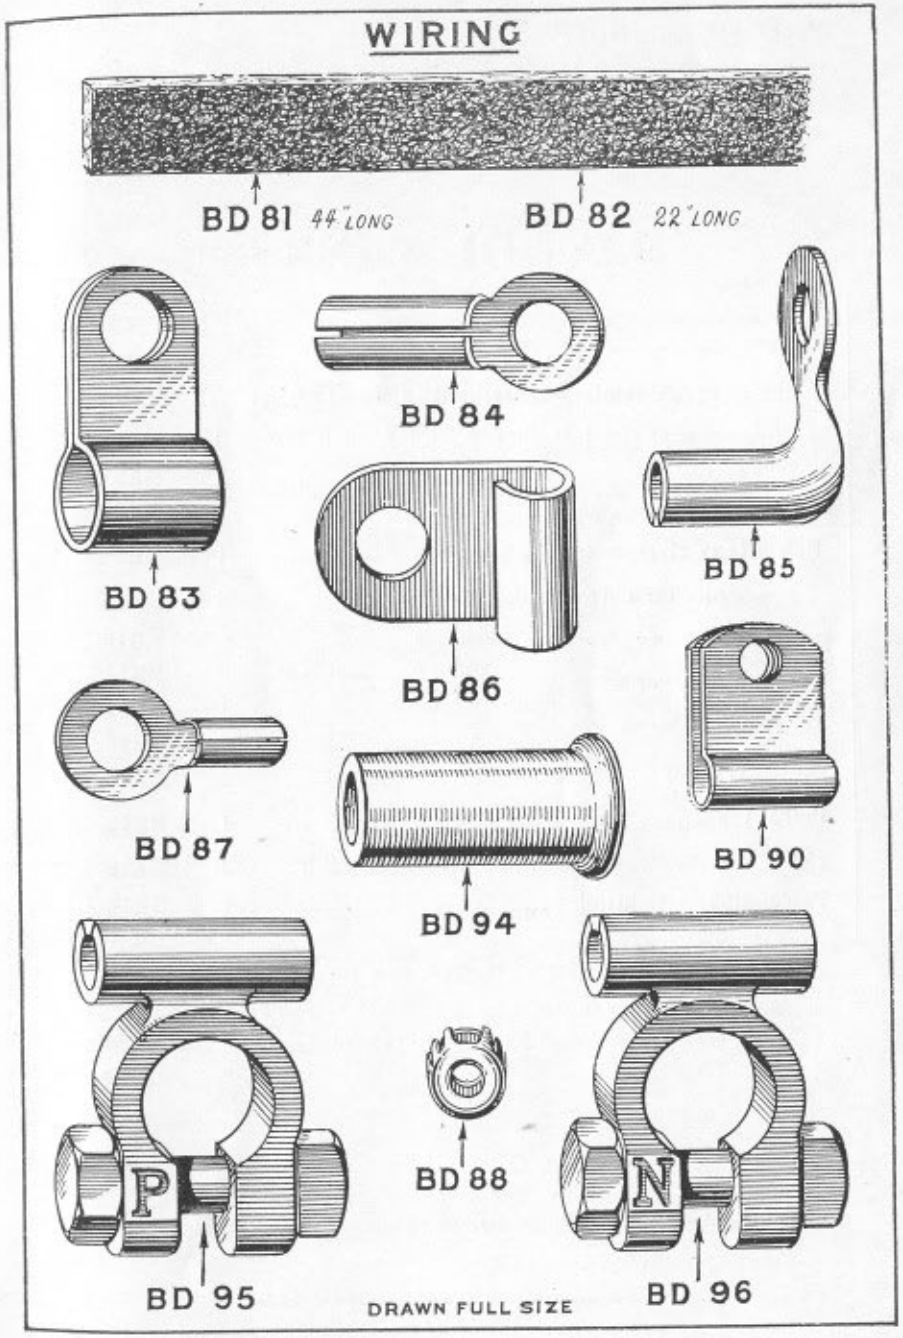


PETROL TANK

DESCRIPTION	Number per Car	Reference Number
Petrol tank (complete), including BE3, 4 and 6 ...	1	**BE62**
Petrol tank (complete), including BE3, 4 and 6 ...	1	**BE1**
Cap	1	**BE3**
Washer	1	**BE4**
Petrol tank strainer	1	**BE6**
Bolts for petrol tank lugs	2	**BE9**
Nuts ,, ,, ...	2	**BE10**
Washers,, ,, ...	2	**BE11**
Petrol tank strap, with screwed ends	1	**BE12**
Nut	2	**BE14**
Washer	2	**BE15**
Petrol tap	1	**BE16**
Petrol pipe, with nipples	1	**BE18**
Petrol pipe, with nipples	1	**BE19**

When ordering parts quote your car number.

Items shown in italics are not used on current models.

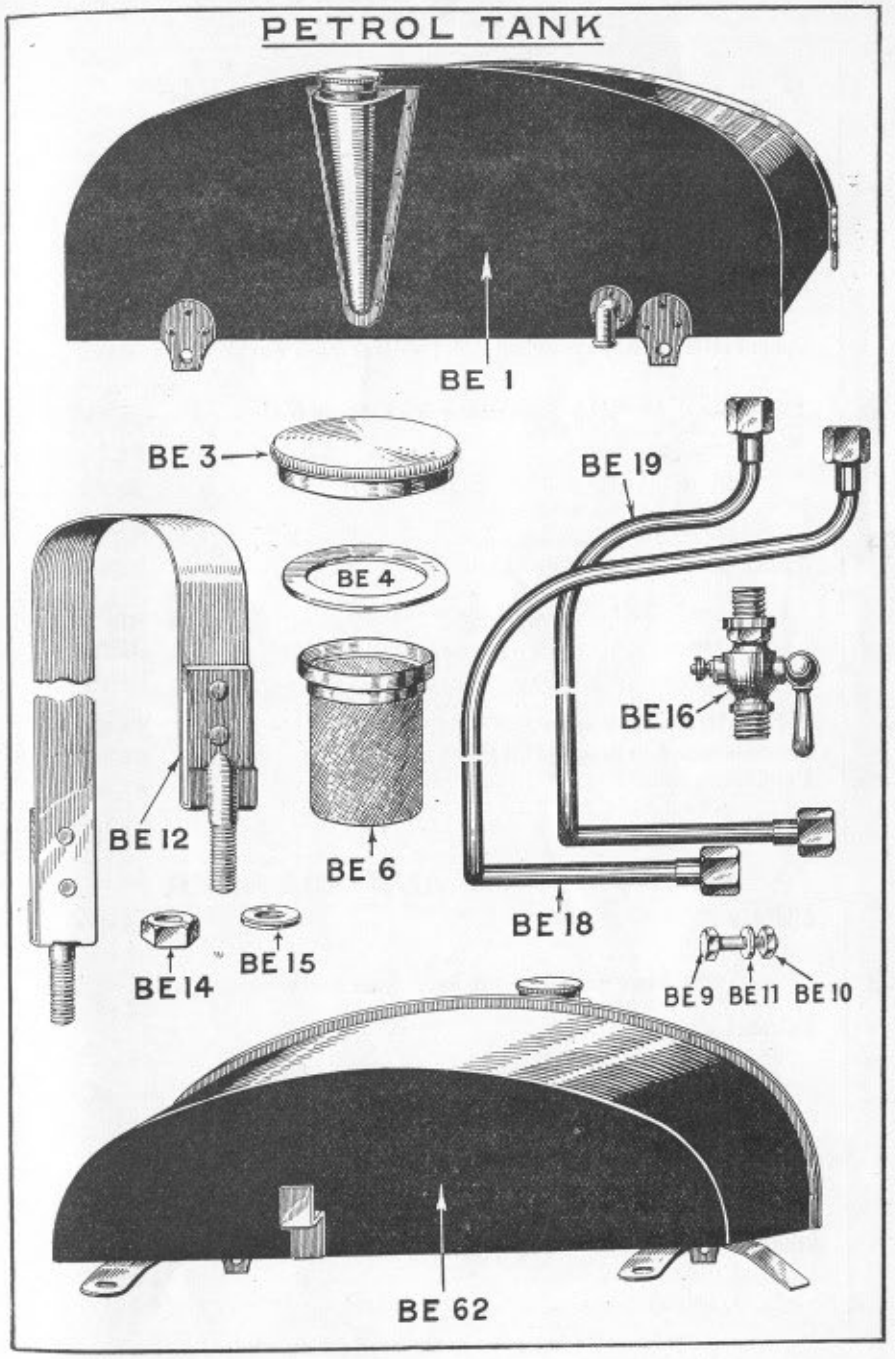

EXHAUST MANIFOLD INDUCTION PIPE AND CARBURETTER


DESCRIPTION	Number per Car	Reference Number
Induction pipe	1	**BE21**
Joint washers	2	**BE22**
Packing washer	1	**BE23**
Carburetter	1	**BE24**
Bolts	2	**BE25**
Nuts	2	**BE26**
Spring washers	2	**BE27**
Carburetter air flap control rod (from radiator cowl)	1	**BE63**
Catch	1	**BE64**
Carburetter air flap swinging link (control from dash)	1	**BE65**
Bracket	1	**BE66**
Hand control rod	1	**BE67**
Hand control rod	1	**BE76**
Ferrule	1	**BE77**
Main control rod	1	**BE68**
Ring for control	1	**BE69**
Guide for instrument board	1	**BE70**
Guide for instrument board	1	**BE78**
Rivet	2	**BE71**
Bolt	1	**BE75**
Nut	1	**BE72**
Spring washer	1	**BE73**
Split pin	1	**BE74**
Carburetter joint washer	1	**BE28**
Induction and exhaust joint washer	1	**BE29**
Exhaust manifold	1	**BE30**
Set-screw	1	**BE31**
Spring washer	1	**BE32**

EXHAUST PIPE AND SILENCER

Silencer	1	**BE41**
Bolts	2	**BE47**
Nuts	2	**BE48**
Spring washers	2	**BE49**
Exhaust pipe	1	**BE50**
Flange	1	**BE51**
Washer	1	**BE52**
Bolts	4	**BE53**
Nuts	4	**BE54**
Silencer inlet pipe clips	2	**BE56**
Strip	1	**BE57**
Silencer clip packing	1	**BE58**
Silencer clip bolts	2	**BE59**
Nuts	2	**BE60**
Washers	2	**BE61**

When ordering parts quote your car number.

Items shown in italics are not used on current models.

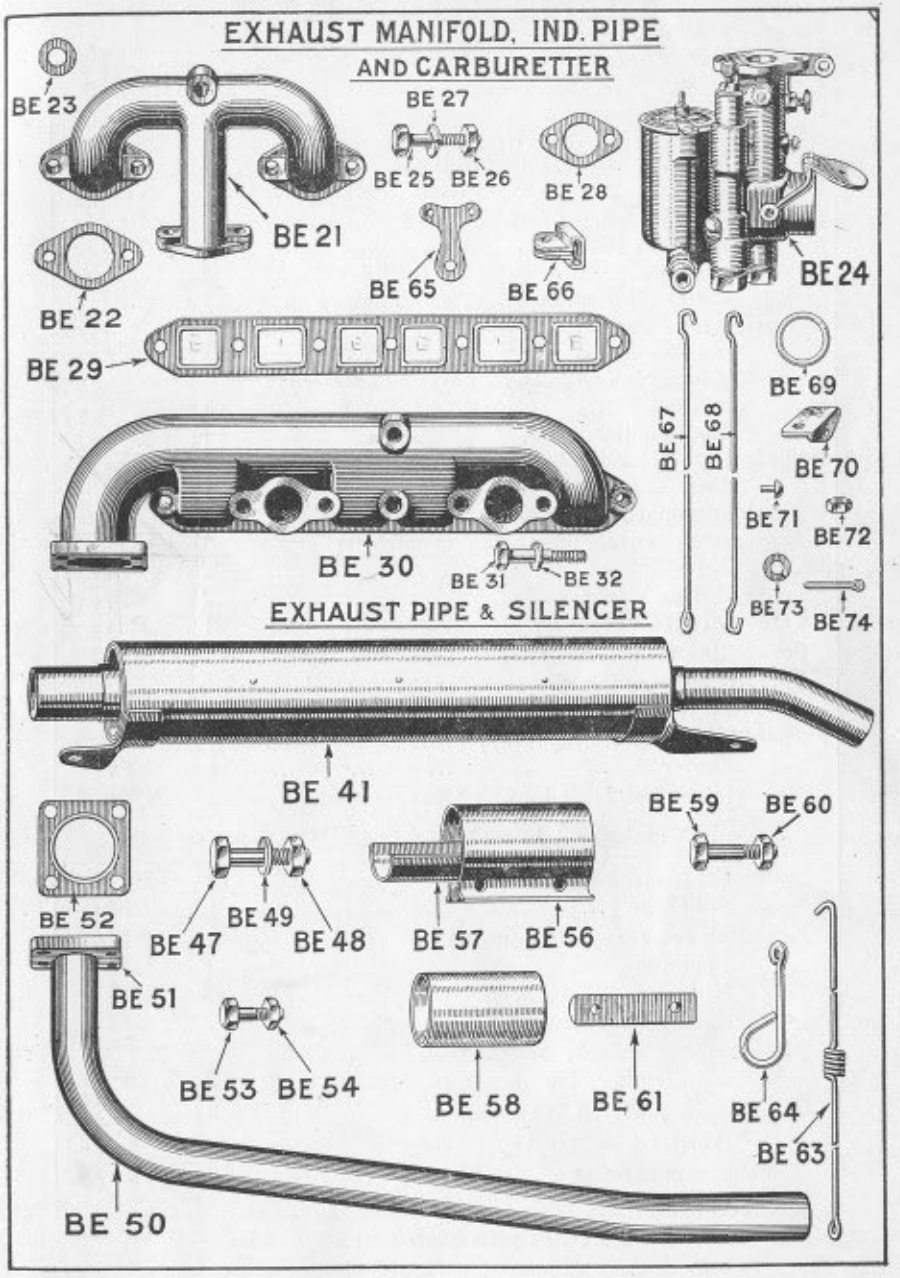


CONTROL GEAR

DESCRIPTION	Number per Car	Reference Number
Accelerator pedal	1	**BF1**
Bolt for accelerator pedal	1	**BF34**
Nut	1	**BF35**
Set-pin for accelerator pedal	1	**BF2**
Spring washer	1	**BF3**
Spring, for cars with electric starter ...	1	**BF26**
Spring, for cars without electric starter ...	1	**BF4**
Accelerator control spindle, for cars with electric starter	1	**BF30**
Accelerator control spindle, for cars without electric starter	1	**BF5**
Loose collar	1	**BF6**
Control spindle collar	1	**BF7**
Peg	1	**BF8**
Bearings, for cars with electric starter... ...	2	**BF28**
Bearings, for cars without electric starter ...	2	**BF9**
Nuts	2	**BF10**
Spring washers	2	**BF11**
Carburetter control lever	1	**BF12**
Connecting link	1	**BF13**
Throttle lever connecting link, for cars with electric starter	1	**BF31**
Throttle lever connecting link, for cars without electric starter	1	**BF14**
Magneto control lever for B.L.I.C. magneto ...	1	**BF29**
Magneto control lever for M-L. and Scintilla magnetos	1	**BF15**
Connecting link	1	**BF16**
Split-pins	6	**BF17**
Adjusting rod (magneto control)	1	**BF18**
Locknut	1	**BF19**
Nuts	2	**BF21**
Spring washers	2	**BF22**
Ball coupling socket, with screw, ball pin and split pin	1 per set	**BF23**
Ball coupling socket (magneto)	1	**BF27**
Nut for ball pin	1	**BF32**
Spring washer	1	**BF33**

When ordering parts quote your car number.

Items shown in italics are not used on current models.

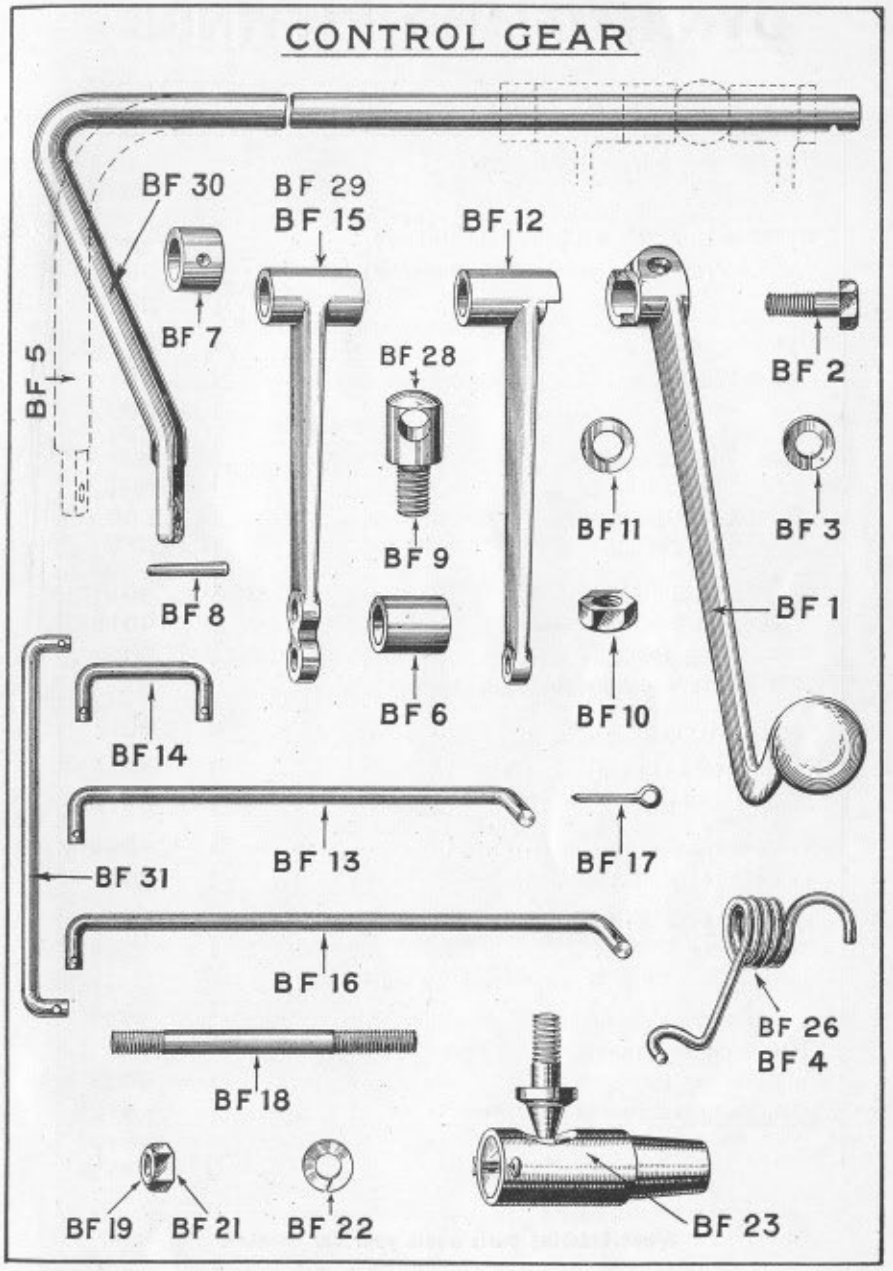


DYNAMO AND FITTINGS

DESCRIPTION	Number per Car	Reference Number
Dynamo (for cars with electric starter) ...	1	**BG29**
Dynamo (for cars without electric starter) ...	1	**BG1**
Gear	1	**BG2**
Dynamo casing	1	**BG3**
Washer	1	**BG4**
Stud	1	**BG5**
Nut	1	**BG6**
Spring washer	1	**BG7**
Locating screw	1	**BG8**
Bennett oiler	1	**BG9**
Clamping bolt	1	**BG10**
Nut	1	**BG11**
Spring washer	1	**BG12**
Housing (including felt and inner housing)	1	**BG14**
Rivets	2	**BG16**
Switchboard (**Lucas**)	1	**BG82**
Switchboard (C.A.V.)	1	**BG17**
Cut-out (**Lucas**)	1	**BG81**
Cut-out (C. A. V.)	1	**BG18**
Battery, type 6T.W.9. For cars with electric starter	1	**BG80**
Battery, type 6.X W.2. For cars with electric starter	1	**BG30**
Battery, type M.C.R.6. For cars without starter	1	**BG19**
Magneto switch	1	**BG22**
Oil indicator	1	**BG26**

When ordering parts quote your car number.

Items shown in italics are not used on current models.

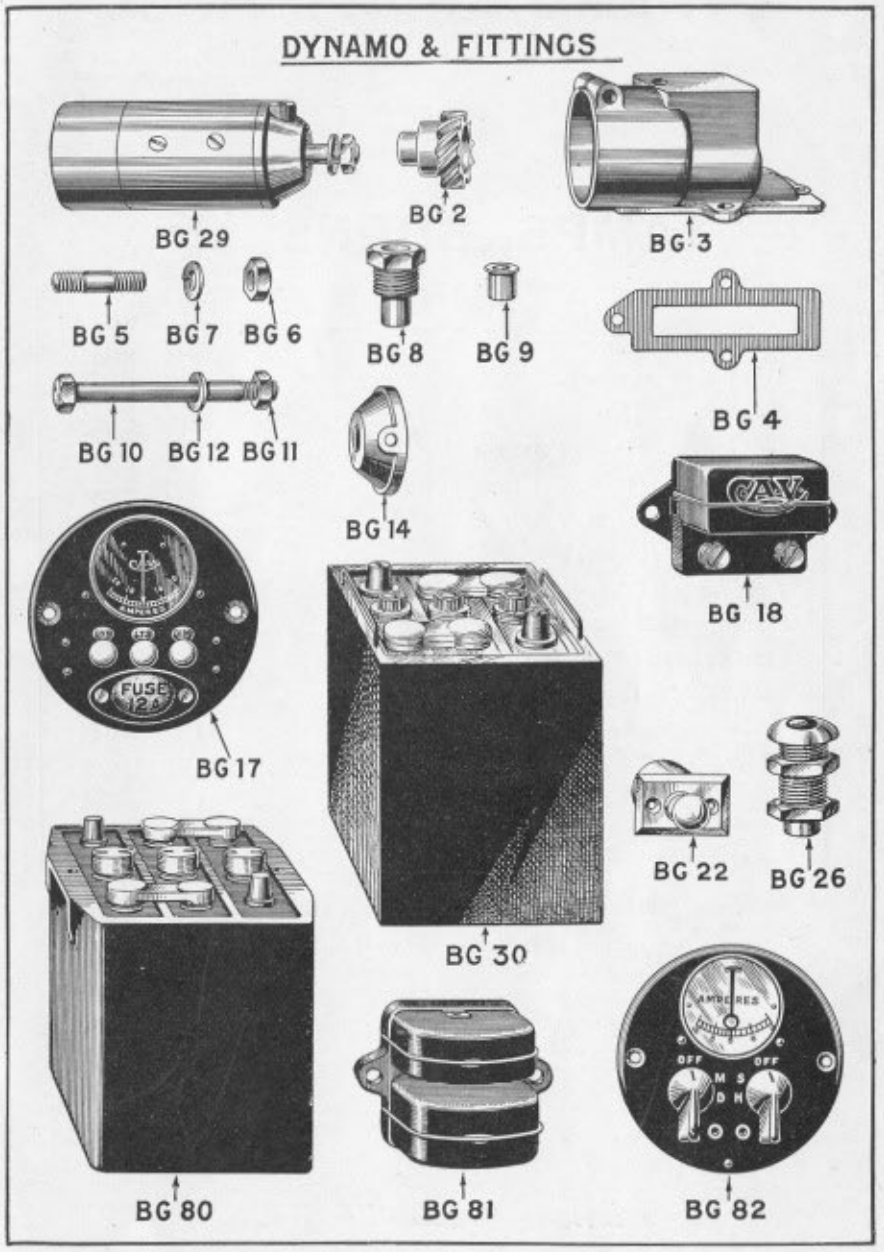


LAMPS, HORNS, etc.

DESCRIPTION	Number per Car	Reference Number
Side lamps (Lucas)	2	**BG86**
Side lamps (Howes and Burley)	2	**BG85**
Side lamps (C. A. V.), type A.P.	2	**BG32**
Side lamps (C. A. V.), type F.W.P.	2	**BG20**
Side lamps (C. A. V.), type A.C.P.	2	**BG31**
Rear lamp (Lucas)	1	**BG87**
Rear lamp (C. A. V.)	1	**BG33**
Starter switch (Lucas)	1	**BG88**
Electric horn (Rist)	1	**BG83**
„ „ (Sygnol)	1	**BG90**
Bracket	1	**BG84**
Electric horn (Benjamin)	1	**BG23**
Bracket	1	**BG24**
Button	1	**BG25**

When ordering parts quote your car number.

Items shown in italics are not used on current models.

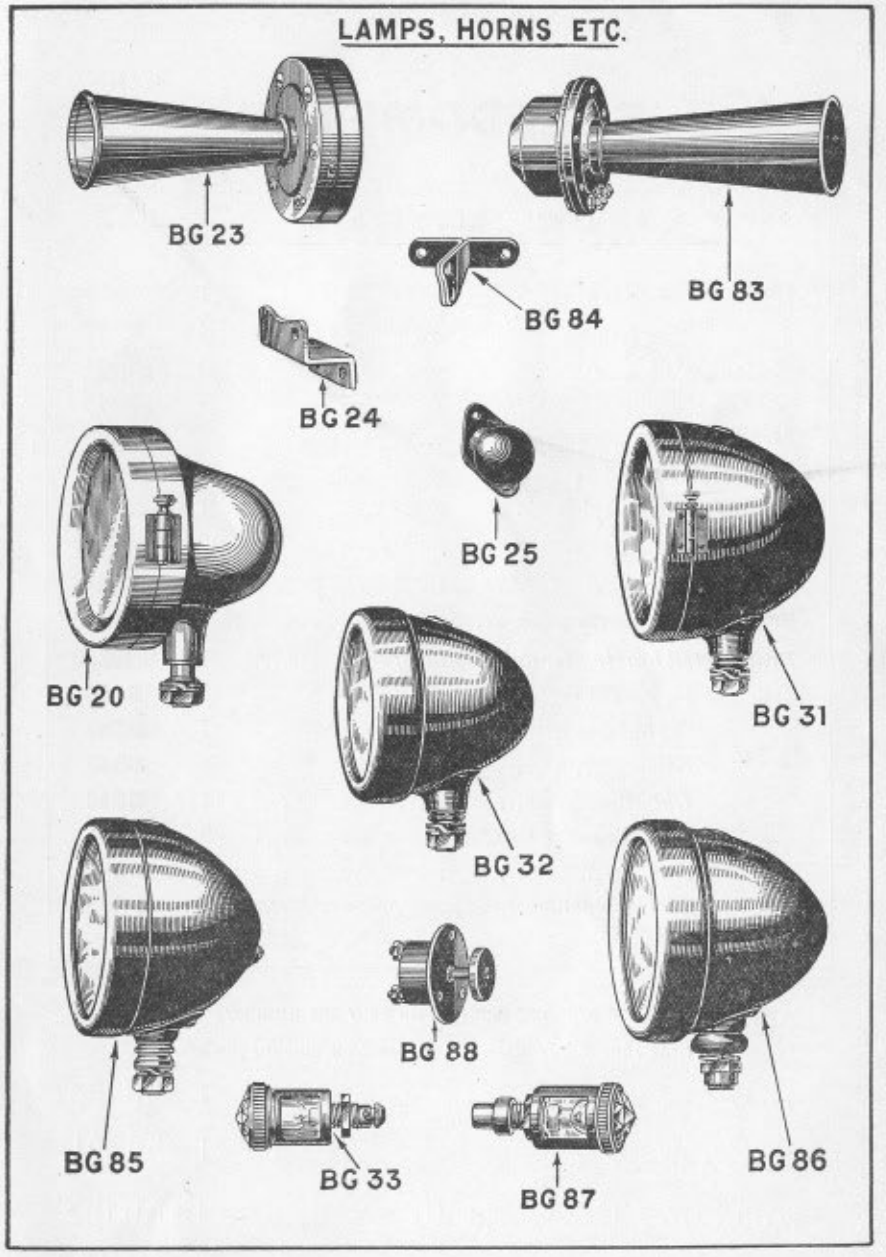


SPEEDOMETER

DESCRIPTION	Number per Car	Reference Number
Speedometer clock	1	**BG44**
Screw (clock to instrument board) ...	4	**BG36**
Nut	4	**BG37**
Spring washer	4	**BG38**
Flexible drive, complete	1	**BG45**
Driven pulley	1	**BG46**
Driving pulley (split)	1	**BG47**
Screws securing split pulley	2	**BG48**
Driving belt	1	**BG49**
Bracket and bearing for driven pulley ...	1	**BG79**
Bracket and bearing for driven pulley	1	**BG39**
Key washer	1	**BG50**
Spring washer	1	**BG51**
Nut	1	**BG52**
Clamping plate...	1	**BG40**
Bolt (bracket to frame)	3	**BG41**
Nut	3	**BG42**
Spring washer	3	**BG43**

When ordering parts quote your car number.

Items shown in italics are not used on current models.

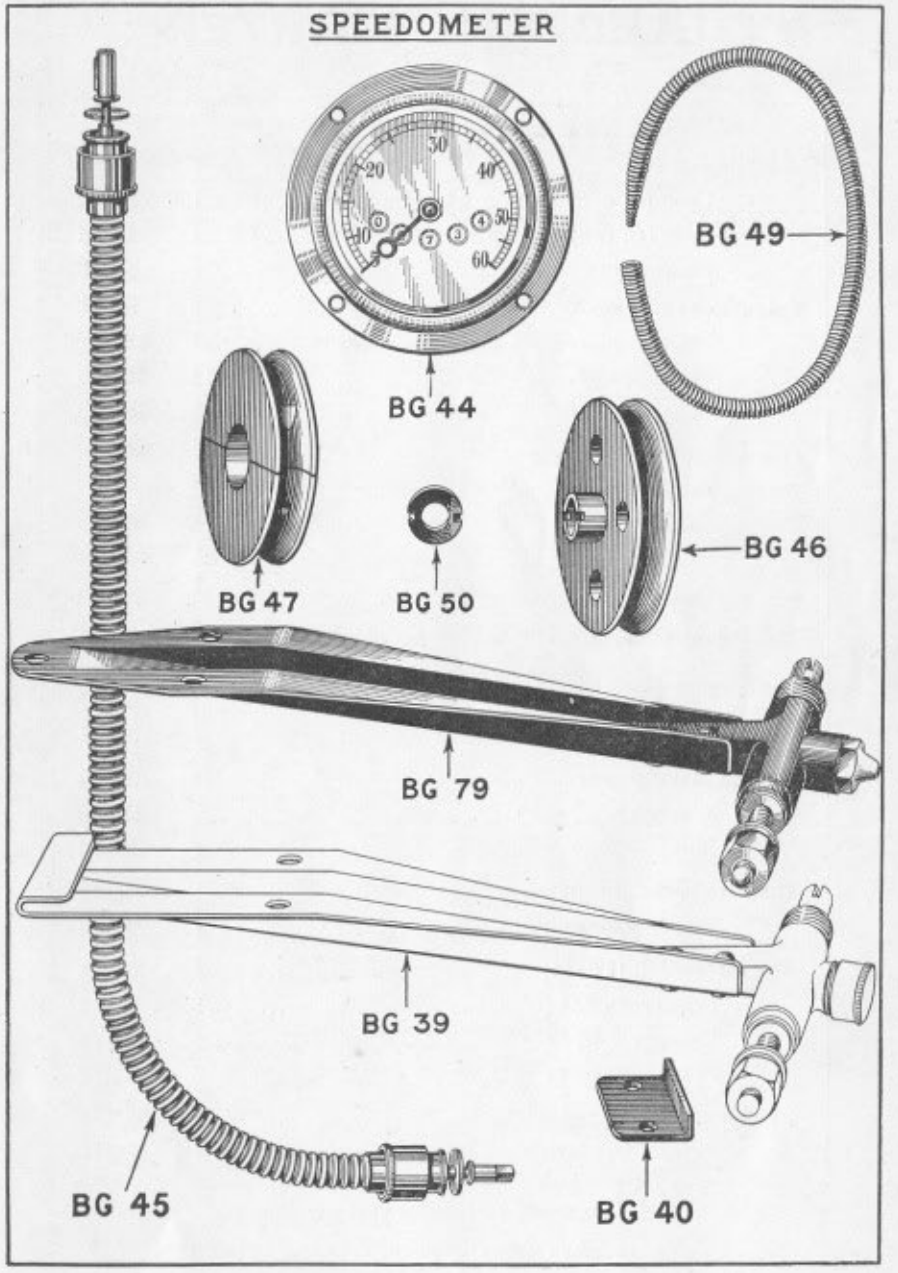


ELECTRIC STARTER

DESCRIPTION	Number per Car	Reference Number
Starting motor	1	**BG53**
Case (in conjunction with Lucas Switch)	1	**BG89**
Case (in conjunction with C.A.V. Switch)	1	**BG54**
Dowel pin	1	**BG55**
Set screw	1	**BG56**
Set-screw	1	**BG57**
Set-screw	1	**BG58**
Cover	1	**BG59**
Screws	5	**BG60**
Spring washer	5	**BG61**
Starter gear	1	**BG62**
Key	1	**BG78**
Nut	1	**BG63**
Bendix housing	1	**BG64**
Bush	2	**BG65**
Set-screw	3	**BG66**
Spring washer	3	**BG67**
Bendix driving gear	1	**BG68**
Washer	1	**BG69**
Key	1	**BG70**
Bendix drive with pinion	1	**BG71**
Washer for spindle	1	**BG72**
Starter switch (Lucas)	1	**BG88**
Starter Switch (C.A.V.)	1	**BG73**
Set-screw to case	2	**BG74**
Spring washers	2	**BG75**
Starter terminal cover	1	**BG76**
Screws to starter	1	**BG77**

When ordering parts quote your car number.

Items shown in italics are not used on current models.

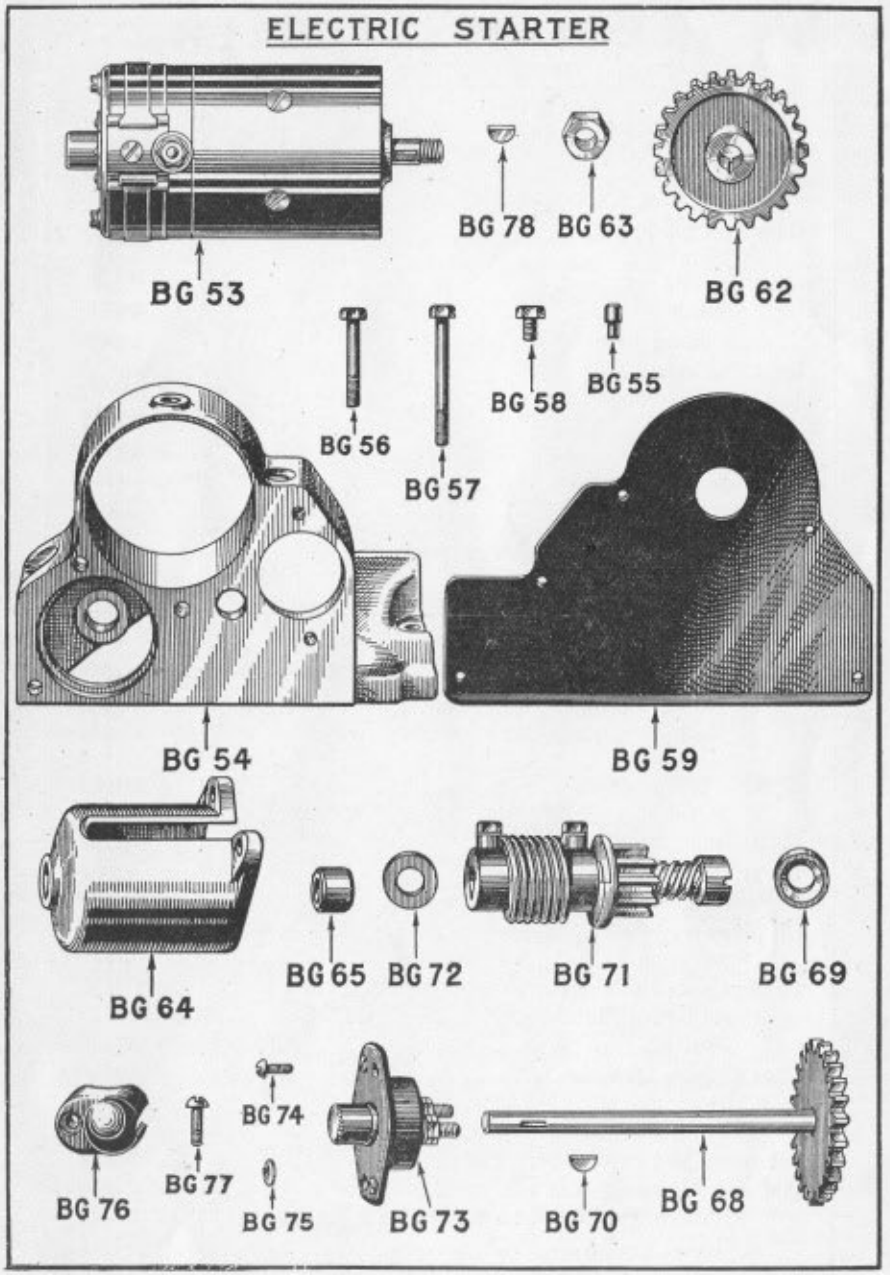


GEAR BOX

DESCRIPTION	Number per Car	Reference Number
Gear box	1	**BH1**
Front cover	1	**BH2**
Washer	1	**BH3**
Screws	6	**BH4**
Packing washer	1	**BH45**
Gear box top cover	1	**BH5**
Joint washer	1	**BH6**
Studs	4	**BH7**
Nuts	4	**BH8**
Spring washers	4	**BH9**
Gear box rear cover	1	**BH10**
Joint washer	1	**BH11**
Studs	6	**BH12**
Nuts	6	**BH13**
Spring washers	6	**BH14**
Change-speed gate	1	**BH15**
Joint washer	1	**BH16**
Screws	3	**BH17**
Gear box inspection cover	1	**BH18**
Screws	2	**BH19**
Change-speed lever	1	**BH20**
Knob	1	**BH21**
Reverse trigger	1	**BH22**
Rod	1	**BH23**
Bracket	1	**BH24**
Spring	1	**BH25**
Catch	1	**BH26**
Peg	1	**BH27**
Cover for drain hole	1	**BH28**
Washer	1	**BH29**
Oil plugs	2	**BH30**
Washer	2	**BH31**
Change-speed selector arm	1	**BH32**
Fulcrum plates	2	**BH33**
Screws	4	**BH34**
Gear change fork	2	**BH35**
Spring	2	**BH36**
Ball...	2	**BH37**
1st speed and reverse fork rod	1	**BH38**
2nd and 3rd speed fork rod	1	**BH39**
Packing shims	4	**BH40**
Ditto	1	**BH41**

When ordering parts quote your car number.


Items shown in italics are not used on current models.

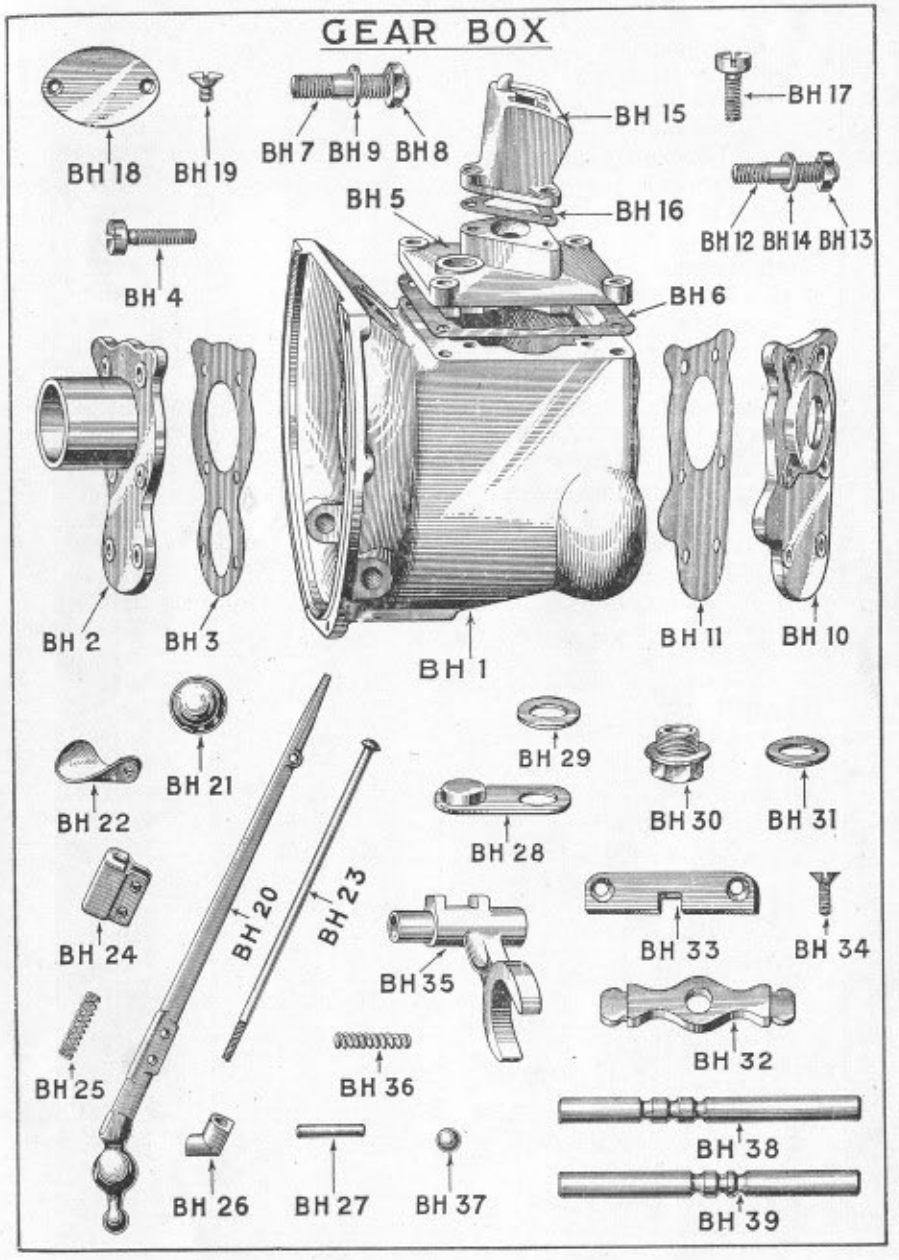

GEAR BOX, Contd.

DESCRIPTION	Number per Car	Reference Number
Bearings, journal		
For 1st motion shaft $1\frac{1}{4}$in. × $2\frac{3}{4}$in. × $\frac{11}{16}$in.	1	**BH42**
For 3rd motion shaft 1in. × $2\frac{1}{2}$in. × $\frac{3}{4}$in.	1	**BH43**
For lay shaft 2in. × $\frac{3}{4}$in. × $\frac{11}{16}$in. ...	2	**BH44**
***1st motion shaft, including BH 60**	1	**BH51**
Grub screw	1	**BH50**
Oil thrower	1	**BH52**
Ring	1	**BH53**
Distance piece	1	**BH54**
Roller race (outer ring only)	1	**BH55**
Rollers	17	**BH56**
Washer	1	**BH57**
Felt ring	1	**BH58**
3rd motion shaft, for use with BP28	1	**BH86**
*Ditto, with ball joint, for use with BP*1 *or* 30 ...	1	**BH59**
Bush	1	**BH60**
***Sliding 2nd speed wheel**	1	**BH61**
* Sliding wheel	1	**BH62**
Ring	1	**BH63**
Bearing washer	1	**BH64**
Packing shims	3 or as required	**BH65**
Felt ring	1	**BH66**
Plate	1	**BH67**
Front universal joint cover	1	**BH68**
Layshaft	1	**BH69**
* Constant mesh wheel	1	**BH70**
* 2nd speed wheel	1	**BH71**
***1st speed wheel**	1	**BH72**
Key (long)	1	**BH73**
Key (short)	1	**BH74**
Packing shims	4 or as required	**BH75**
Packing shims	1 or as required	**BH76**
Distance piece	1	**BH77**
***Reverse wheel**	1	**BH78**
Spindle	1	**BH79**
Bush (short)	1	**BH80**
Bush (long)	1	**BH81**
Clutch withdrawal lever, near	1	**BH82**
Ditto, off	1	**BH83**
Pedal spindle	1	**BH84**
Taper pin	2	**BH85**
Packing washer	4	**BH87**
Packing washer	2	**BH88**

When ordering parts quote your car number.
Items shown in italics are not used on current models
*Must be supplied in pairs to guarantee correct meshing.

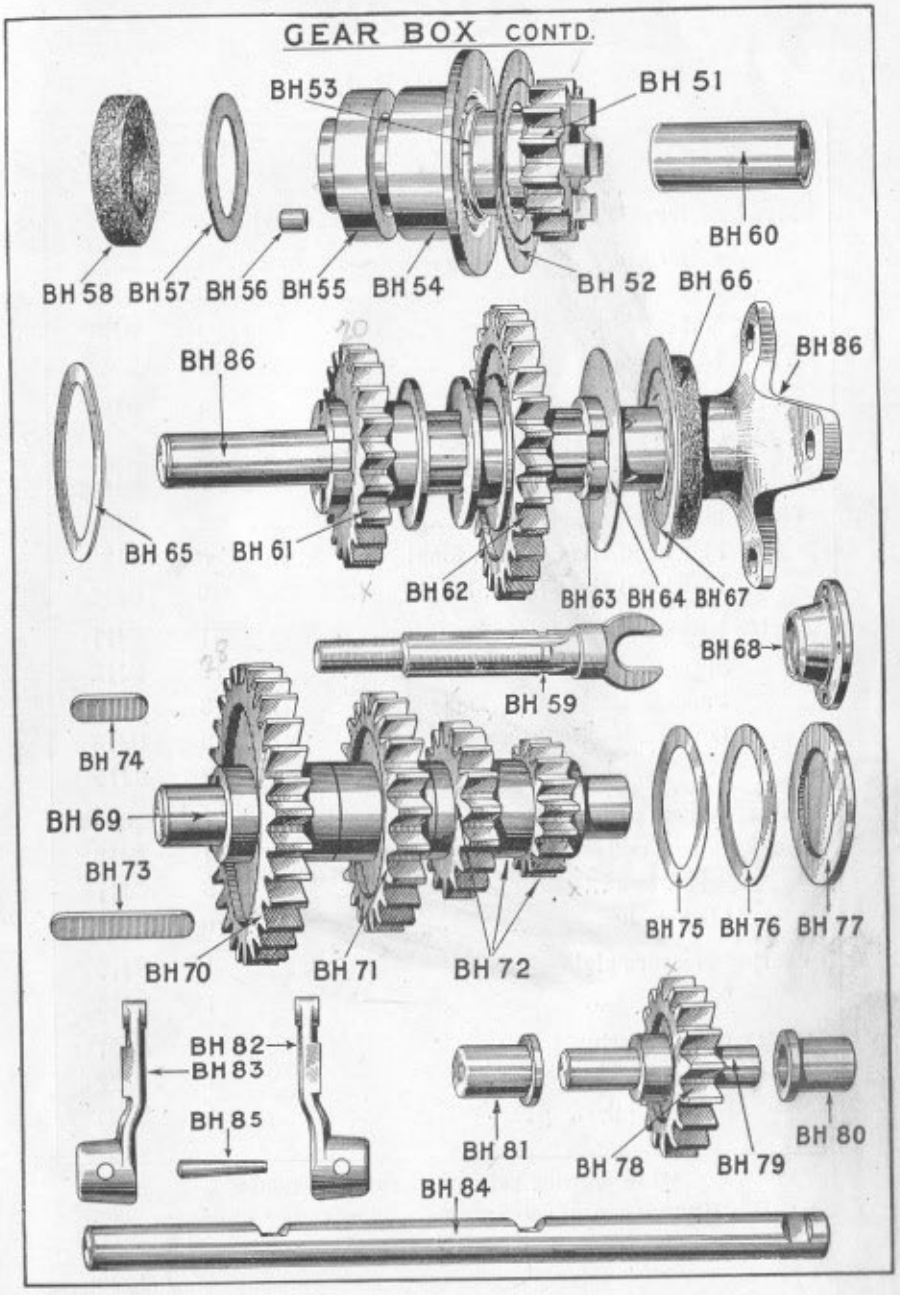


CLUTCH

Section B J.

DESCRIPTION	Number per Car	Reference Number
Flywheel, for cars with electric or mechanical starter	1	**BJ25**
Flywheel, for cars without starter	1	**BJ1**
Key	1	**BJ2**
Nut	1	**BJ3**
Lockwasher	1	**BJ4**
Clutch disc	1	**BJ5**
Centre	1	**BJ6**
Rivets	6	**BJ7**
Clutch plates	2	**BJ8**
Flat head rivets ($\frac{5}{16}$in. long)	6	**BJ9**
Flat head rivet ($\frac{9}{16}$in. long)	6	**BJ10**
Clutch withdrawal plate	1	**BJ11**
Springs	12	**BJ12**
Pins	3	**BJ13**
Lever	3	**BJ14**
Pegs	3	**BJ15**
Cover, for cars with starters	1	**BJ24**
Cover, for cars without starters	1	**BJ16**
Set-screws	6	**BJ17**
Lockwasher	6	**BJ18**
Bearing pressure plate	1	**BJ19**
Washer	1	**BJ20**
Clutch thrust bearing	1	**BJ21**
Housing	1	**BJ22**
Bennett oiler	1	**BJ23**

When ordering parts quote your car number.

Items shown in italics are not used on current models.

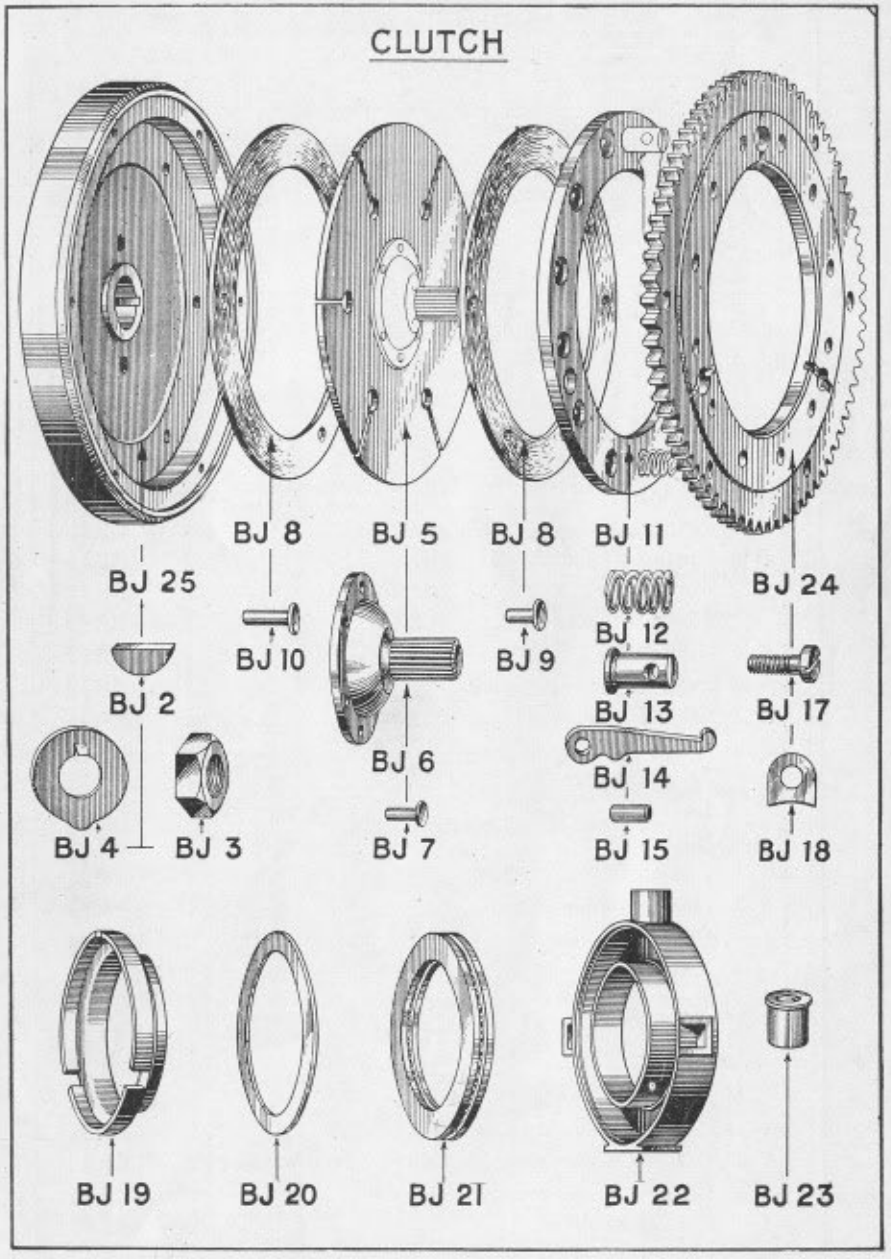


HAND BRAKE

DESCRIPTION	Number per Car	Reference Number
Lever	1	**BK1**
Handle	1	**BK2**
Trigger	1	**BK3**
Snap-head rivet	1	**BK4**
Rod	1	**BK5**
Catch	1	**BK6**
Spring	1	**BK7**
Guide	1	**BK8**
Rivets (catch guide to lever)	2	**BK9**
Bracket	1	**BK10**
Bolts	2	**BK11**
Nuts	2	**BK12**
Spring washers	2	**BK13**
Pivots	2	**BK14**
Nuts	2	**BK15**
Spring washers	2	**BK16**
Joint pins	2	**BK17**
Plain washers	2	**BK18**
Split-pins	2	**BK19**
Front brake adjusting pulley	1	**BK20**
Adjusting screw boss	1	**BK21**
Snap-head rivets	3	**BK22**
Adjusting screw	1	**BK23**
Locknut	1	**BK24**
Ratchets	2	**BK25**
Pivot	1	**BK26**
Distance piece	1	**BK27**
Bolts	2	**BK28**
Nuts	2	**BK29**
Spring washers	2	**BK30**
Brake rope, including BK32 to 37	1	**BK31**
Spikes	2	**BK32**
Ends	2	**BK33**
Cam lever sockets	2	**BK34**
Bolts	2	**BK35**
Nuts	2	**BK36**
Spring washers	2	**BK37**

When ordering parts quote your car number.

Items shown in italics are not used on current models.

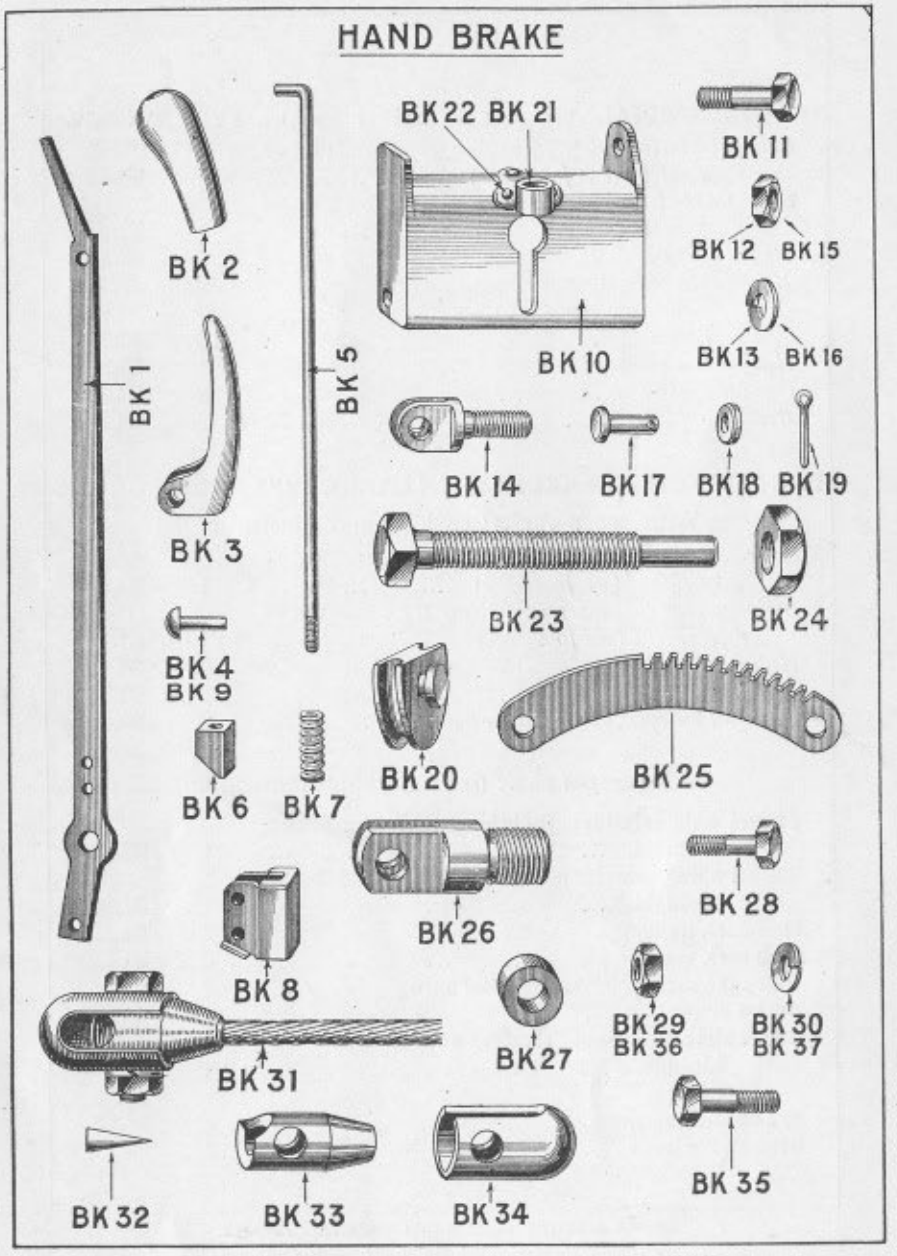


FRONT AXLE

DESCRIPTION	Number per Car	Reference Number
PARTS SPECIAL TO AXLES WITH SMALL TYPE DRUMS.		
Swivel axle (offside), including BL7 and 8 and dust shield (see foot note)	1	**BL42**
Swivel axle (nearside), including BL7 and 8 and dust shield (see foot note)	1	**BL43**
Brake drum	2	**BL25**
Brake shoe with linings rivetted on	2 prs.	**BL26**
Linings	4	**BL27**
Rivets	16	**BL28**
Brake shoe spring	4	**BL38**
Peg for spring	8	**BL39**
Brake cam lever	2	**BL34**
PARTS SPECIAL TO AXLES WITH LARGE TYPE BRAKE DRUMS		
With taper shaft (see left-hand illustration).		
Swivel axle (offside), including BL7 and 8 and dust shield (see foot note)	1	**BL65**
Swivel axle (nearside), including BL7 and 8 and dust shield (see foot note)	1	**BL66**
Hub felt housing	2	**BL16**
Hub felt washer	2	**BL18**
Journal bearing, inner (taper bore)	2	**BL40**
With parallel shaft (see right-hand illustration):		
Swivel axle (offside), including BL7 and 8 and dust shield	1	**BL59**
Swivel axle (nearside), including BL 7 and 8 and dust shield	1	**BL60**
Hub cork housing	2	**BL61**
Hub cork washer	2	**BL62**
Journal bearing, inner (parallel bore)	2	**BL63**
Brake drum	2	**BL53**
Brake shoe with lining rivetted on	2 prs.	**BL54**
Linings	4	**BL55**
Rivets	16	**BL56**
Brake shoe spring	4	**BL58**
Brake cam lever	2	**BL57**

When ordering parts quote your car number.

Items shown in italics are not used on current models.

NOTE.—These items are always replaced by parallel type of shaft, together with BL61, 62, 63.

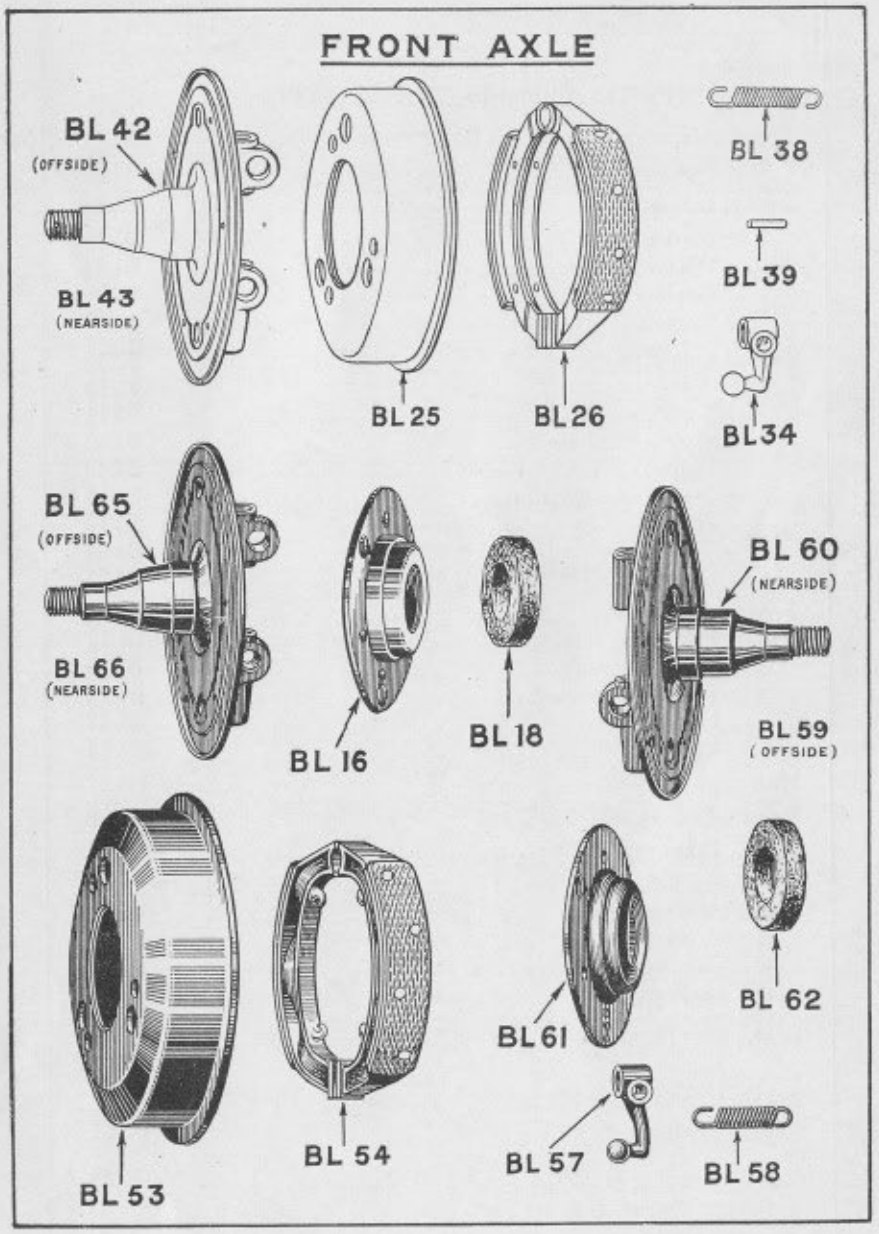


FRONT AXLE, contd.

DESCRIPTION	Number per Car	Reference Number
PARTS COMMON TO ALL TYPES.		
Front axle, including bushes BL52	1	**BL1**
Bushes	2	**BL52**
Swivel axle nuts	2	**BL4**
Split pins	2	**BL5**
Washers	2	**BL6**
Bushes (top)	2	**BL7**
Bushes (bottom)	2	**BL8**
Swivel axle pins	2	**BL9**
Cotters	2	**BL10**
Nuts for cotters	2	**BL11**
Spring washers	2	**BL12**
Plugs	2	**BL48**
Axle pin cover	2	**BL13**
Bennet oilers	2	**BL14**
Grease nipples (screw-on type)	2	**BL44**
Grease nipples (autoram type)	2	**BL51**
Front wheel hub	2	**BL15**
Plates for felt or cork	2	**BL17**
Clamping screws	6	**BL19**
Distance pieces	2	**BL20**
Plugs	2	**BL45**
Paper washers	2	**BL46**
Hub caps	2	**BL21**
Road wheel dowels	6	**BL22**
Bolts	6	**BL23**
Rivets	6	**BL24**
Brake shoe pivot pins	2	**BL29**
Nuts	2	**BL30**
Lockwashers	2	**BL47**
Brake cam (offside)	1	**BL31**
Brake cam (nearside)	1	**BL32**
Bushes	2	**BL33**
Cotters for cam levers	2	**BL35**
Nuts	2	**BL36**
Spring washers	2	**BL37**
Journal bearing (small)	2	**BL41**

When ordering parts quote your car number.

Items shown in italics are not used on current models.

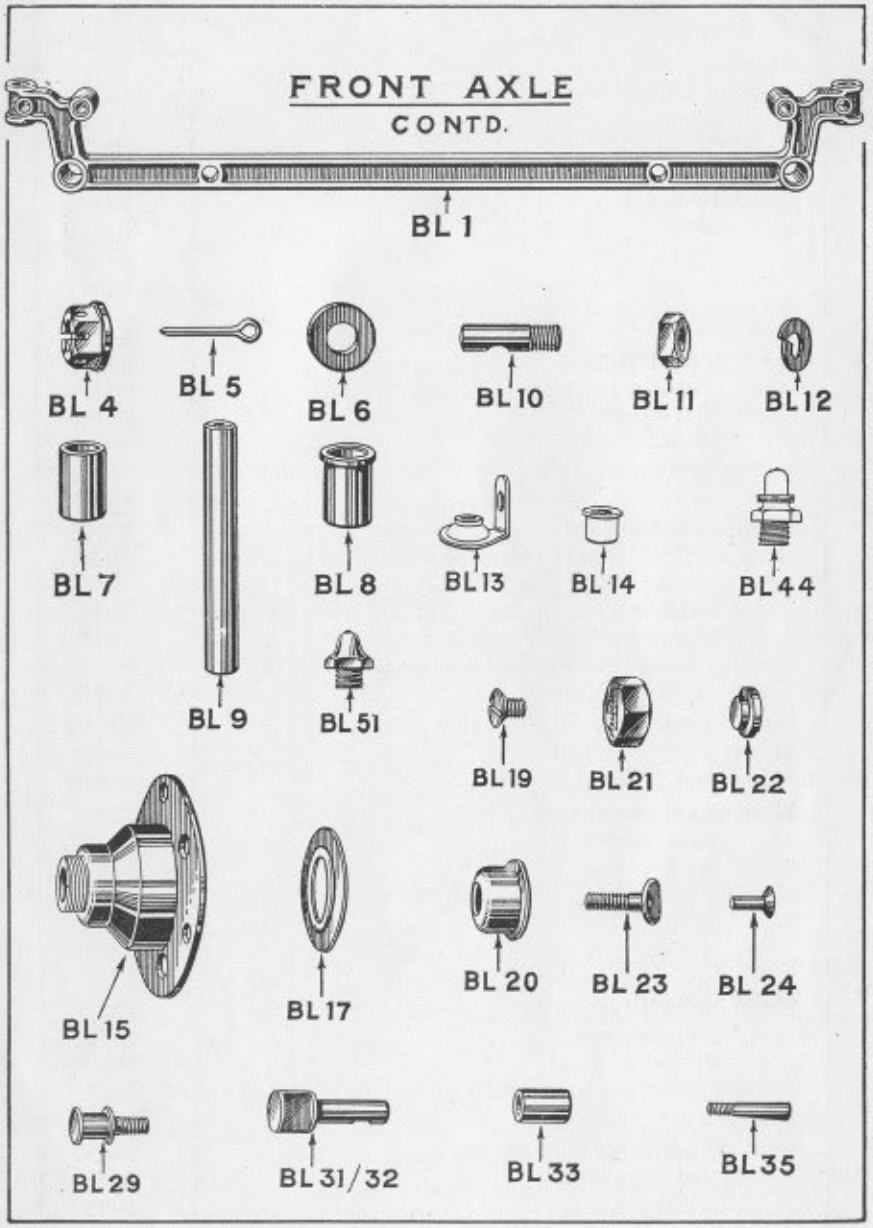


STEERING

DESCRIPTION	Number per Car	Reference Number
Steering wheel	1	**BM1**
Steering wheel (deep pattern)	1	**BM2**
Bolt	1	**BM3**
Nut	1	**BM4**
Spring washer	1	**BM5**
Control bracket	1	**BM6**
Bolt	1	**BM7**
Nut	1	**BM8**
Spring washer	1	**BM9**
Carburetter control lever (horn switch on steering)	1	**BM72**
Carburetter control lever (horn switch on dash)	1	**BM10**
Ignition control lever	1	**BM11**
Friction blocks	2	**BM12**
Screws	2	**BM13**
Springs	2	**BM14**
Carburetter control tube (horn switch on steering)	1	**BM73**
Carburetter control tube (horn switch on dash) ...	1	**BM15**
Ignition control tube	1	**BM16**
Horn switch button (on steering wheel) ...	1	**BM74**
Spring	1	**BM75**
Cable with upper terminal and bush ...	1	**BM76**
Insulating bush (lower)	1	**BM77**
Steering outer column, assembled with BM18, 21 and 22	1	**BM17**
Steering column bush (top)	1	**BM18**
Steering inner column	1	**BM19**
Peg	1	**BM20**
Steering column socket	1	**BM21**
Bush bottom	1	**BM22**
Set screw	1	**BM23**
Steering box	1	**BM24**
Bolts	2	**BM25**
Nuts	2	**BM26**
Spring washers	2	**BM27**
Clamping bolt for socket	1	**BM28**
Nut	1	**BM29**
Spring washer	1	**BM30**
Worm, assembled with BM19, 20 and 42 ...	1	**BM31**
Wheel	1	**BM32**
Stud for adjusting steering box cover	1	**BM33**
Nut for adj. stud	1	**BM34**
Lockwasher	1	**BM37**

When ordering parts quote your car number.

Items shown in italics are not used on current models.

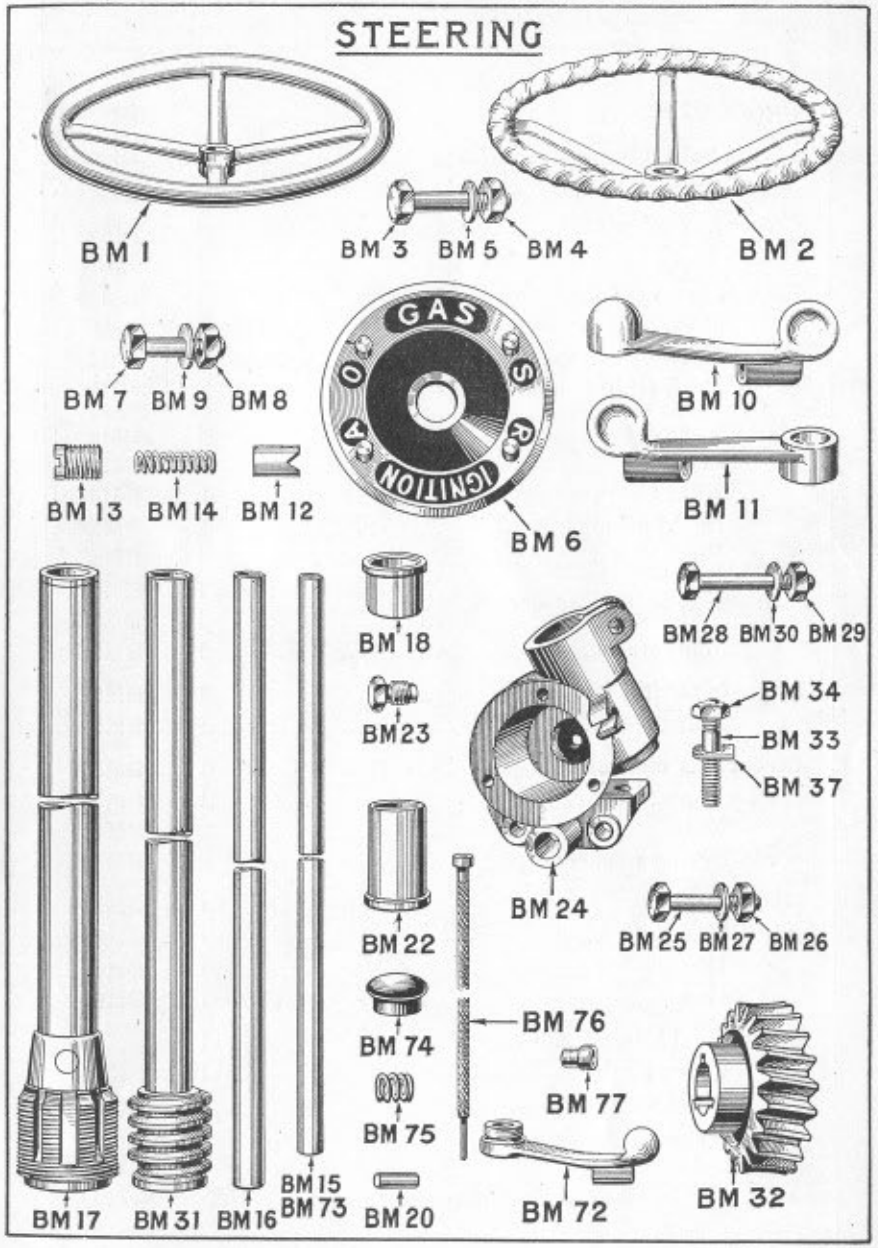


STEERING, contd.

DESCRIPTION		Number per Car		Reference Number
Worm thrust washer		1		**BM41**
Ditto		1		**BM42**
Thrust button for worm wheel		1		**BM43**
Packing shims		3		**BM44**
Grease gun nipple		1		**BM45**
Grease gun nipple (conical type)		1	*	**BX1**
Control bracket tube		1		**BM46**
Socket		1		**BM47**
Nut		1		**BM48**
Bush (thin copper)		1		**BM40**
Steering box cover, including BM53		1		**BM49**
Studs		3		**BM50**
Nuts		3		**BM51**
Lockwashers		2		**BM52**
Bush		1		**BM53**
Felt		1		**BM54**
Felt housing		1		**BM55**
Joint washer		1		**BM56**
Magneto control lever		1		**BM57**
Bolt		1		**BM58**
Carburetter control lever		1		**BM59**
Bolt		1		**BM60**
Nuts		2		**BM61**
Spring washers		2		**BM62**
Steering lever		1		**BM63**
Nut		1		**BM64**
Lockwasher		1		**BM65**
Key		1		**BM66**
Brake pedal fulcrum pin		1		**BM67**
Taper washer		1		**BM68**
Locating plate		1		**BM69**
Nut		1		**BM70**
Split-pin		1		**BM71**

* For illustration see page 69.

When ordering parts quote your car number.

Items shown in italics are not used on current models.

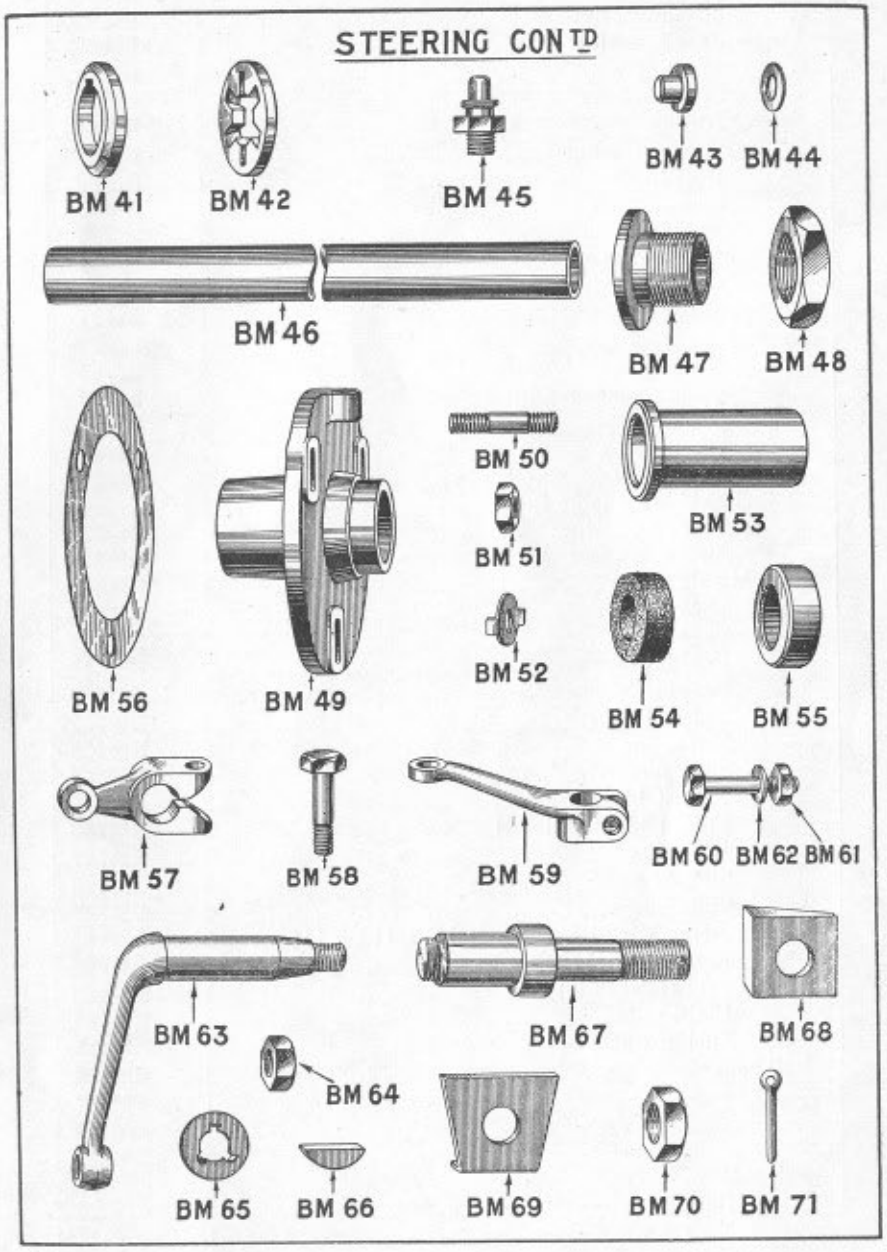


STEERING TUBES

DESCRIPTION		Number per Car	Reference Number
Steering cross tube		1	**BM81**
Jaw (nearside)		1	**BM82**
Jaw (offside)		1	**BM83**
Pins		2	**BM84**
Cotters		2	**BM85**
Nuts		2	**BM86**
Spring washer		2	**BM87**
Bolt for jaw (near side)		1	**BM88**
Nut		1	**BM89**
Spring washer		1	**BM90**
Grease gun nipple (screw-on type)		1	**BM80**
Grease gun nipple (push-on type)	*	1	**BX1**
Cross tube lever (offside)		1	**BM91**
Cross tube lever (near side)		1	**BM92**
Nuts, ½in.		2	**BM93**
Spring washers, ½in.		2	**BM94**
Bushes		2	**BM95**
Grease gun nipple (screw-on type)		2	**BM80**
Grease gun nipple (push-on type)	*	2	**BX1**
Swivel axle lever (side tube)		1	**BM96**
Plain nut, ½in.		1	**BM97**
Spring washer, ½in.		1	**BM98**
Steering side tube		1	**BM99**
Springs		2	**BM100**
Caps		2	**BM101**
Packing washer		2	**BM124**
Packing washer		as required	**BM125**
Bolts, ¼in.		2	**BM102**
Nuts, ¼in.		2	**BM103**
Split-pins		2	**BM104**
Thrust blocks (loose)		2	**BM105**
Thrust blocks (fixed)		2	**BM106**
Ball-pins		2	**BM107**
Slotted nuts, $\frac{5}{16}$in.		2	**BM108**
Split-pins		2	**BM109**
Radius Arms, with BM112 or BM113, 114 & 115		2	**BM110**
End (offside)		1	**BM112**
End (near side)		1	**BM113**
Plain nuts		2	**BM114**
Spring washers		2	**BM115**
Ball sockets		2	**BM116**
Ball pin		1	**BM117**
Nut		1	**BM118**
Lockwasher		1	**BM119**
Ball flange		1	**BM123**
Bolt		1	**BM120**
Nut		1	**BM121**
Split-pin		1	**BM122**

* For illustration see page 69.

When ordering parts quote your car number.

Items shown in italics are not used on current models.

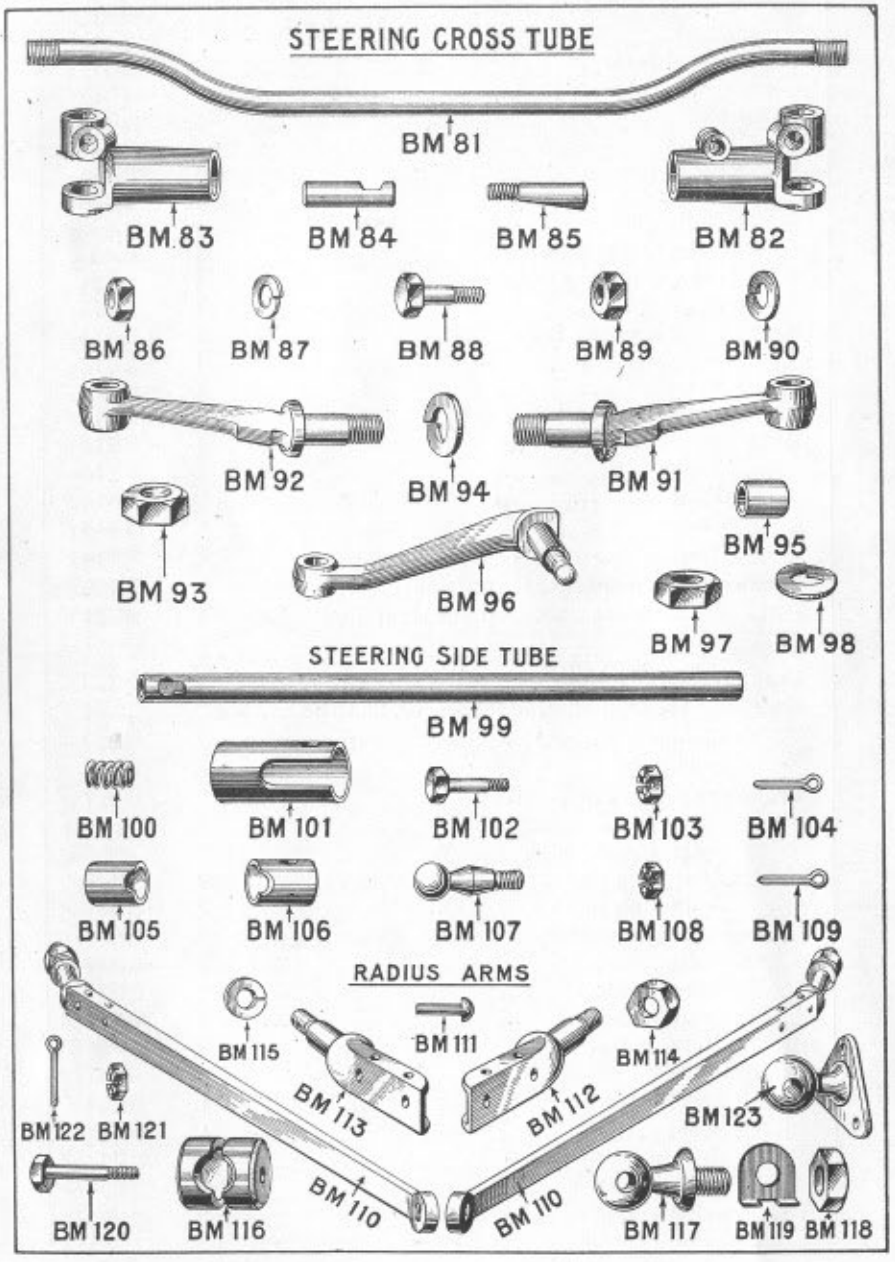


FOOT CONTROLS

DESCRIPTION	Number per Car	Reference Number
Brake pedal lever	1	**BN1**
Nut (fulcrum pin)	1	**BN2**
Pedal pads	2	**BN3**
Nuts	2	**BN4**
Brake pedal jaw	1	**BN5**
Joint pin	1	**BN6**
Split-pin	1	**BN7**
Brake adjusting rod	1	**BN8**
Rear brake adjusting nut	1	**BN9**
Split-pin	1	**BN10**
Brake compensating tube	1	**BN11**
Spring	1	**BN12**
Peg	1	**BN13**
Brake compensating lever (off)	1	**BN14**
Ditto ditto (near)	1	**BN15**
Bolts	2	**BN16**
Plain nuts	2	**BN17**
Joint pins	2	**BN18**
Split-pins	2	**BN19**
Brake comp. tube bracket (offside)	1	**BN20**
Ditto ditto (near side)	1	**BN21**
Bushes	2	**BN22**
Brake lever swivel pin	1	**BN23**
Rear brake rope, including BN18, 19, 25 to 34	2	**BN24**
Guides	2	**BN25**
Locknuts	2	**BN26**
Brake rope ends	2	**BN27**
Spikes (front) small	2	**BN42**
Spikes (rear) large	2	**BN40**
Adjusting ends	2	**BN29**
Adjusting forks	2	**BN30**
Brake cam lever sockets	2	**BN31**
Bolts	2	**BN32**
Nuts	2	**BN33**
Spring washers	2	**BN34**
Joint pin	2	**BN18**
Split pin	2	**BN41**
Clutch pedal lever	1	**BN35**
Clutch pedal cotter	1	**BN36**
Nut	1	**BN37**
Spring washer	1	**BN38**
Clutch pedal spring	1	**BN39**

When ordering parts quote your car number.

Items shown in italics are not used on current models.

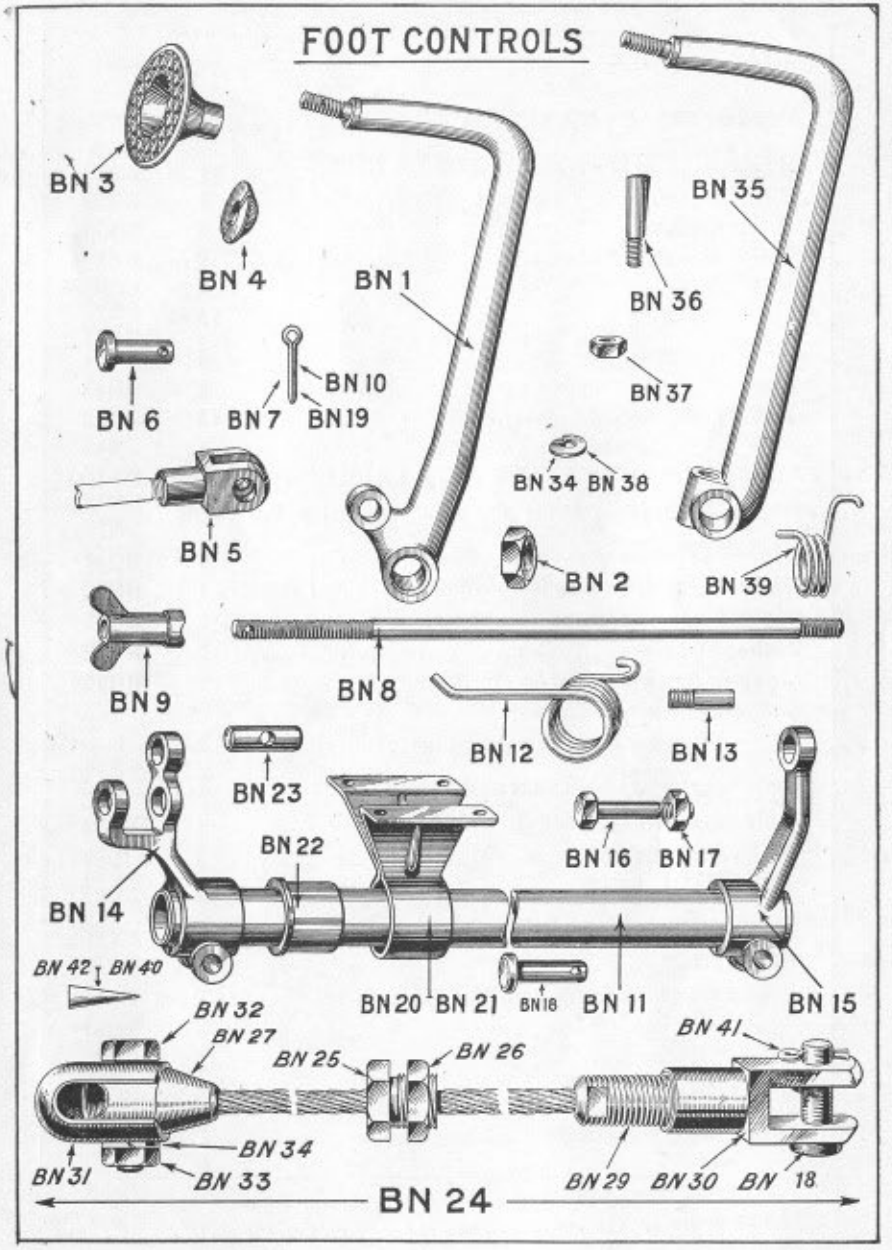


REAR AXLE

DESCRIPTION		Number per Car	Reference Number
PARTS SPECIAL TO AXLES WITH SMALL TYPE BRAKE DRUMS			
Axle case (near) with ends and bushes BO68	See foot note.	1	**BO38**
Axle case (off) with ends and bushes BO68	See foot note.	1	**BO39**
Brake drum		2	**BO56**
Brake shoe with linings rivetted on		2 prs.	**BO58**
Linings		4	**BO59**
Rivets		16	**BO60**
Brake shoe spring		4	**BO61**
Pegs		8	**BO62**
Brake cam lever		12	**BO69**
PARTS SPECIAL TO AXLES WITH LARGE TYPE BRAKE DRUMS			
With taper shaft (see illustration left-hand side).			
Axle case (near) with ends and bushes BO68	See foot note.	1	**BO91**
Axle case (off) with ends and bushes BO68	See foot note.	1	**BO90**
Hub felt housing		2	**BO49**
Hub felt washer		2	**BO48**
Journal bearing (taper bore)		2	**BO51**
With parallel shaft (see illustration right-hand side).			
Axle case (near) with ends and bushes BO 68		1	**BO86**
Axle case (off) with ends and bushes BO 68		1	**BO85**
Hub cork housing		2	**BO87**
Hub cork washer		2	**BO88**
Journal bearing (parallel bore)		2	**BO89**
Brake drum		2	**BO79**
Brake shoe with linings rivetted on		2 prs.	**BO80**
Linings		4	**BO81**
Rivets		16	**BO82**
Brake shoe spring		4	**BO83**
Brake cam lever		2	**BO84**

When ordering parts quote your car number.

Items shown in italics are not used on current models.

NOTE.—These items are in some cases replaced by parts with parallel journals, together with BO87, 88, 89.

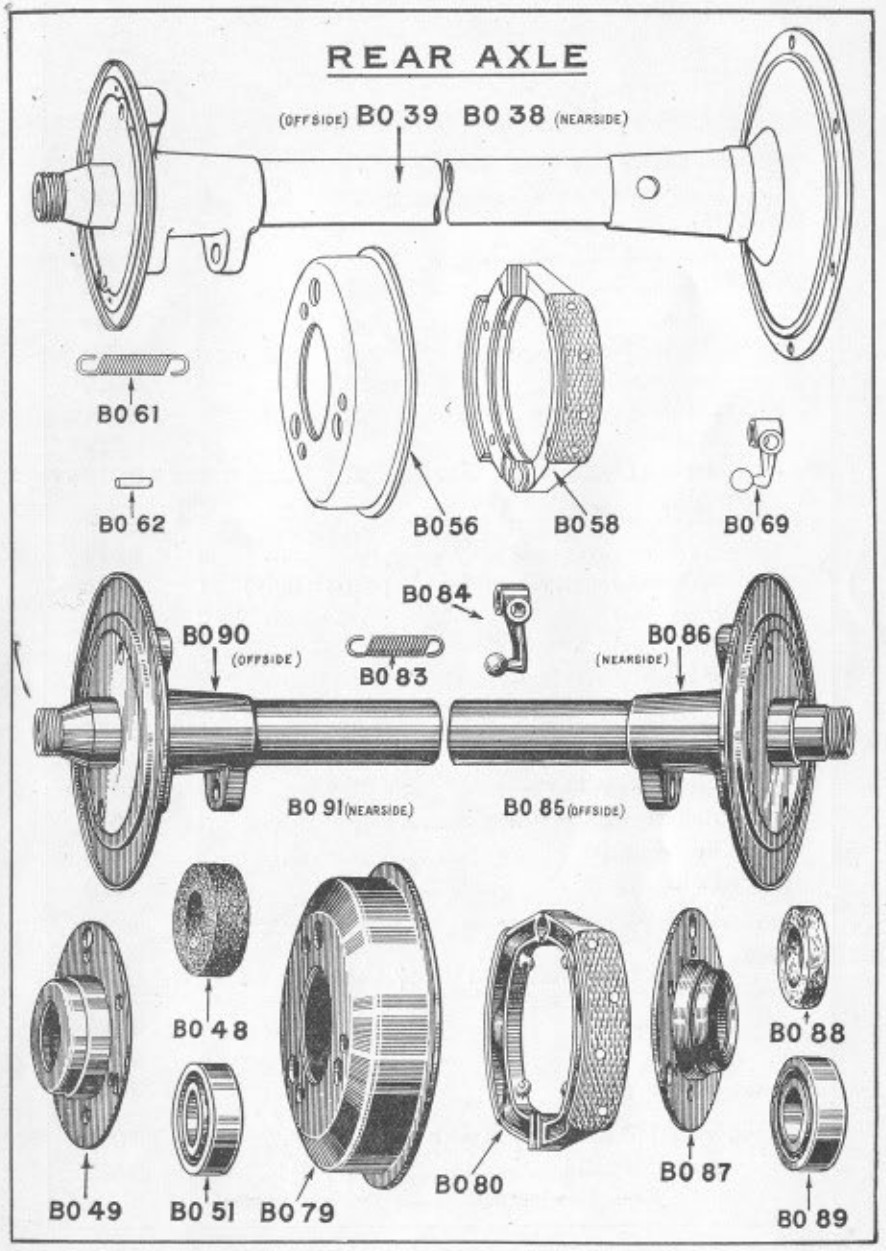


REAR AXLE, contd.

DESCRIPTION	Number per Car	Reference Number
PARTS COMMON TO ALL TYPES.		
Axle case centre with BO2, 5, 7 and 8	1	**BO1**
Joint Washers	2	**BO2**
Set screws for axle case (sides)	12	**BO5**
Nuts	12	**BO6**
Lockwashers	12	**BO7**
Set screws for torque tube	6	**BO8**
Nuts	6	**BO9**
Lockwashers	4	**BO10**
Oil plug	1	**BO11**
Washer	1	**BO12**
Air vent	1	**BO13**
Axle shaft	2	**BO18**
Axle nut	2	**BO19**
Axle nut (L.H. thread for old pattern only)	1	**BO20**
Split-pins	2	**BO21**
Keys	2	**BO22**
Bushes	2	**BO23**
Differential case, including BO23, 26 to 28 ...	1	**BO24**
Cover, including BO23	1	**BO25**
Studs, case to cover	3	**BO26**
Plain nuts	3	**BO27**
Lockwashers	3	**BO28**
Bolts	3	**BO29**
Plain nuts	3	**BO30**
Lockwashers	6	**BO31**
Thrust ball bearings, $1\frac{1}{4}$in. $\times \frac{2\frac{3}{32}}{3\frac{2}{32}} \times \frac{2\frac{3}{32}}{3\frac{2}{32}}$in.	2	**BO37**
Differential pinions	6	**BO32**
Spindles	6	**BO33**
Pegs	6	**BO34**
Crown wheel (supplied only with BP31) ...	1	**BO35**
Journals ball bearing, $1\frac{1}{4}$in. $\times 2\frac{3}{4}$in. $\times \frac{11}{16}$in.	2	**BO36**

When ordering parts quote your car number.

Items shown in italics are not used on current models.

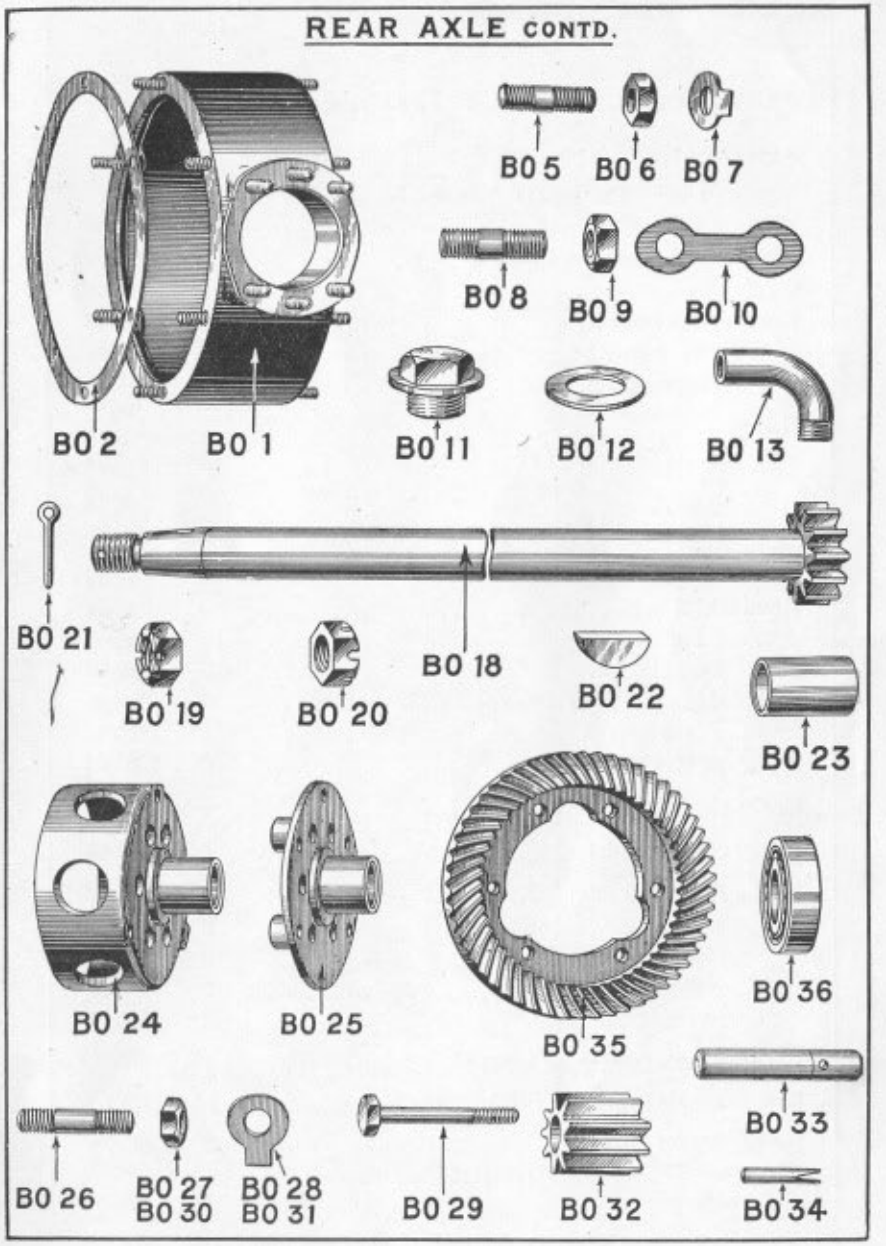


REAR AXLE, contd.

DESCRIPTION	Number per Car	Reference Number
PARTS COMMON TO ALL TYPES—contd.		
Axle shaft felt housing	2	**BO41**
Washer plates	2	**BO42**
Felts	2	**BO43**
Differential packing shims	4 or as required	**BO44**
Rear wheel hubs	2	**BO45**
Paper washer	2	**BO75**
Plugs	2	**BO78**
Hub cap	2	**BO46**
Plate for felt or cork	2	**BO47**
Clamping screws	6	**BO50**
Journal bearing nut	2	**BO52**
Lockwasher	2	**BO53**
Road wheel bolts	6	**BO54**
Rivets	12	**BO55**
Dowels	6	**BO57**
Brake shoe pivot pin (screwed)	2	**BO63**
Plain nuts	2	**BO64**
Spring washers	2	**BO65**
Brake shoe pivot pin (rivetted)	2	**BO77**
Brake cam (offside)	1	**BO66**
Brake cam (nearside)	1	**BO67**
Bushes	2	**BO68**
Cotters for levers	2	**BO70**
Nuts	2	**BO71**
Spring washers	2	**BO72**
Grease nipple (screw-on type)	1	**BO73**
Grease nipple (autoram type)	1*	**BX1**
Oil conductor	2	**BO74**

*For illustration see page 69.

When ordering parts quote your car number.

Items shown in italics are not used on current models.

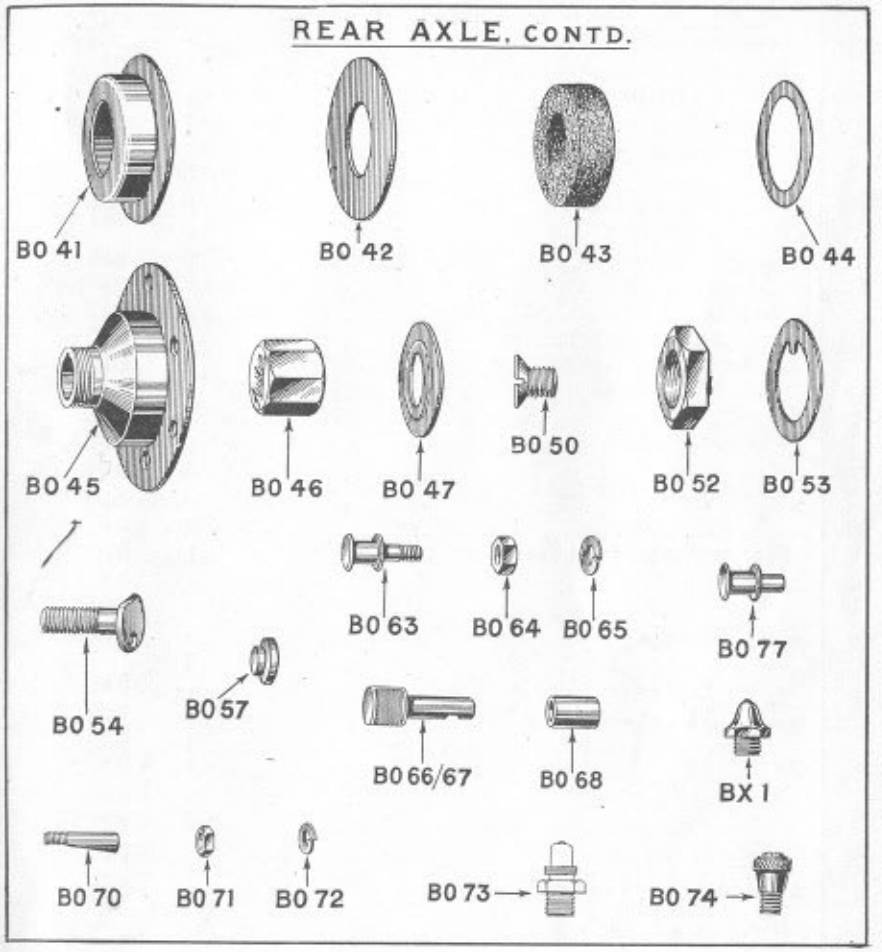


PROPELLER SHAFT AND TORQUE TUBE

DESCRIPTION	Number per Car	Reference Number
Propeller shaft (with front fabric joint as BP29)	1	**BP28**
Ditto (with front joint as BP2 and rear joint as BP10	1	**BP1**
Ditto (with front and rear ball joints as BP2) ...	1	**BP30**
Fabric joint	1	**BP29**
Bolt	6	**BP57**
Slotted nut	6	**BP58**
Plain nut	6	**BP59**
Lockwasher	6	**BP60**
Split pin	6	**BP61**
Front universal joint ball	1	**BP2**
Front universal joint cover (rear)	1	**BP3**
Packing for universal joint (paper) ...	2	**BP4**
Ditto (brass or pen steel)	3 *or as required*	**BP5**
Screws	2	**BP6**
Bolts	4	**BP7**
Nuts	4	**BP8**
Lockwasher	4	**BP9**
Rear universal joint socket	1	**BP10**
Blocks	2	**BP11**
Pin	1	**BP12**
Flange	1	**BP13**
Flange	1	**BP65**
Locknut	1	**BP14**
Thrust adjusting nut	1	**BP15**
Lockwasher	1	**BP16**
Plug	1	**BP17**
Studs	4	**BP18**
Nuts	4	**BP19**
Lockwashers	4	**BP20**
Torque Tube felt housing	1	**BP21**
Felt plate (inner)	1	**BP22**
Felt	1	**BP23**
Felt plate (outer)	1	**BP24**
Roller journal bearings (rear), $\frac{7}{8}$in. × 2$\frac{1}{4}$in. × $\frac{11}{16}$in.	1	**BP25**
Ball thrust, $\frac{7}{8}$in. × 1$\frac{21}{32}$in. × $\frac{5}{8}$in., pinion shaft (both ends)	2	**BP26**
Ball journal bearing, $\frac{7}{8}$in. × 2in. × $\frac{9}{16}$in., ditto (front)	1	**BP27**

When ordering parts quote your car number.

Items shown in italics are not used on current models.

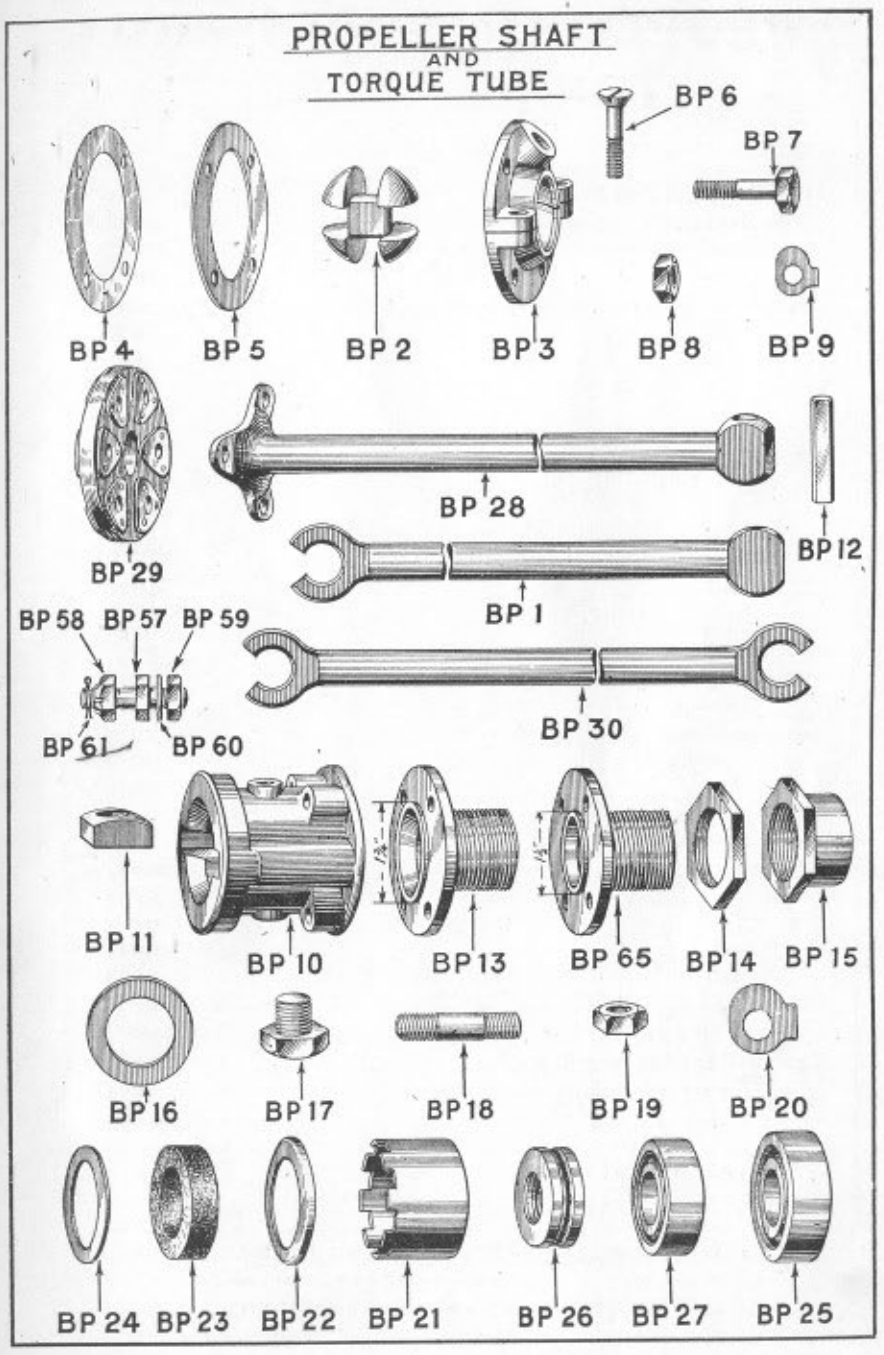

PROPELLER SHAFT AND TORQUE TUBE, contd.


DESCRIPTION	Number per Car		Reference Number
Propeller shaft and bevel pinion	1	†	**BP31**
Nut	1		**BP32**
Lockwasher	1		**BP33**
Key	1		**BP34**
Torque Tube, assembled with ends and adjusting nut	1		**BP35**
Torque tube socket	1		**BP62**
Nut	1		**BP63**
Torque Tube socket	1		**BP66**
Torque tube socket	1		**BP37**
Ball adjusting nut	1		**BP38**
Grease gun nipples	2		**BP39**
Grease gun nipples (conical type) ...	2	*	**BX1**
Locking bolt for ball adj. nut	1		**BP40**
Nut	1		**BP41**
Spring washer, ¼in.	1		**BP42**
Washer	1		**BP64**
Torque tube ball flange	1		**BP43**
Rivet	4		**BP44**
Seating, short (upper)	1		**BP67**
Seating, long (lower)	1		**BP68**
Nut	1		**BP69**
Lockwasher	1		**BP70**
Locknut	1		**BP71**
Seatings	2		**BP45**
Nut	1		**BP46**
Packing shims	2 *or as required*		**BP47**
Locking bolt	1		**BP48**
Nut	1		**BP49**
Spring Washer	1		**BP50**
Bevel pinion housing adj. washers	5		**BP52**
Universal joint cover (leather)	1		**BP53**
Packing piece	1		**BP54**
Clip (small)	1		**BP55**
Do. (large)	1		**BP56**

* For illustration see page 69.

When ordering parts quote your car number.

Items shown in italics are not used on current models.

† Supplied only together with crown wheel BO35.

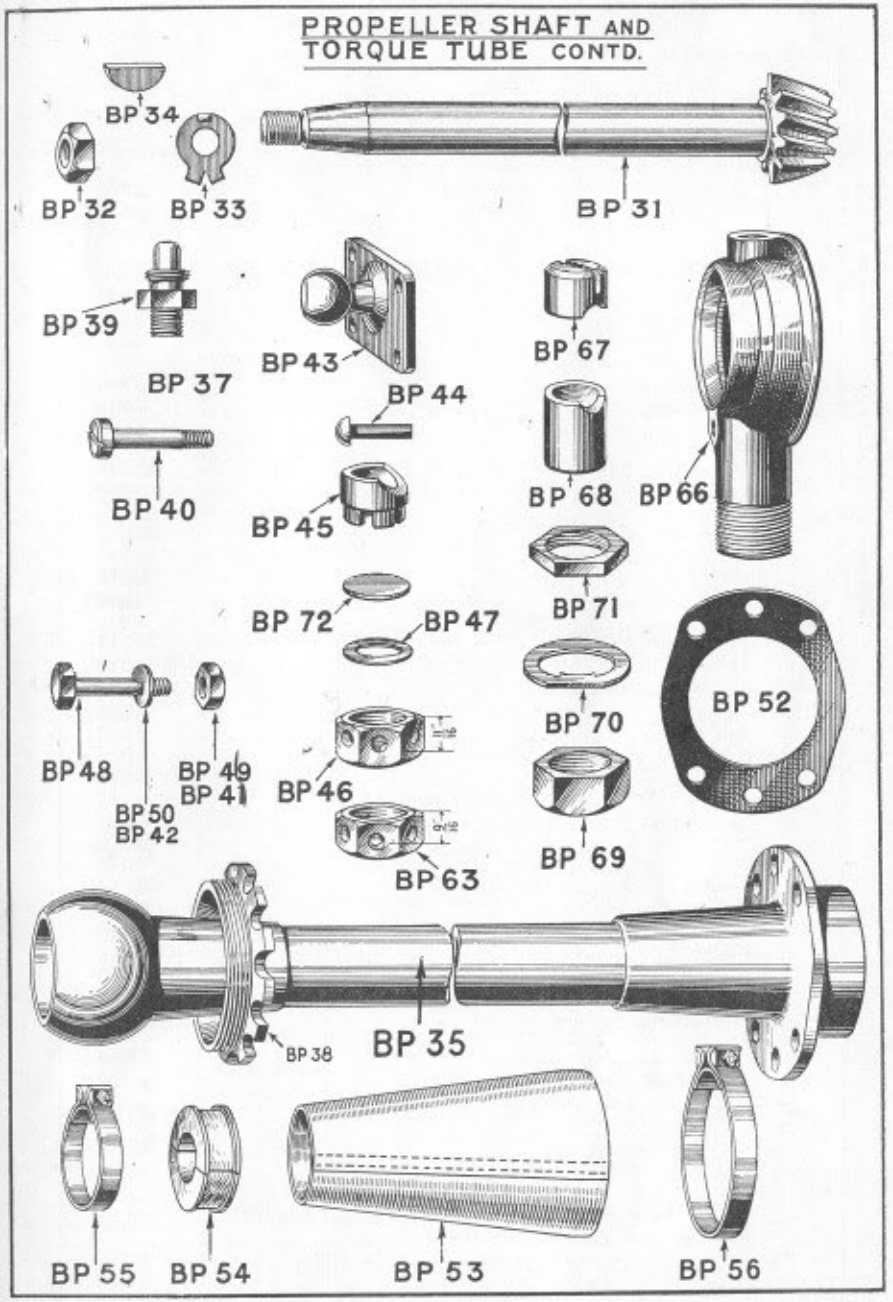


FRAME AND DETAILS

DESCRIPTION	Number per Car	Reference Number
Frame complete, including BR2, 5, 6, 7, 36, 37, 47 (or 11), 56, 57, 62, 65, 66, BM123, BN21, 22 and BP43 ..	1	**BR61**
Side member, modified (for cars No. A3—3361 onwards)	2	**BR62**
Side member	2	**BR1**
Rear cross member, including ball flange (BP43), BR38 and 39	1	**BR2**
Bracket (near) for shock absorbers marked "Hartford"	1	**BR49**
Ditto (off) for shock absorbers marked "Hartford"	1	**BR50**
Bracket (off) for shock absorbers, unmarked ..	1	**BR56**
Bracket (near) for shock absorbers, unmarked ..	1	**BR57**
Bushes	2	**BR60**
Strut (shock absorber brackets)	2	**BR53**
Front cross member, including ball flange BM123 ..	1	**BR5**
Bracket (off)	1	**BR6**
Ditto (near)	1	**BR7**
Bolts (silencer bkt.)	2	**BR8**
Front spring bracket	1	**BR11**
Front spring bracket	1	**BR47**
Front road spring, including BR14	1	**BR12**
Spring shackles	4	**BR13**
Bushes	2	**BR14**
Plain nuts, ⅜in.	4	**BR15**
Lockwashers	2	**BR16**
Lockwashers	4	**BR17**
Grease gun nipples (screw-on type)	4	**BR18**
Grease gun nipple (auto-ram), illustrated on page 69	2	**BX1**
Elbow nipple	2	**BR51**
Front spring packing	1	**BR19**
Front spring clips	2	**BR20**
Plain nuts, ⅜in.	4	**BR21**
Lockwasher	2	**BR42**
Starting handle bracket plate	1	**BR22**
Rear road spring, including BR24	2	**BR23**
Bushes	4	**BR24**
Spring pins (screwed for greaser)	2	**BR25**
Spring pins (plain)	2	**BR45**
Spring pins (for shock absorbers marked "Hartford")	2	**BR46**
Spring pins for shock absorbers, unmarked ..	2	**BR58**
Nut for BR58	2	**BR59**
Nut for BR46	2	**BR43**
Grease gun nipples (screw-on type)	2	**BR35**
Packing washer	1	**BR41**
Cotters	2	**BR26**
Clips	2	**BR29**
Plain nuts, ⅜in.	2	**BR30**
Lockwashers	2	**BR31**
Rear spring packing	2	**BR63**
Bolts locating rear spring (for cars No. A3—3361 onward)	2	**BR64**
Bolts locating rear spring	2	**BR32**
Plain nuts, ½in.	2	**BR33**
Lockwashers	2	**BR34**
Packing washers	2	**BR52**
Body bracket—front (near)	1	**BR36**
Ditto —front (off)	1	**BR37**
Ditto —rear (near) (for cars No. A3—3361 onward)	2	**BR65**
Ditto —rear (off) (ditto)	1	**BR66**
Ditto —rear (near) (up to car No. A3—3335) ..	1	**BR38**
Ditto —rear (off) (ditto)	1	**BR39**
Ditto —centre	2	**BR48**

When ordering parts quote your car number.

Items shown in italics are not used on current models.

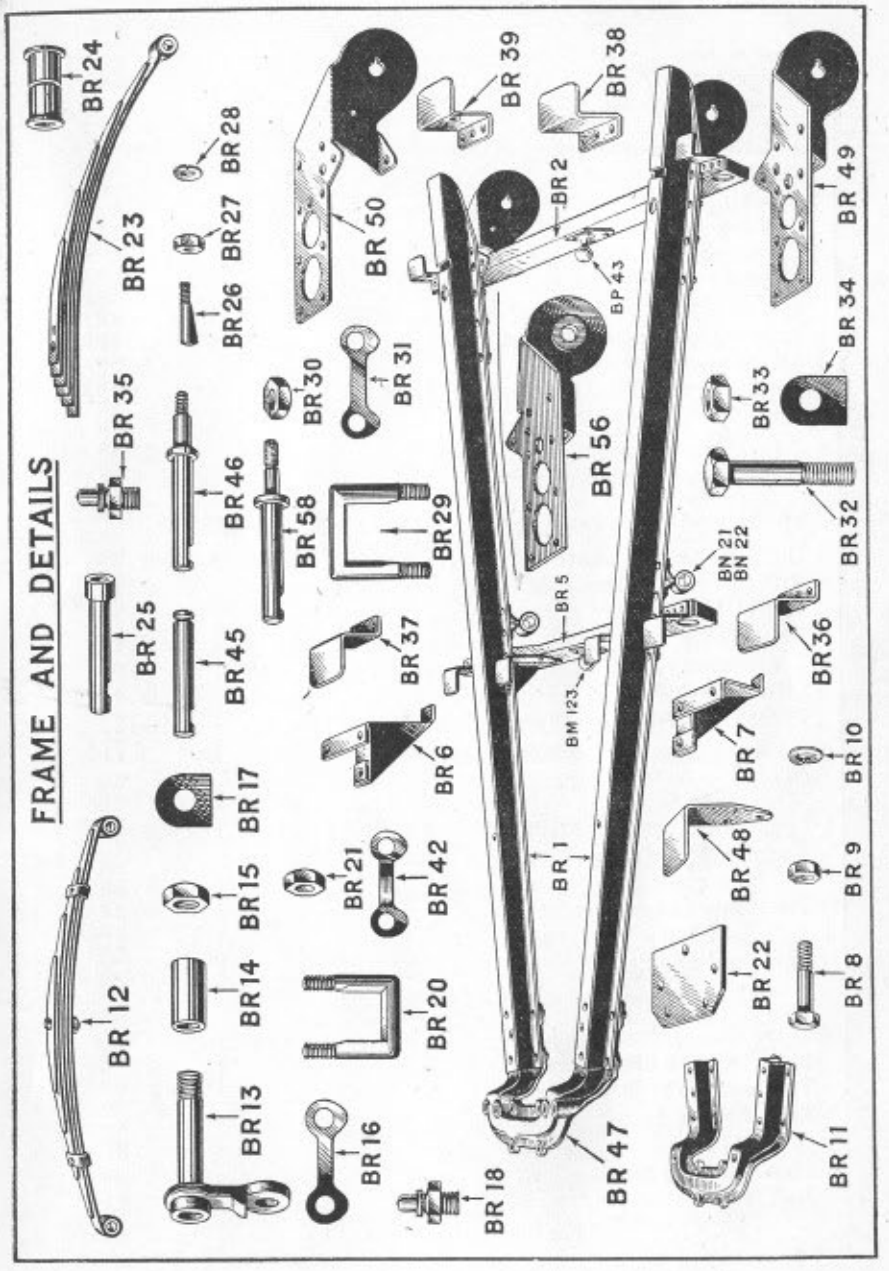


TOOLS

DESCRIPTION	Number per Car	Reference Number
Double-ended spanner, $\frac{7}{16}$in. × $\frac{1}{2}$in.	1	BT1
Double-ended spanner, $\frac{5}{16}$in. × $\frac{3}{8}$in.	1	BT2
Double-ended spanner, $\frac{3}{16}$in. × $\frac{1}{4}$in.	1	BT3
Sparking plug box spanner	1	BT6
Tommy bar	1	BT7
Carburetter jet key	1	BT8
Magneto spanner	1	BT9
Sparking plug and tappet clearance gauge ...	1	BT10
Tappet adjustment spanner	1	BT12
Screwdriver	1	BT13
Tyre levers (Dunlop) for balloon tyres ...	1	BT35
4in. adjustable spanner	1	BT22
$\frac{3}{16}$in. × $\frac{1}{4}$in. box spanner	1	*BT32
Wrap for all the above items	1	BT23
The following are in addition to those in TOOL WRAP—		
$\frac{5}{8}$in. × $\frac{3}{4}$in. box spanner	1	BT5
Hub cap and steering column socket spanner ...	1	BT11
Wheel brace	1	BT16
Valve lifter	1	BT17
Tyre pump	1	BT20
Lifting jack	1	BT21
Grease gun, Autoram type ...	1	*BT30
" Enots " flexible grease gun	1	BT14
Special " Enots " grease connection with nipple for rear universal joint	1	BT15
Spanner for dynamo casing nut and cylinder nut	1	*BT31
Adaptor and grease nipple for front and rear hub greaser	1	*BT33
Trade mark cleaning plate	1	BT34
Cylinder head joint washer	1	BC29
Combination pliers	1	BT36
EXTRAS.		
Box spanner, $\frac{1}{4}$in. and $\frac{5}{16}$in.	1	BT4
Cylinder head lifting screw	2	*BT25
Tommy bars for lifting screw	2	*BT26
Spanner for thrust and adjusting nuts, BP14 and 15	2	*BT27
Hub extractor screw	1	*BT29
Hub extractor and screw, BT29	1	*BT24

* For illustration see page 69.

Items shown in italics are not used on current models.

When ordering parts quote your car number.

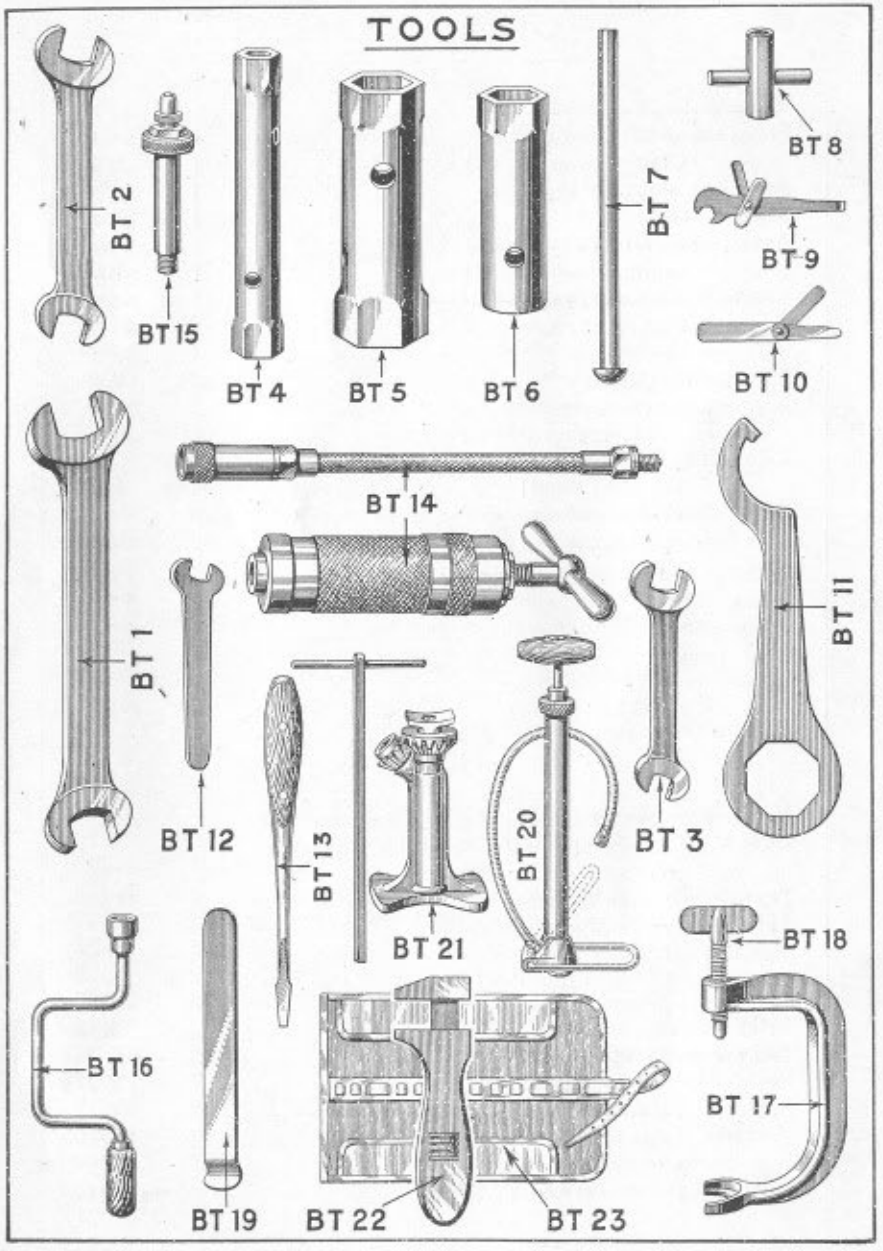


SHOCK ABSORBERS.


"AUSTIN" TYPE.

DESCRIPTION	Number per Car	Reference Number
Front shock absorber bracket	1	**BU1**
Centre bush (wood)	1	**BU33**
Arm, nearside (front)	1	**BU2**
Arm, nearside (back)	1	**BU3**
Arms, offside (front and back)	1	**BU4**
Centre bush (wood)	1	**BU34**
Centre bolt and spring plate (back)	1	**BU5**
Nut	2	**BU6**
Spring washer	1	**BU7**
Spring plate (front)	1	**BU8**
Friction discs (back and front) ...	2	**BU9**
Friction disc (centre)	1	**BU10**
Side connecting links with bushes	2	**BU11**
Bushes (wood)	4	**BU35**
Fibre washers	8	**BU12**
Side link bolts (lower)	2	**BU13**
Key washer (plain)	2	**BU14**
Belleville washer (bent)	2	**BU15**
Nut (front)	2	**BU16**
Split pin	2	**BU17**
Nut (rear)	2	**BU18**
Split pin	2	**BU19**
Side link bolts (upper) with peg	2	**BU20**
Nut	2	**BU21**
Split pins	2	**BU22**
Rear shock absorber arm	2 prs.	**BU23**
Bolt (front end)	2	**BU24**
Nut	4	**BU25**
Spring washer	2	**BU26**
Spring	2	**BU27**
Spring cup (inner)	2	**BU28**
Spring cup (outer)	2	**BU29**
Spring plate	2	**BU30**
Friction discs	4	**BU9**
Rear connecting link with bushes	2	**BU11**
Bushes (wood)	4	**BU35**
Fibre washers	8	**BU12**
Rear link bolt (lower) with peg ...	2	**BU20**
Key washer (plain)	2	**BU14**
Belleville washer (bent)	2	**BU15**
Nut	2	**BU31**
Spring washer	2	**BU32**

When ordering parts quote your car number.

Items shown in italics are not used on current models.

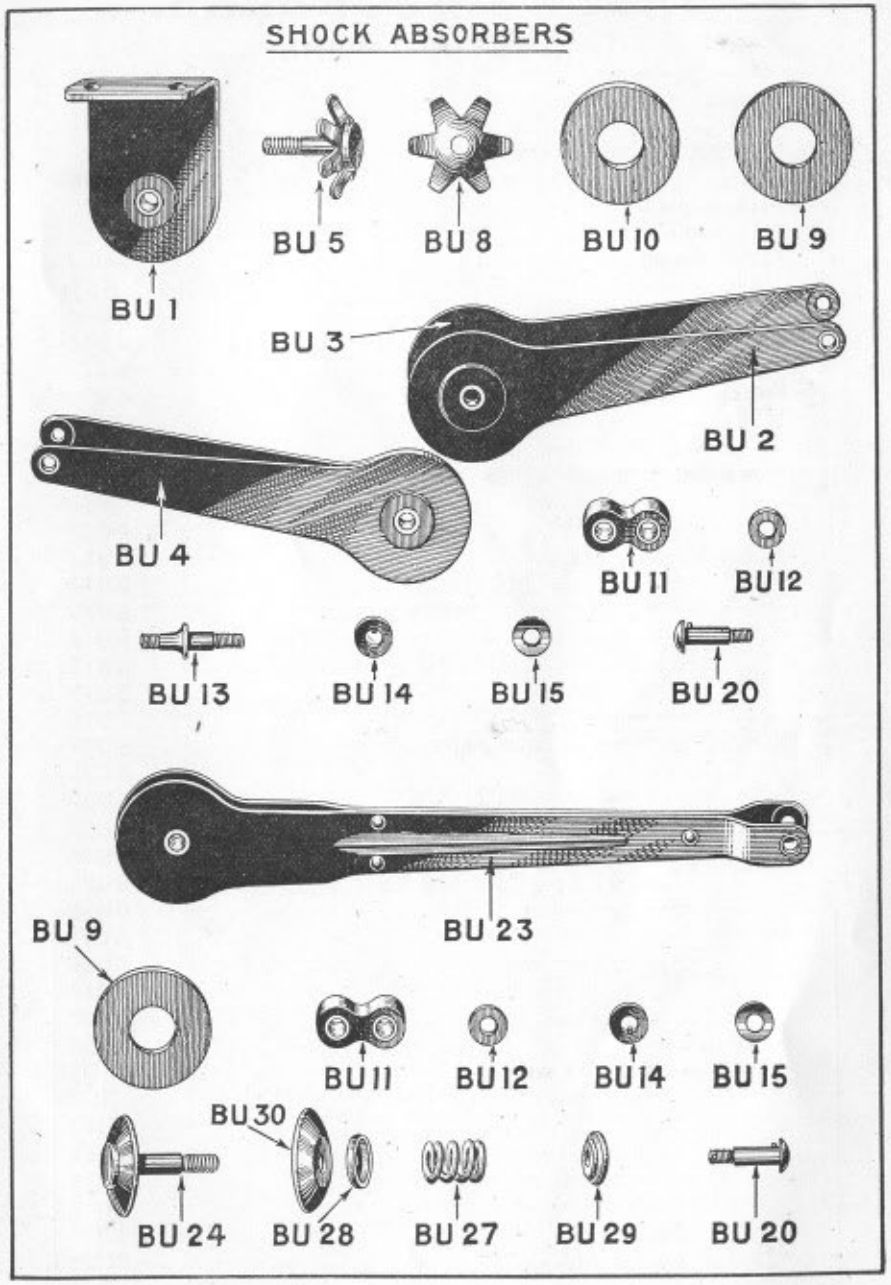


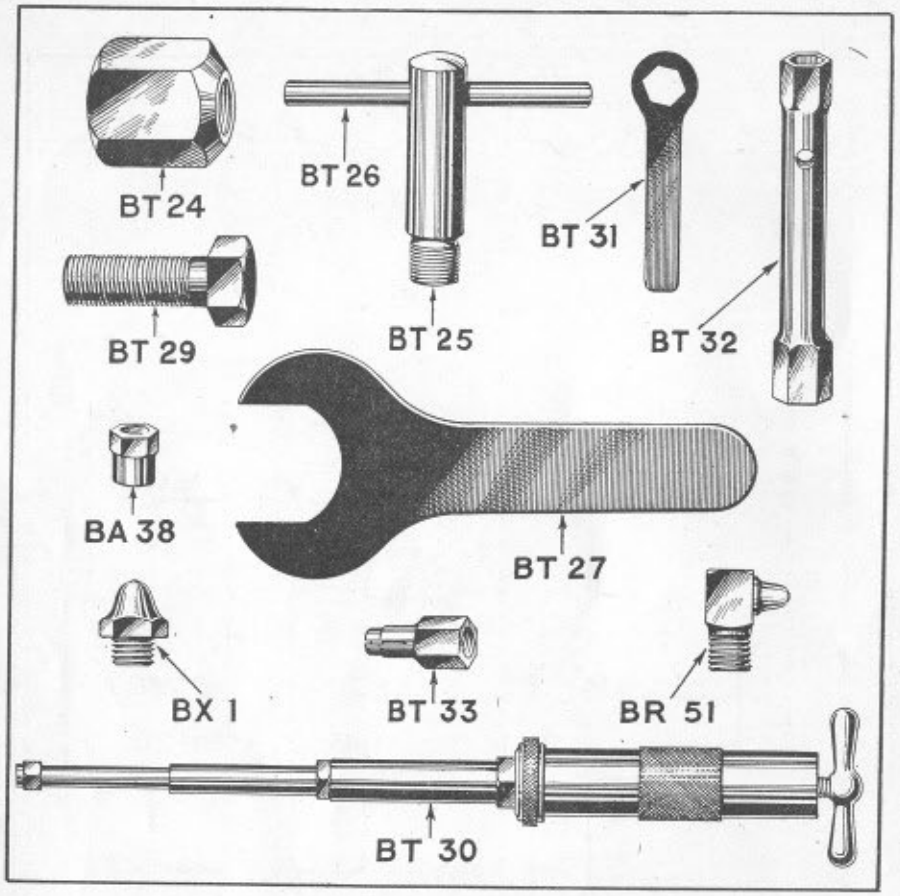

ROAD WHEELS

DESCRIPTION	Number per Car	Reference Number
Road wheel (for balloon tyre, 26in. × 3½in.)	5	**BS14**
Road wheel (for balloon tyre, 26in. × 3½in.)	5	**BS8**
Road wheel (for high pressure, 26in. × 3in.)	5	**BS7**
Nuts	15	**BS6**
Nipples	180	**BS5**
Spokes (measure with care from inside of bend), see illustration—		
6¾in. long (for balloon type wheel similar to BS8) ..	90	**BS9**
6⅞in. long (for balloon type wheels BS8 and BS14)	90	**BS12**
7¼in. long (for " Brookland's " type wheel)	90	**BS11**
8¾in. long (for normal pressure type wheel. BS7, and balloon type wheel BS14)	90	**BS4**
8⅞in. long (for balloon type wheel, similar to BS8)	90	**BS10**
9⅛in. long (for balloon type wheel BS8)	90	**BS13**
9⅜in. long (for normal pressure type wheel BS7) ..	90	**BS3**

When ordering parts quote your car number.
Items shown in italics are not used on current models.

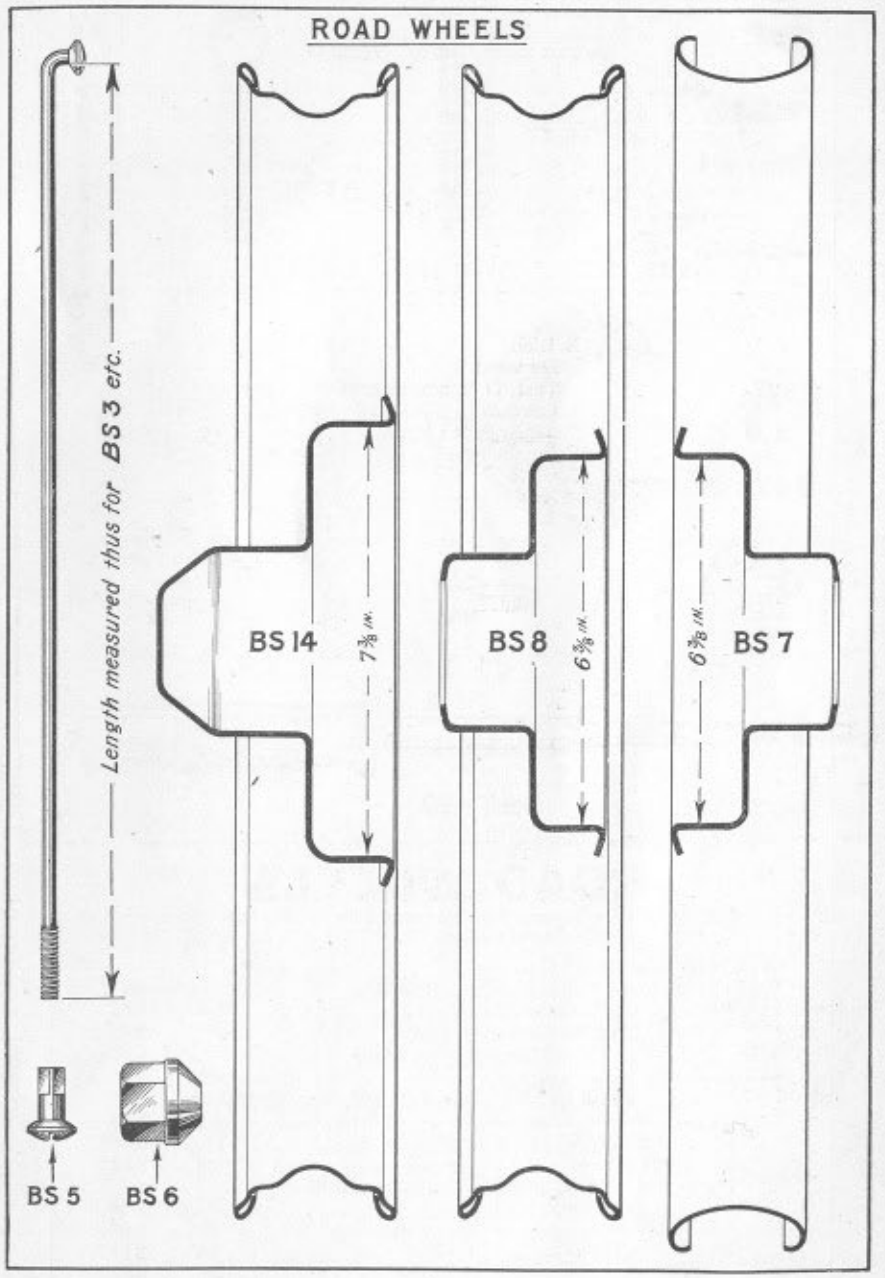

THE AUSTIN MOTOR CO., LTD., accept no liability under the terms of their Warranty for Tyres, Speedometers, or the Electrical Equipment, or other goods, including Coachwork not of its own manufacture.

All claims relating to any of these parts or fittings or orders for repairs to them, should be addressed to their manufacturers.

For our clients' convenience, we give below the names and addresses of the manufacturers, or suppliers of the goods in question.

IMPORTANT.—When claims under guarantee are being made, it is absolutely necessary to quote the type and number of car, and also the commissioning date.

Equipment applicable to all Models.

MAGNETOS.

"B.L.I.C." ..	British Lighting and Ignition Co., Ltd., (Service Department), Adderley Park, Birmingham.
"B.T.H." ..	British Thomson-Houston Co., Ltd., Alma Street, Coventry.
"M.L." ..	M.L. Magneto Syndicate, Ltd., Victoria Works, Coventry.
"LUCAS." ..	Joseph Lucas, Ltd., Gt. Hampton Street, Birmingham, and Dordrecht Road, Acton Vale, London, W. 3.
"WATFORD." ..	North and Sons, Whippendell Road, Watford.
"S.E.V." ..	"Service" by Ripaults, Ltd., 1, King's Road, St. Pancras, London, N.W. 1.
"SCINTILLA." ..	Scintilla, Ltd., 331, Euston Road, London, N.W.1.

HORNS.

"LUCAS" (King of the Road)	Joseph Lucas, Ltd., Gt. Hampton Street, Birmingham, and Dordrecht Road, Acton Vale, London, W.3.
"SPARTON" ..	Graham and Co., St. Andrew's Works, Crofton Park, London, S.E.4.
"A.R."	A. Rist, Ltd., Waveney Works, Lowestoft.
"KLAXON" and "KLAXET" ..	Klaxon, Ltd., Landor Street, Birmingham, and 36, Blandford Street, London, W.1.
"BENJAMIN" ..	Benjamin Electric, Ltd., Brantwood Works, Tariff Road, Tottenham, London, N.W.17.
"SYGNOL" ..	Clear Hooters, Ltd., Highgate Square, Moseley Road, Birmingham.
"DESMO" ..	Desmo Ltd., Desmo House, 31, Stafford Street, Birmingham.

WINDSCREEN WIPERS.

"LUCAS" (King of the Road) ..	Joseph Lucas, Ltd., Gt. Hampton Street, Birmingham.
"FOLBERTH" ..	C. G. Vokes and Co., Ltd., 38, Conduit Street, Regent Street, London, W.1.

ELECTRICAL EQUIPMENT.

"LUCAS"	Dynamos, Starters	Joseph Lucas, Ltd., Gt. Hampton St., Birmingham, and Dordrecht Road, Acton Vale, London, W.3.
"C.A.V."	Cutouts	C. A. Vandervell and Co., Ltd. (Service by). Joseph Lucas, Ltd., Dordrecht Road, Acton Vale, W.3.
"REMY"	(Switchboards)	Delco-Remy and Hyatt, Ltd., 111, Grosvenor Road, London, S.W.1.

LAMPS.

"LUCAS" ..	Joseph Lucas, Ltd., Gt. Hampton Street, Birmingham, and Dordrecht Road, Acton Vale, London, W.3.
"C.A.V." ..	Joseph Lucas, Ltd., Gt. Hampton Street, Birmingham, and Dordrecht Road, Acton Vale, London, W.3.
"H. & B." ..	Howes and Burley, Ltd., Motor Lamp Manufacturers, Holloway Head, Birmingham.

BATTERIES.

"LUCAS" and "C.A.V."	Joseph Lucas, Ltd., Gt. Hampton Street, Birmingham, and Dordrecht Road, Acton Vale, London, W.3.
"EXIDE" ..	Chloride Electrical Storage Co., Ltd., Lexden Road, Acton.
"SPARTA" ..	Fuller's United Electric Works, Ltd., Woodland Works, Chadwell Heath, Essex.

GREASE GUNS and OIL INJECTORS.

"ENOTS" ..	Benton and Stone, Ltd., Bracebridge Street, Birmingham.
"JEAVONS" ..	Ramsdens (Halifax), Ltd., Station Works, Halifax.

SPEEDOMETERS and FITTINGS, CLOCKS and PETROL GAUGES.

S. Smith and Sons (M. A.), Ltd., Cricklewood Works, London, N.W.2.

BODIES and FITTINGS.

"MULLINER" ..	Mulliners, Ltd., Bordesley Green Road, Birmingham.
"GORDON" ..	Gordon and Co., Taunton Road, Sparkbrook, Birmingham.
"HOYAL" ..	Hoyal Body Corporation, Ltd., 41, Charing Cross Road, London, W.C.2.
"GORDON ENGLAND"	Gordon England, Ltd., Felsham Road, Putney, London, S.W.15.
"STARTIN" ..	Thomas Startin, Junr., 71, Aston Road North, Birmingham.

DRIVING MIRRORS.

"LUCAS" (King of the Road)	Joseph Lucas, Ltd., Gt. Hampton Street, Birmingham.
"DESMO" ..	Desmo Limited, Desmo House, 31, Stafford Street, Birmingham.

TYRES and TUBES.

"DUNLOP" ..	Dunlop Rubber Co., Ltd., Fort Dunlop, Erdington, Birmingham.
"AUTOVAC" ..	Arundel and Co., Autovac Works, Heaton Norris, Stockport.

CARBURETTERS.

"ZENITH" ..	Zenith Carburetter Co., Ltd., 40-42, Newman Street, London, W.1.

RADIATOR THERMOMETERS.

"BOYCE MOTOMETER"	Benjamin Electric, Ltd., Brantwood Works, Tariff Road, Tottenham, London, N.W.17.
"CALORMETER"	Wilmot Manufacturing Co., Ltd., Camden Street, Birmingham.

LIFTING JACKS.

"MIDAS" ..	Lake and Elliott, Ltd., Albion Works, Braintree, Essex.
"SHELLEY" ..	R. T. Shelley, Ltd., Aston Brook Street, Birmingham.