When writing
ALWAYS quote your Car Number



List of SPARE PARTS

PUBLICATION - - 670B

PRICE 1/-

THE
AUSTIN MOTOR CO. LTD.
LONGBRIDGE :: BIRMINGHAM

INDEX

(*Sixteenth Edition*).

This List applies to any car, chassis No. from 89501 onwards.

	Page
Accumulator	25
Axle, front	37
Axle rear	47
Battery	25
Brake, foot	45-49
Brake, hand	35-37
Cables	15
Camshaft	7
Carburetter	21
Cardan Shaft	51
Change Speed	29
Clutch	33
Connecting Rod	11
Control Gear	23
Crankcase	1
Crankshaft	7
Cylinder	9
Differential	47
Distributor	25
Dynamo	25
Electric Starter	27
Exhaust	21
Fan	13
Flywheel	33
Foot Control	45
Frame	53
Front Axle	37
Gear Box	29
Hand Brake	35
Horns	25
Ignition	25
Induction Pipe	21
Lamps	25
Oil Indicator	5
Oil Pump	5
Pedal Control	45
Petrol Tank	19
Pistons	11
Propeller Shaft	51
Radiator	15
Radius Arms	43
Rear Axle	47
Road Springs	53
Road Wheels	59
Shock Absorber	57
Silencer	21
Speedometer	29
Springs and Shackles	53
Starter, electric	27
Starting Handle	13
Steering Box & Column	39
Steering Rods or Tubes	43
Sump	3
Switchboard	25
Tappets	11
Tool Kit	55
Torque Tube	51
Universal Joints	51
Valves	11
Wheels, Road	59
Wiring	15 and 17

AUSTIN MOTOR Co., Ltd., Longbridge, BIRMINGHAM.
Telephone, Cent. 4140. Priory, 2101-2110.
Telegrams, "Speedily, Northfield."

LONDON :

479-483, Oxford Street, W.1. (near Marble Arch).
Telephone, Mayfair 6230. Telegrams, "Austinette."
Code : Bentley's.

For prices of the parts given in this List, refer to the "Austin Seven Price List of Spare Parts."

Nov. 1929. Publication 670B.

Manufacturers' Warranty

THE goods manufactured by the Company, shall be accepted by the purchaser subject to the following express warranty, which excludes all warranties, conditions and liabilities whatsoever whether statutory or otherwise, which might exist against the Company but for this provision, viz. :—In the event of any defect being disclosed in any part or parts of the goods and if the part or parts alleged to be defective are returned to the Company's works, carriage paid, within ninety days after delivery, the Company undertakes to examine same, and should any fault, due to defective material or workmanship, be found on examination by the Company, it will repair the defective part or supply, free of charge, a new part in place thereof.

The Company's responsibility is limited to the terms of this guarantee, and it shall not be answerable for any contingent or resulting liability, or loss arising through any defects. This guarantee does not relate to defects caused by motor racing, wear and tear, misuse or neglect, or to the defects in any goods which have been altered after leaving the Company's works, or which have been let out on hire, or the identification numbers or marks on which have been altered or removed. The Company accepts no responsibility for tyres, speedometers or the electrical equipment or other goods (including coachwork) not of its own manufacture.

The Austin Motor Co., Ltd., issues no warranty of the goods except as stated herein, but desires and expects that customers shall make a thorough examination before purchasing. This warranty is limited to the despatch to the purchaser without charge except for transportation, of the part or parts, whether new or repaired, in exchange for those acknowledged by the Company to be defective.

The purchaser shall send to the Company's works, such part or parts as are alleged or claimed to be defective promptly on the discovery of the claimed defect. Transportation is to be prepaid by the purchaser, and said part or parts to be properly packed for transit and clearly marked for identification with the name and full address of the owner, and with the number of the vehicle from which the said part or parts were taken.

The purchaser shall post to the Company at its works, on or before despatch of such part or parts alleged to be defective, a full and complete description of the claim and the reasons therefore.

The judgment of the Austin Motor Co., Ltd., in all cases of claims shall be final and conclusive, and purchaser agrees to accept its decision on all questions as to defects and to the exchange of part or parts. After the expiration of six days from the despatch of notification of the Company's decision, the part or parts submitted may be scrapped or returned carriage forward by the Company.

*** **See special Note re Articles of Equipment and Accessories at end of book.**

TERMS OF BUSINESS

All Austin Agents carry stocks of Replacements, and applications for Spares should be made to them. Correspondence with the Company relating to Spare Parts, Accessories, and Replacements should be addressed to the Service Department.

Quotations obtained from the Company hold good for 14 days from the date thereof, when they are automatically cancelled, and fresh quotations must be applied for.

Cash with order, unless purchaser already has an account with the Company or is able to furnish approved references.

Bearing in mind alterations due to improvements, the Company in no way holds itself liable or responsible as to alteration in details in respect to orders.

The Company retains the right of making alterations to this list without notice, should it be deemed necessary.

Delivery on any specified date is not guaranteed.

TELEGRAPH AND TELEPHONE ORDERS.

To protect itself against fraud, it is compelled to decline to deliver goods ordered by telegram or telephone to the address of any persons unknown to it, unless covered by telegraphic remittance.

DAMAGE IN TRANSIT.

It does not hold itself responsible for goods lost or damaged in transit. All packages, upon receipt, should be signed for as "unexamined," and in the event of loss or damage to the contents, claim made upon the carriers without delay.

PACKING.

Packing and cases, when necessary, are charged for.

CHARGES FOR REPAIRS.


Owners are reminded that repairs to the Austin Seven are covered by a standard schedule of charges, to which Austin service depots and agents work.

Full use should be made of this facility, which enables the cost of any repair to be estimated before it has been effected.

CRANKCASE

DESCRIPTION	Number per Car	Reference Number
Crankcase, including BA25, 39, 54 to 61 and 65	1	**BA118**
Oil baffles	4	**BA37**
Front cover	1	**BA119**
Joint washer	1	**BA120**
Set screws	5	**BA121**
Spring washers	5	**BA122**
Oil thrower	1	**BA123**
Starting handle shaft bush	1	**BA124**
Plate for front bearing housing	1	**BA125**
Set screws	4	**BA126**
Lockwashers	2	**BA127**
Cylinder foot studs	7	**BA25**
Cylinder foot stud	1	**BA39**
Plain nuts	5	**BA26**
Barrel nuts	3	**BA38**
Spring washers	8	**BA27**
Oil filler tube, with base for cap, including BA129 and 130	1	**BA128**
Cap	1	**BA130**
Set screw	1	**BA131**
Spring washer	1	**BA132**
Oil filler strainer	1	**BA133**
Camshaft front bearing	1	**BA134**
Set screw	1	**BA135**
Washer for set screw	1	**BA136**
Camshaft rear bearing	1	**BA31**
Set screws	2	**BA32**
Spring washers	2	**BA33**
Joint washer	1	**BA34**


When ordering parts quote your car number.

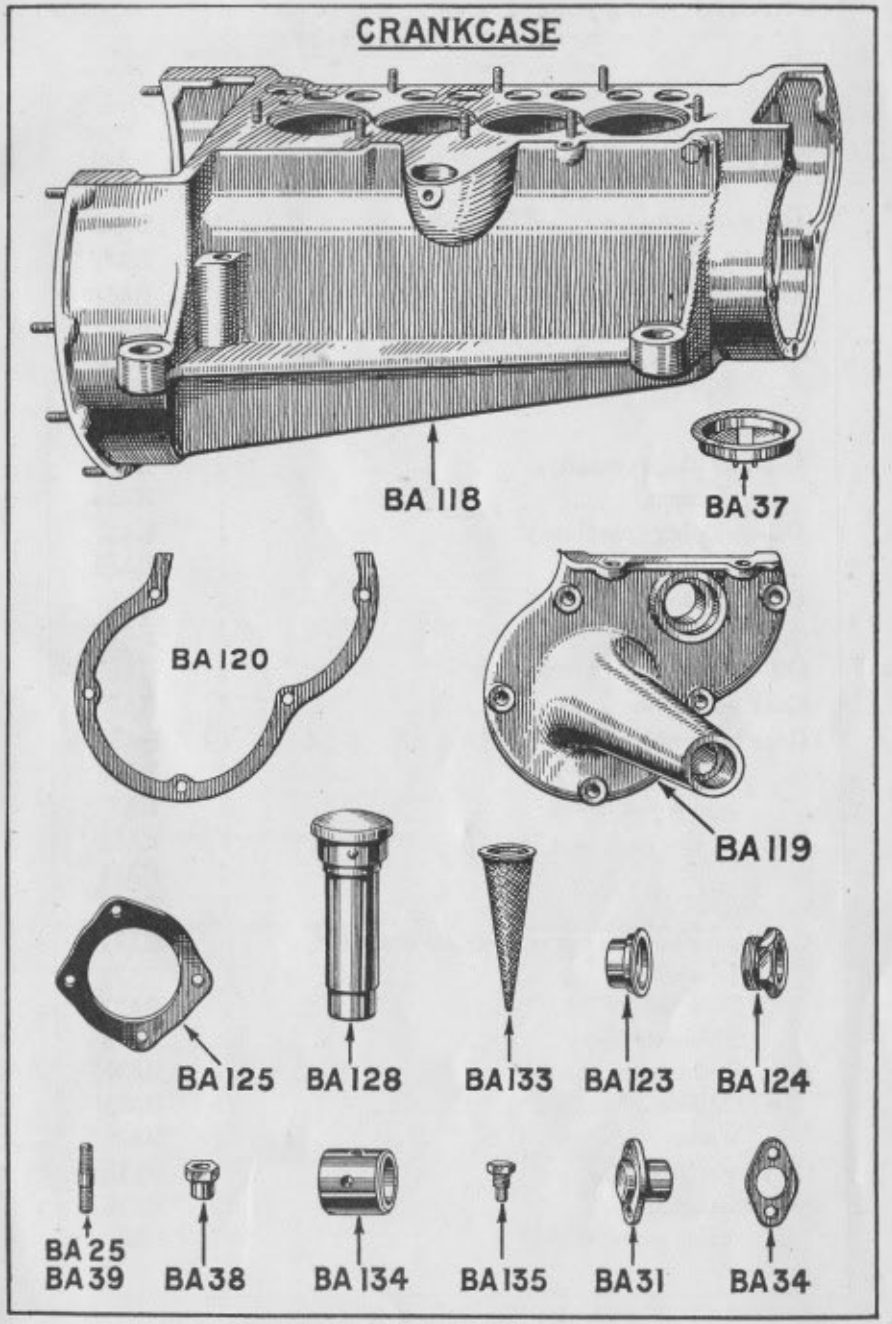

CRANKCASE, contd.

DESCRIPTION	Number per Car	Reference Number
Oil pump spindle bush	1	**BA41**
Cover	1	**BA42**
Joint washer	1	**BA43**
Oil dipper rod	1	**BA49**
Oil release adjusting screw	1	**BA50**
Spring	1	**BA51**
Valve washer	1	**BA52**
Ball	1	**BA53**
Oil jets.	2	**BA139**
Oil-way plugs (small)	2	**BA55**
Washers	2	**BA56**
Oil-way plug (medium)	1	**BA57**
Washer	1	**BA58**
Oil-way plugs (large)	2	**BA59**
Washers	2	**BA60**
Oil-way screws	2	**BA61**
Gear box studs	7	**BA65**
Gear box stud	1	**BA82**
Nuts	8	**BA66**
Spring washers	8	**BA67**
Bolts, engine to frame	4	**BA68**
Nuts	2	**BA69**
Spring washers	4	**BA70**
Crankcase bottom cover, with oil plug flange	1	**BA71**
Joint washer	1	**BA72**
Set screws	14	**BA73**
Spring washers	14	**BA74**
Oval washers	14	**BA138**
Oil plug	1	**BA79**
Washer	1	**BA80**
Oil tray with gauze	1	**BA75**
Set screws	10	**BA76**
Spring washers	10	**BA77**


When ordering parts quote your car number.

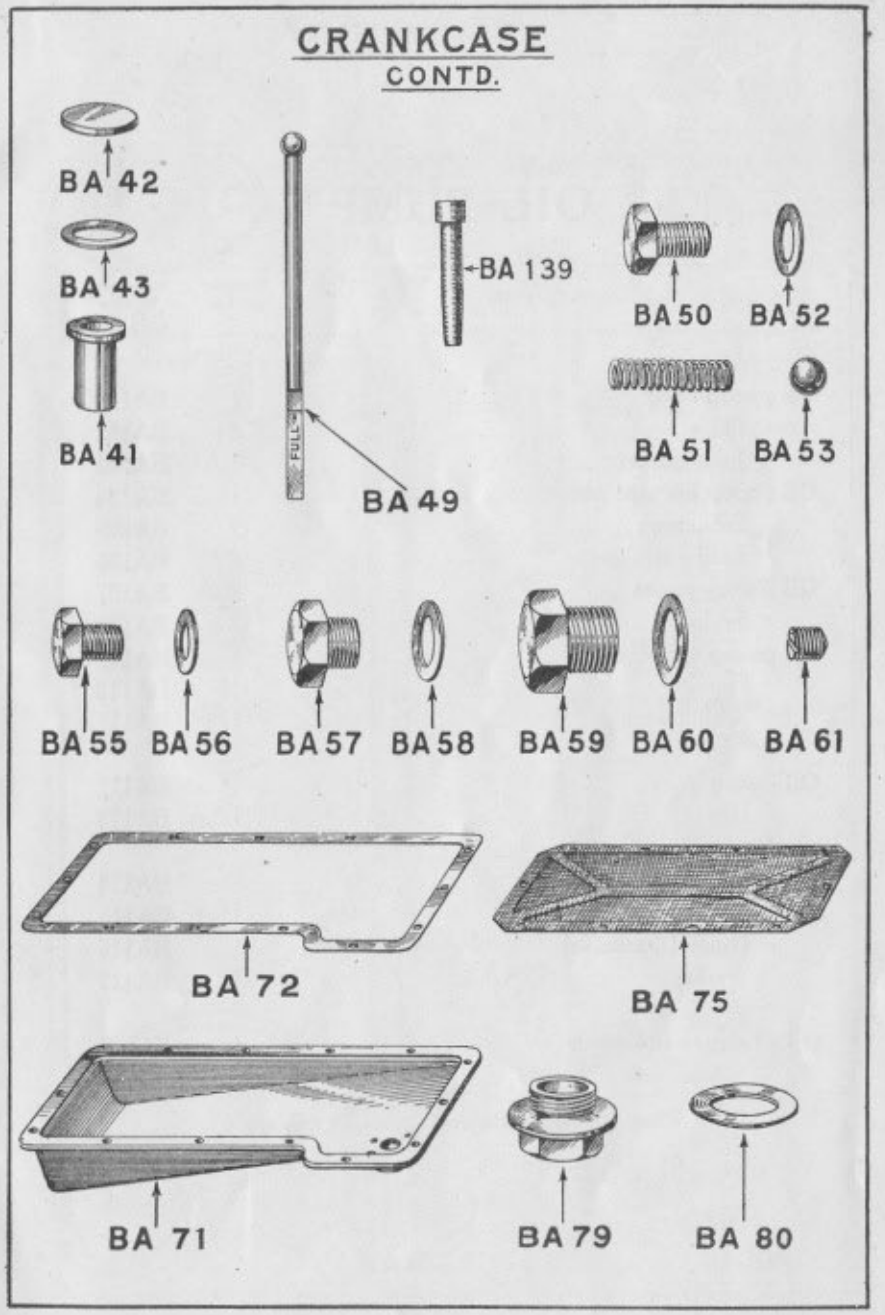

OIL PUMP

DESCRIPTION	Number per Car	Reference Number
Oil pump body	1	**BA101**
Plugs	2	**BA102**
Joint washer	1	**BA103**
Oil pump bottom cover	1	**BA104**
Set screws	2	**BA105**
Spring washers	2	**BA106**
Oil Pump vanes	2	**BA107**
Springs	2	**BA108**
Oil pump spindle	1	**BA109**
Nut	1	**BA110**
Spring washer	1	**BA111**
Oil pump gear	1	**BA112**
Key	1	**BA113**
Oil gauge pipe and nipple	1	**BA114**
Nut	1	**BA115**
Union (crankcase)	1	**BA116**
Washer	1	**BA117**
Oil pressure indicator	1	**BG95**


When ordering parts quote your car number.

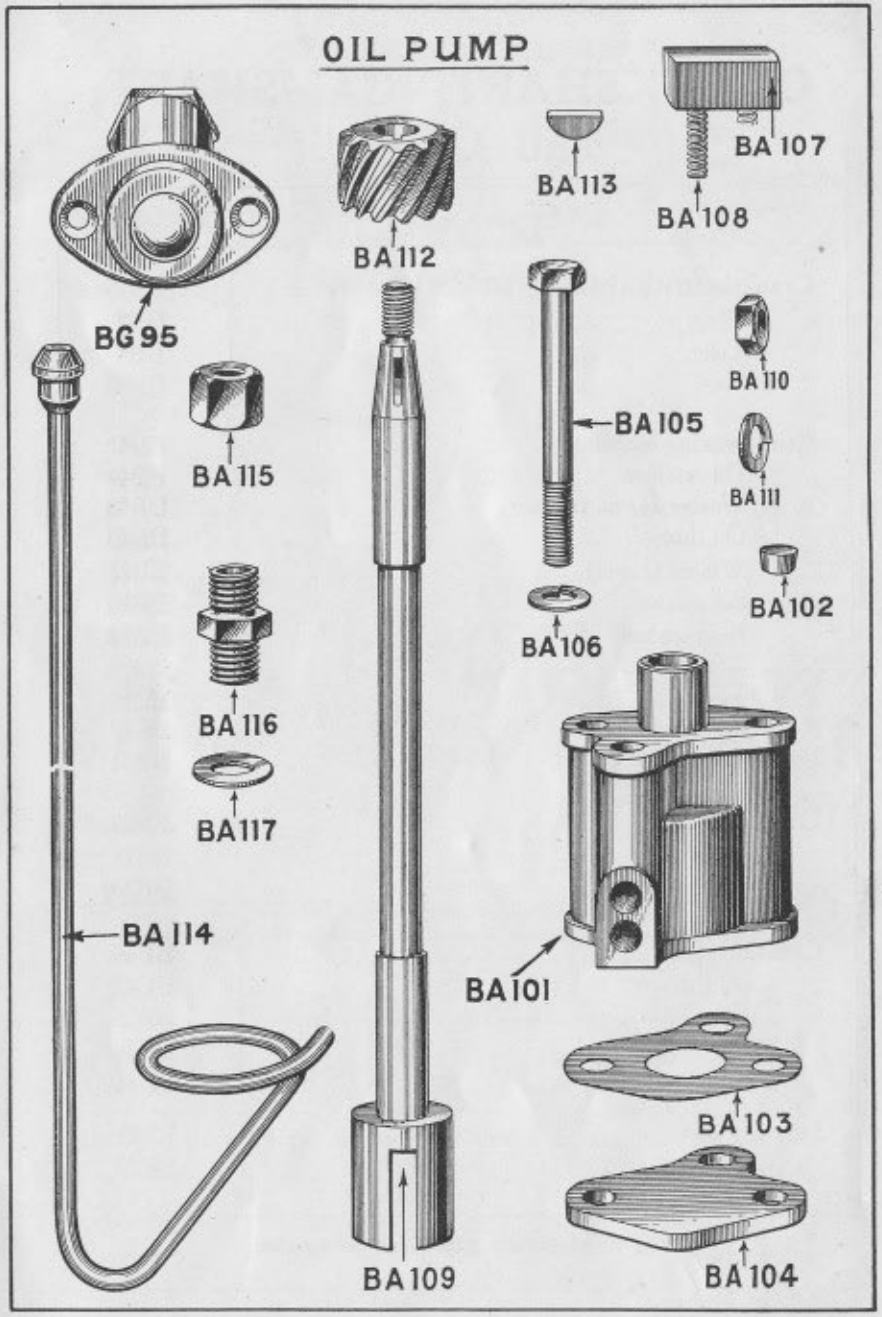

CRANKSHAFT, CAMSHAFT, and GEARS

DESCRIPTION	Number per Car	Reference Number
Crankshaft, with bearings BB15, 17 and 51 ...	1	**BB45**
Plugs	6	**BB2**
Gear	1	**BB4**
Key	1	**BB22**
Rear bearing housing	1	**BB46**
Oil retainer	1	**BB47**
Washer for oil retainer	1	**BB48**
Oil thrower	1	**BB49**
Washer (paper)	1	**BB11**
Set screws	4	**BB50**
Lockwashers	4	**BB13**
Ball bearing	1	**BB15**
Roller bearing (front)	1	**BB17**
Roller bearing (rear)	1	**BB51**
Camshaft	1	**BB39**
Roller race	1	**BB19**
Rollers	9	**BB20**
Camshaft gear	1	**BB40**
Oil thrower	1	**BB42**
Key	1	**BB22**
Nut	1	**BB43**
Lockwasher	1	**BB44**
Starting nut	1	**BB41**
Lockwasher	1	**BB37**


When ordering parts quote your car number.

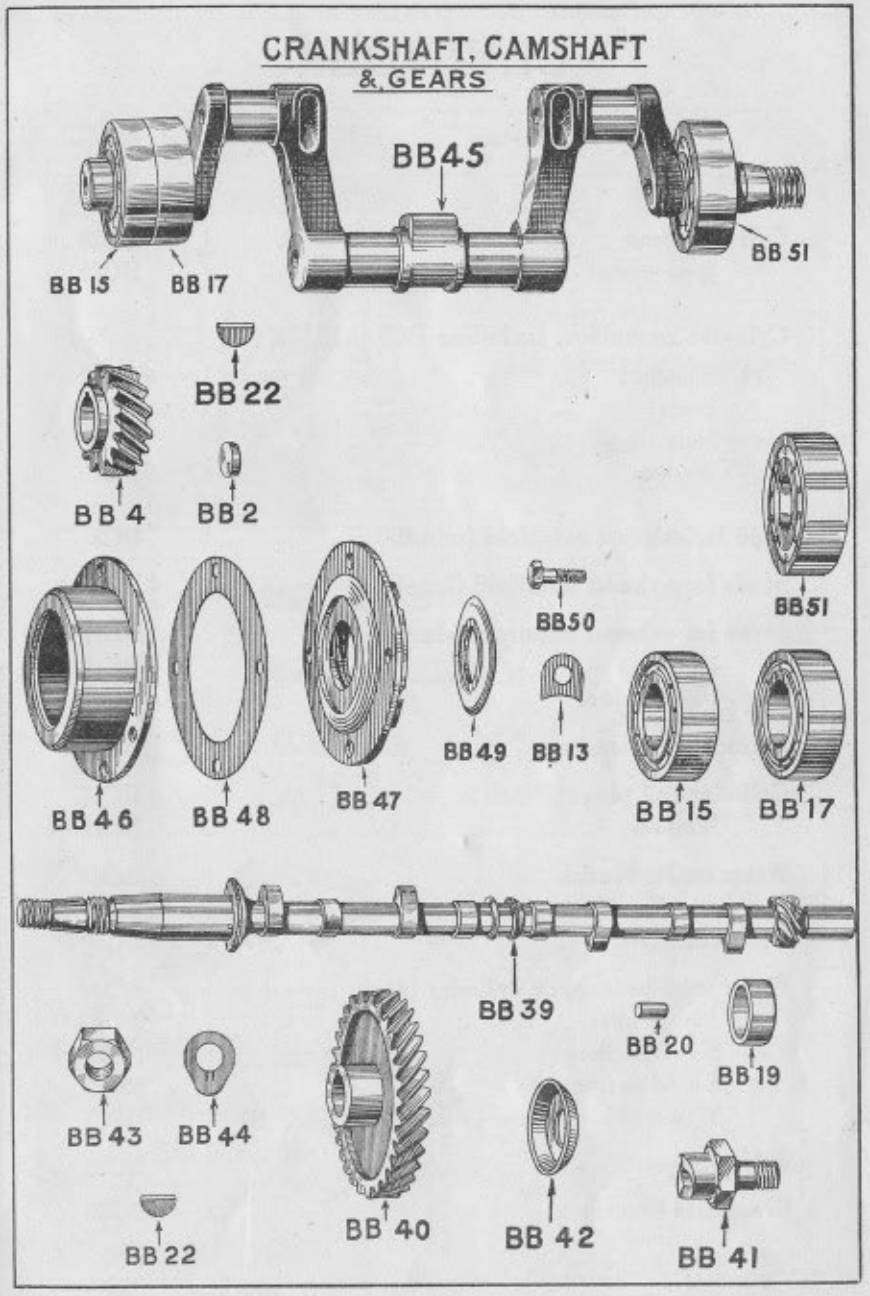

CLYINDER

DESCRIPTION	Number per Car	Reference Number
Cylinder head	1	**BC28**
Joint washer	1	**BC29**
Cylinder monobloc, including BC5, 8, 9, 10, 14, 15 and 24	1	**BC30**
Studs	14	**BC5**
Nuts	14	**BC6**
Washers	14	**BC7**
Stud for exhaust manifold (middle) ...	1	**BC8**
Studs for exhaust manifold (long)	4	**BC9**
Studs for exhaust manifold (short) ...	2	**BC10**
Nuts	7	**BC11**
Plain washers	7	**BC12**
Cylinder foot washer	1	**BC13**
Cylinder end plugs	2	**BC14**
Washers	2	**BC15**
Water outlet branch	1	**BC63**
Joint washer	1	**BC19**
Set screw	1	**BC20**
Water inlet branch, on cylinder block ...	1	**BD47**
Joint washer	1	**BD48**
Set screw (long)	1	**BC21**
Set screw (short)	1	**BC22**
Washers for set screws (inlet and outlet branch)	3	**BC23**
Valve guides	8	**BC24**
Crankcase breathers	2	**BC25**

When ordering parts quote your car number.

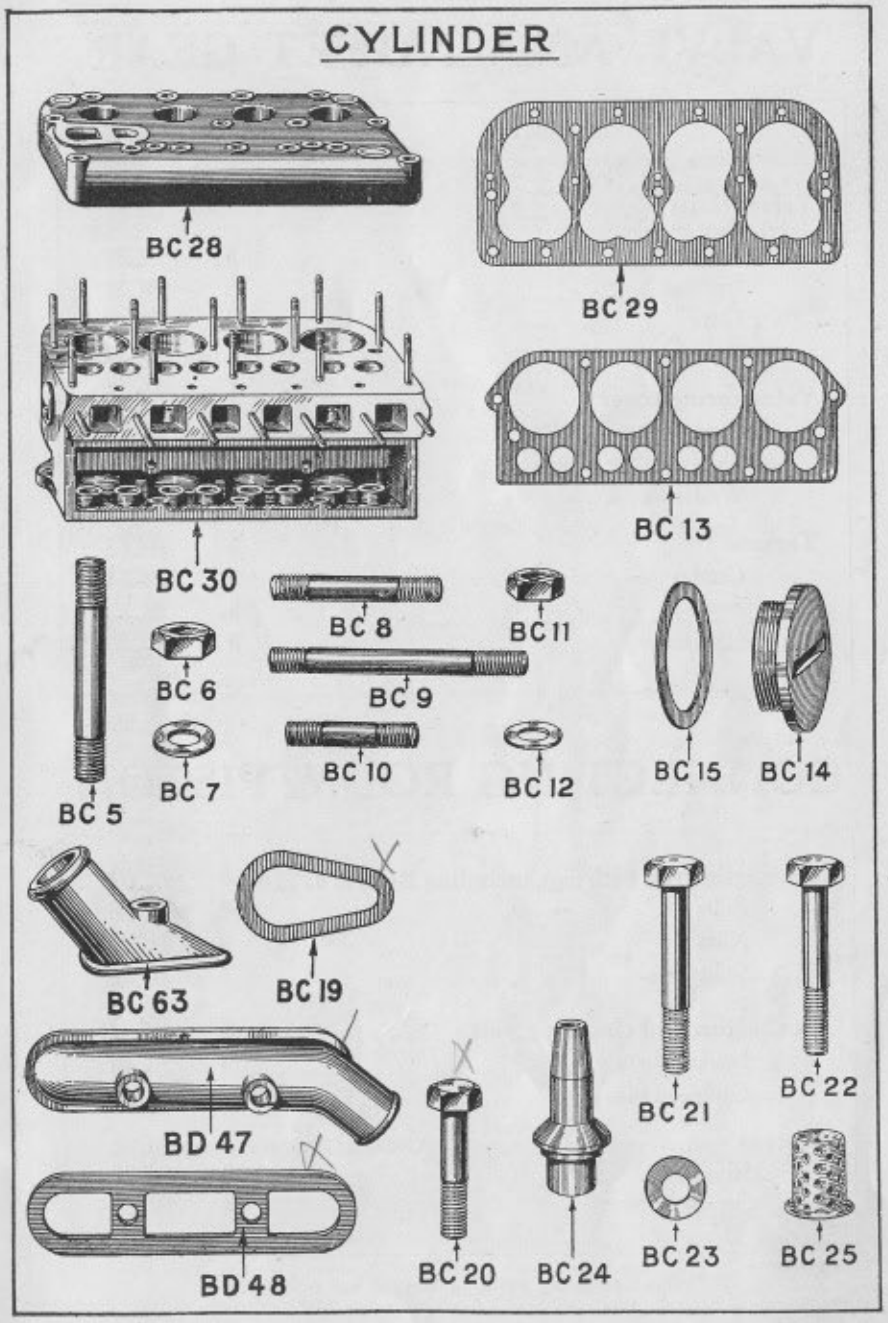


VALVE AND TAPPET GEAR

DESCRIPTION	Number per Car	Reference Number
Valves (inlet)	4	**BC61**
Valves (exhaust)	4	**BC62**
Springs	8	**BC32**
Cups	8	**BC33**
Split Cotters	8 pairs	**BC34**
Valve spring cover	1	**BC35**
Studs	2	**BC36**
Nuts	2	**BC37**
Washer (cork)	1	**BC38**
Tappets	8	**BC53**
Guides	8	**BC54**
Screws	8	**BC55**
Lock nuts	8	**BC60**

CONNECTING ROD & PISTON

Connecting rod with cap, including BC68 & 45 to 48	4	**BC67**
Bolts	8	**BC68**
Nuts	8	**BC45**
Split pins	8	**BC46**
Connecting rod clamping pins	4	**BC47**
Lockwashers	4	**BC48**
Gudgeon pins	4	**BC59**
Pistons	4	**BC56**
Rings	8	**BC57**
Scraper rings	4	**BC58**

When ordering parts qucte your car number.

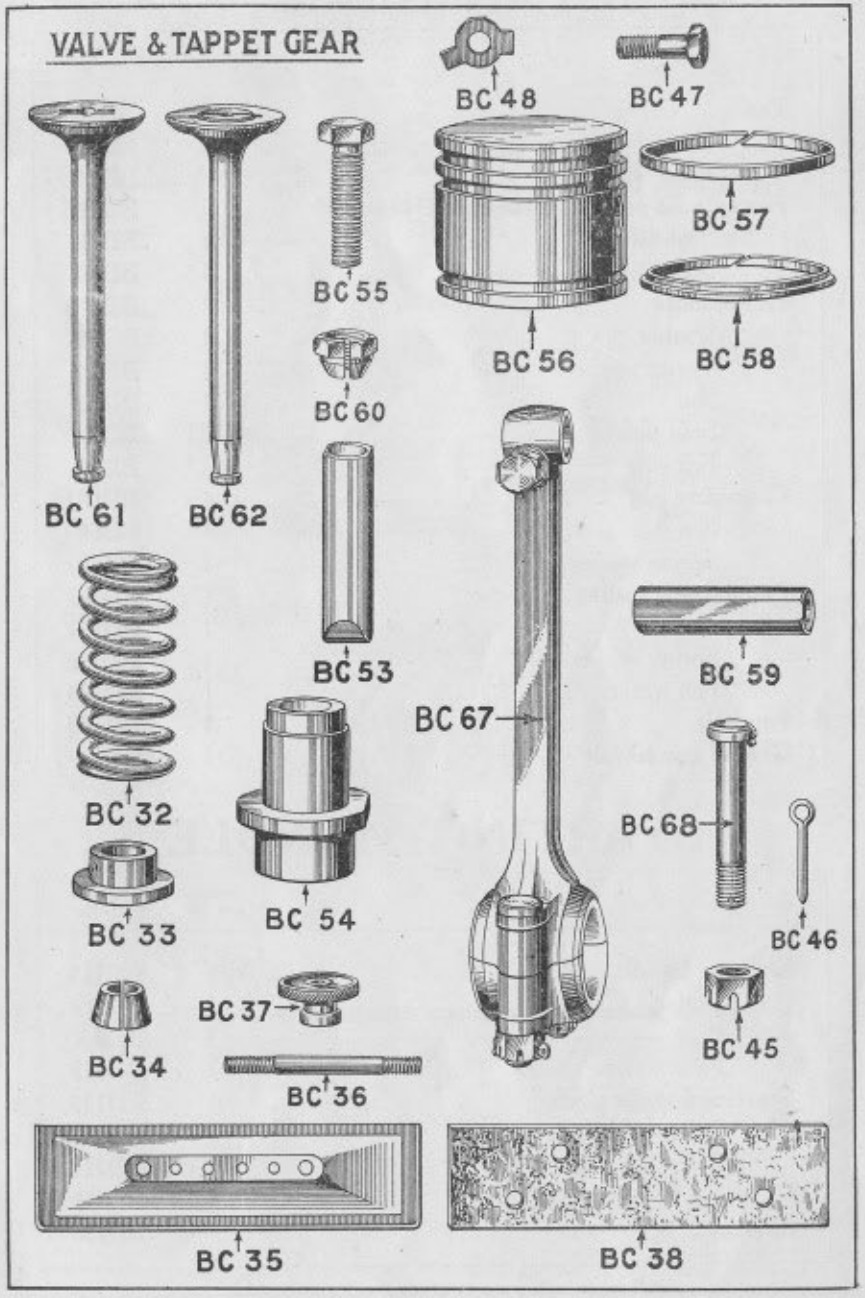


FAN GEAR

DESCRIPTION	Number per Car	Reference Number
Fan	1	**BD105**
Set screws	2	**BD113**
Fibre washers	2	**BD24**
Fan spindle pulley, including BD49 and 50 ...	1	**BD106**
Bush (short)	1	**BD49**
Bush (long)	1	**BD50**
Fan spindle	1	**BD108**
Washer	1	**BD30**
Thrust washer	1	**BD29**
Nut	1	**BD31**
Split pins	2	**BD32**
Felt ring	1	**BD33**
Clamping pin	1	**BD68**
Nut	1	**BD69**
Spring washer	1	**BD70**
Fan driving pulley	1	**BD107**
Nut	1	**BD111**
Spring washer	1	**BD112**
Felt washer	1	**BD169**
Fan belt	1	**BD109**
Grease gun nipple	1	**BX1**

STARTING HANDLE

DESCRIPTION	Number per Car	Reference Number
Starting handle	1	**BD114**
Cotter	1	**BD2**
Nut	1	**BD3**
Plain washer	1	**BD115**
Starting handle shaft	1	**BD116**
Collar	1	**BD117**
Peg	1	**BD118**
Joint washer (leather)	1	**BD119**
Spring	1	**BD120**

When ordering parts quote your car number.

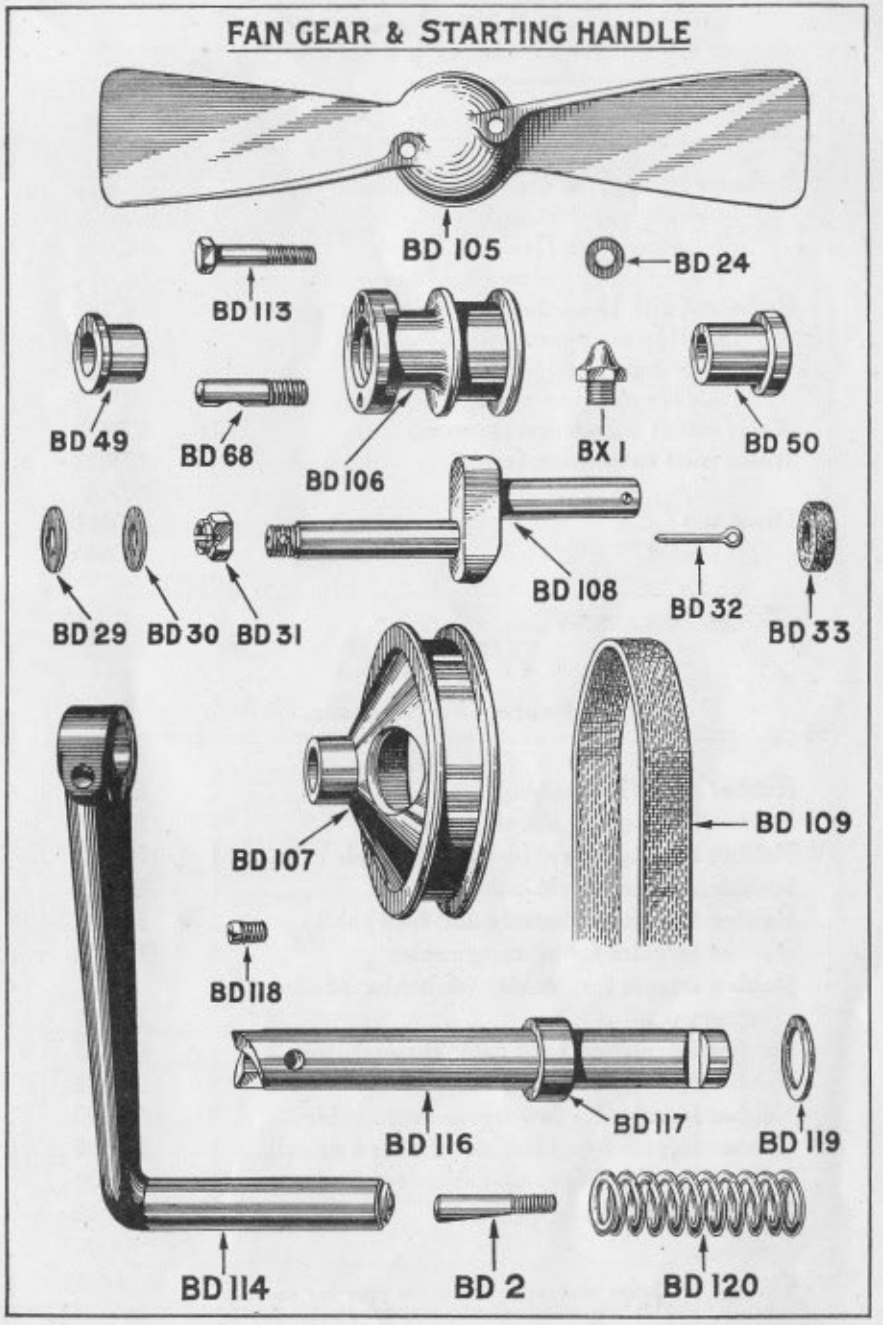

RADIATOR


DESCRIPTION	Number per Car	Reference Number
Radiator (with 1½-in. dia. thread for filler cap)	1	**BD178**
Cowl to suit radiator BD178	1	**BD179**
Filler cap (with 1½-in. dia. thread) ...	1	**BD180**
Rubber ring (between filler and cowl) ...	1	**BD184**
Radiator (with 1¼-in. dia. thread for filler cap)	1	**BD182**
Cowl to suit radiator BD182	1	**BD183**
Filler cap (with 1¼-in. dia. thread) ...	1	**BD40**
Rubber ring (between filler and cowl) ...	1	**BD121**
Water outlet connection (bottom)	1	**BD122**
Water inlet connection (top)	1	**BD103**
Clips	4	**BD44**
Drain tap	1	**BD181**
Washer	1	**BD46**

WIRING

Rubber Ferrules, etc.

Rubber rings (H.T. cables)	2	**BD54**
Rubber ferrules for starter cable	3	**BD94**
Rubber ferrule for cables through dash ...	1	**BD123**
Rubber ferrule for cut-out cable	1	**BD124**
Rubber ferrule for battery and feed cable ...	1	**BD125**
Rubber ferrules for starting cables... ...	4	**BD126**
Rubber ferrule for cable (switchboard to battery pos.)	1	**BD127**
Rubber ferrule for horn cable through dash	1	**BD127**
Rubber ferrules for horn wires	3	**BD128**
Rubber ferrules for low tension wire cable ...	4	**BD129**
Rubber ferrule for cable, switchboard to coil	1	**BD130**
Rubber glove for dynamo cable	1	**BD131**
Felt strip for lighting cables	1	**BD132**


When ordering parts quote your car number.

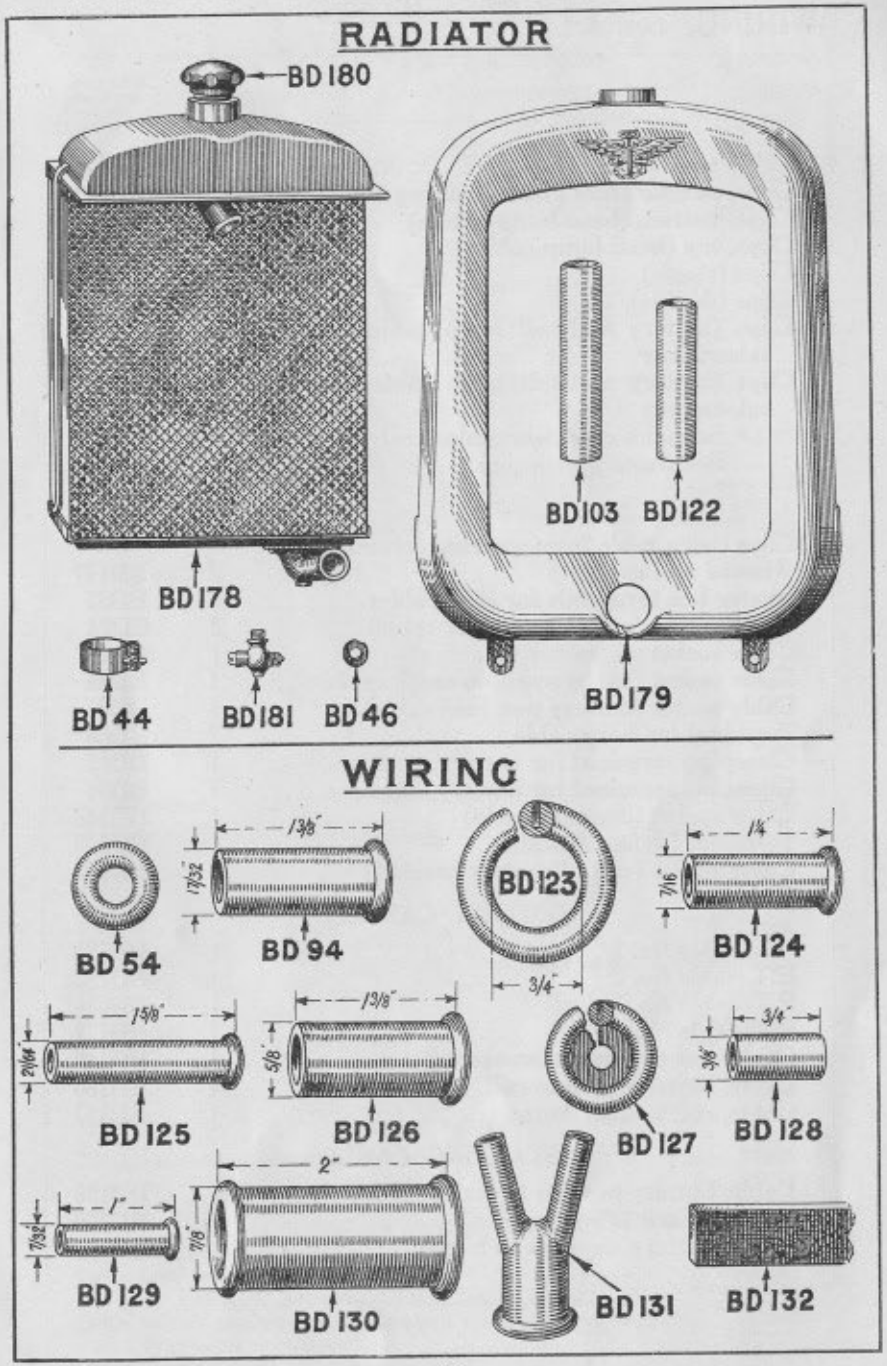

WIRING, contd.

DESCRIPTION	Number per Car	Reference Number
Cable bush and nut	3	**BD67**
Clips, on door front pillar (Touring model)	2	**BD56**
Clips, bottom (head lamp cables)	2	**BD133**
Clips, top (head lamp cables)	2	**BD134**
Clips (single)	3	**BD188**
Clips (double)	3	**BD189**
Clips (battery and tail lamp cables) metal saloon only	2	**BD136**
Clips (battery and tail lamp cables) fabric saloon only	2	**BD137**
Screw for clips (fabric saloon only)	2	**BD138**
Bolt (battery earth clip)	1	**BD139**
Nut	1	**BD140**
Spring washer	1	**BD141**
Clips (horn cable from steering column to toe board and cut-out)	2	**BD147**
Chater Lea terminals for H.T. cables	4	**BD57**
Cable socket (switch to starter cable)	2	**BD84**
Cable socket on starter	1	**BD187**
Cable socket (battery neg. to earth cable)	1	**BD86**
Cable socket (battery pos. feed cable)	1	**BD87**
Terminal for horn cable	2	**BD88**
Clamping terminal for battery, positive	1	**BD95**
Clamping terminal for battery, negative	1	**BD96**
Cable socket (dynamo cable)	1	**BD148**
Terminal (dynamo cable)	1	**BD149**
Cable socket (coil to contact breaker)	1	**BD150**
IGNITION CABLES.		
H.T. cable No. 1	1	**BD152**
H.T. cable No. 2	1	**BD153**
H.T. cable No. 3	1	**BD154**
H.T. cable No. 4	1	**BD151**
Cable, coil to contact breaker	1	**BD155**
Cable, switch board to coil	1	**BD156**
Cable, coil to distributor	1	**BD157**
STARTING CABLES.		
Cable, battery positive to starter switch	1	**BD185**
Cable, switch to starter	1	**BD186**
Cable, battery negative to frame	1	**BD160**

When ordering parts quote your car number.

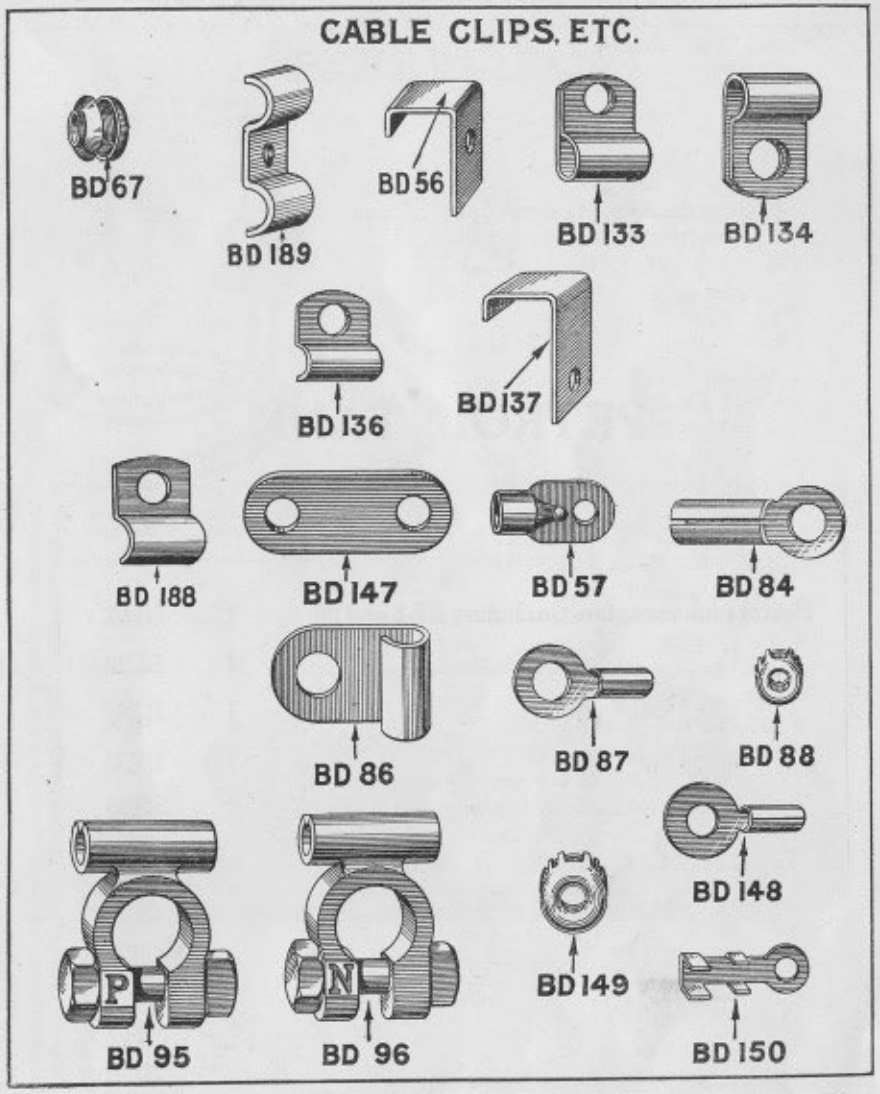


DESCRIPTION	Number per Car	Reference Number
LIGHTING CABLES.		
Cable, switchboard to near head lamp	1	**BD161**
Cable, switchboard to off head lamp	1	**BD162**
Cable, switchboard to tail lamp	1	**BD163**
HORN OPERATOR CABLES.		
Cable, switchboard to horn	1	**BD164**
Cable, horn to horn operating button	1	**BD165**
BATTERY, AND SWITCHBOARD CABLES.		
Cable, battery positive to switchboard	1	**BD166**
Cable, dynamo to switchboard	1	**BD167**
Cable, switchboard to cut-out	1	**BD168**

PETROL TANK

DESCRIPTION	Number per Car	Reference Number
Petrol tank complete (including BE 6 and 20)	1	**BE62**
Cap	1	**BE20**
Petrol tank strainer	1	**BE6**
Petrol tap	1	**BE36**
Petrol pipe (for carburetter type FZB) ...	1	**BE35**

When ordering parts quote your car number.

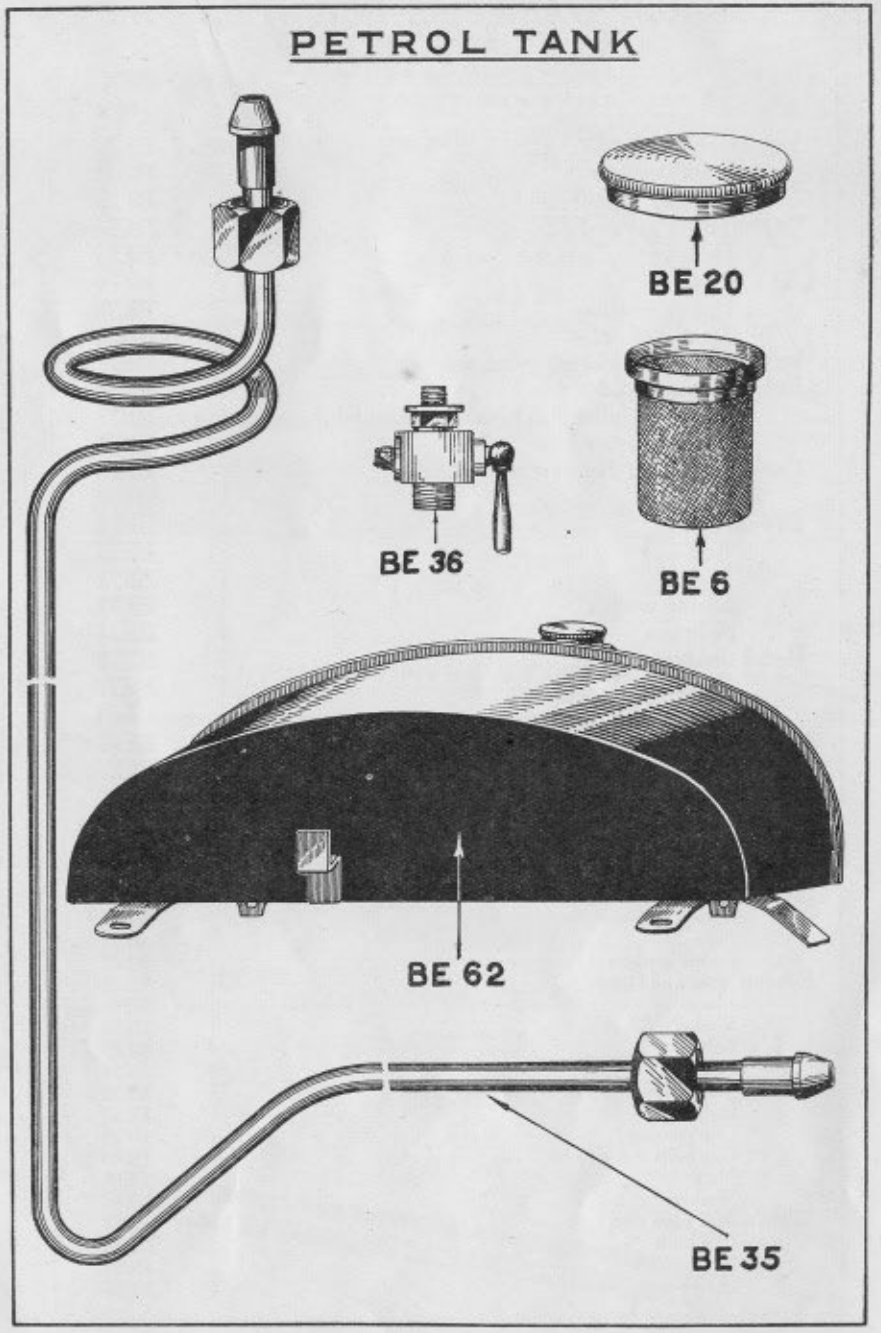


EXHAUST MANIFOLD, INDUCTION PIPE AND CARBURETTER

DESCRIPTION	Number per Car	Reference Number
Induction pipe	1	**BE21**
Joint washers	2	**BE22**
Packing washer	1	**BE23**
Carburetter (type FZB)	1	**BE34**
Bolts	2	**BE25**
Nuts	2	**BE26**
Spring washers	2	**BE27**
Joint washer	1	**BE28**
Induction and exhaust joint washer	1	**BE29**
Exhaust manifold	1	**BE30**
Set screw (inlet pipe to exhaust manifold)	1	**BE31**
Spring washer	1	**BE32**
Carburetter air flap swinging link	1	**BE65**
Rivet	1	**BE79**
Bracket	1	**BE66**
Bolt	1	**BE75**
Nut	1	**BE72**
Spring washer	1	**BE73**
Split pin	1	**BE74**
Hand control rod	1	**BE76**
Ferrule	1	**BE77**
Ring	1	**BE69**
Main control rod	1	**BE68**
Guide for instrument board	1	**BE78**

EXHAUST PIPE AND SILENCER

Silencer, including tail pipe and bracket	1	**BE87**
Bolts for silencer brackets	2	**BE47**
Nuts	2	**BE48**
Spring washers	2	**BE49**
Exhaust pipe and flange	1	**BE88**
Flange	1	**BE51**
Washer	1	**BE52**
Bolts	4	**BE53**
Nuts	4	**BE54**
Silencer inlet pipe clip	1	**BE56**
Strip	1	**BE57**
Clip packing	1	**BE58**
Clip bolts	2	**BE59**
Nuts	2	**BE60**
Washers	2	**BE61**
Silencer tail pipe clip	1	**BE83**
Clip bolts	2	**BE84**
Nuts	2	**BE85**
Spring washers	2	**BE86**


When ordering parts quote your car number.

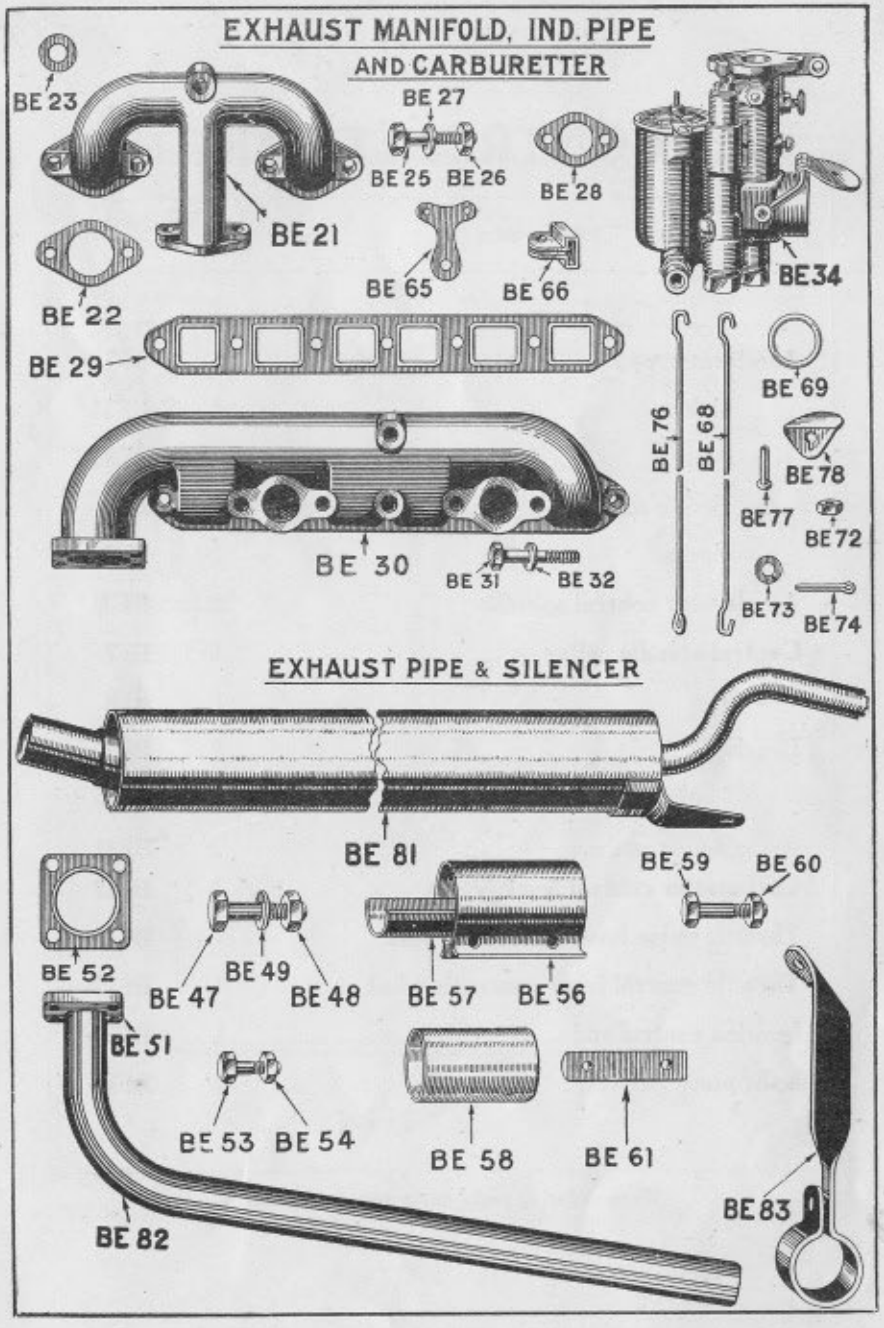

CONTROL GEAR

DESCRIPTION	Number per Car	Reference Number
Accelerator pedal	1	**BF1**
Bolt	1	**BF34**
Nut	1	**BE35**
Spring washer	1	**BF3**
Spring	1	**BF26**
Accelerator control spindle	1	**BF36**
Control spindle collar	1	**BF7**
Peg	1	**BF8**
Bearings	2	**BF28**
Nuts	2	**BF10**
Spring washers	2	**BF11**
Carburetter control lever	1	**BF12**
Throttle valve lever connecting link ...	1	**BF31**
Throttle control lever connecting link ...	1	**BF13**
Ignition control rod	1	**BF37**
Split pins	6	**BF17**


When ordering parts quote your car number.

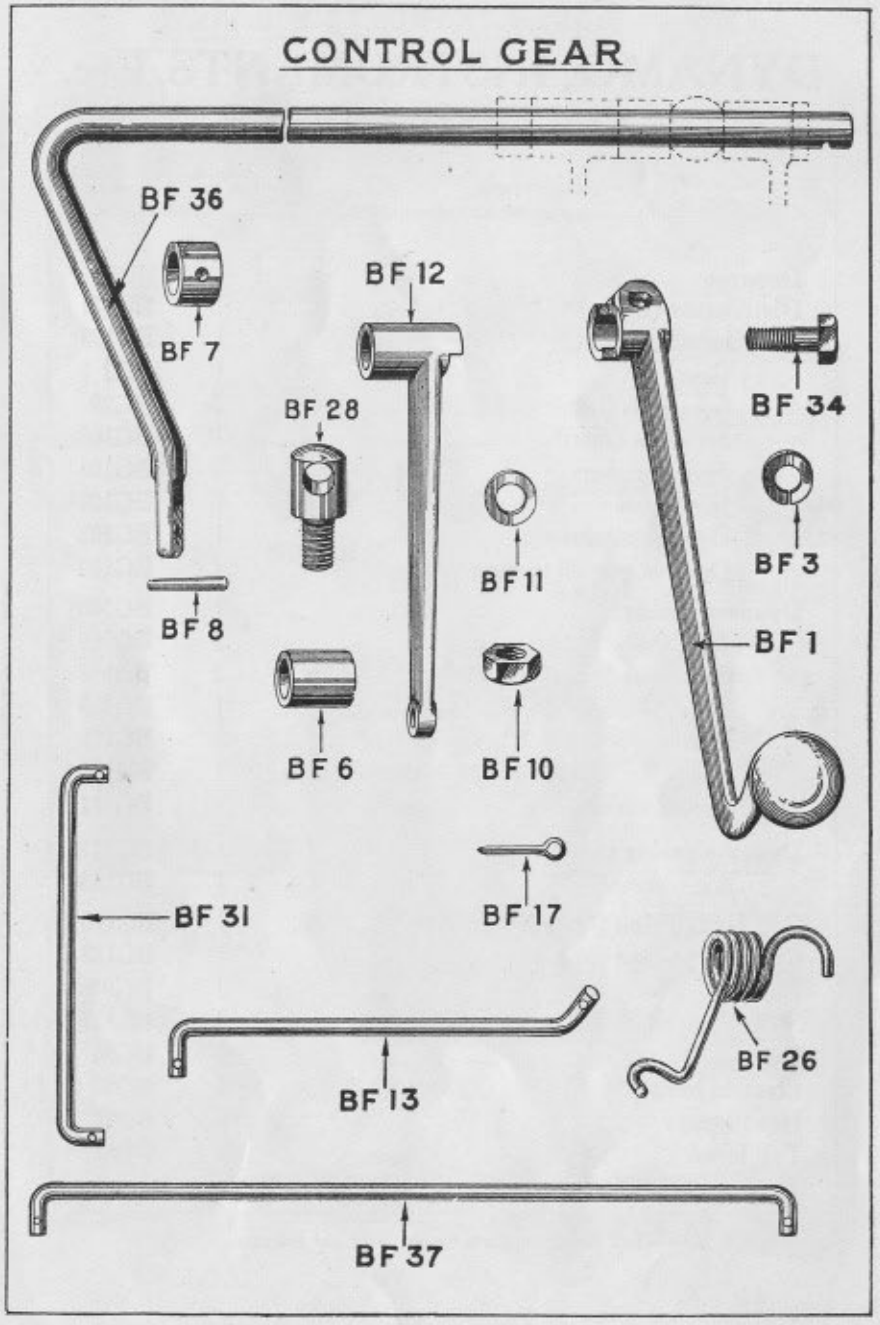

DYNAMO, INSTRUMENTS, Etc.

DESCRIPTION	Number per Car	Reference Number
Dynamo	1	**BG98**
Distributor (Lucas)	1	**BG121**
Distributor (M.L.)	1	**BG123**
Gear	1	**BG2**
Set screws (long)	2	**BG99**
Set screw (short)	1	**BG100**
Spring washers	3	**BG101**
Joint washer	1	**BG102**
Dynamo oil thrower	1	**BG103**
Dynamo gear oil thrower	1	**BG104**
Dynamo casing	1	**BG105**
Joint washer	1	**BG106**
Set screws	2	**BG107**
Set screw	1	**BG108**
Stud	1	**BG109**
Nut	1	**BG110**
Spring washers	4	**BG111**
Dynamo casing cover	1	**BG112**
Joint washer	1	**BG113**
Coil for ignition (Lucas)	1	**BG114**
Coil for ignition (M.L.)	1	**BG122**
Battery	1	**BG80**
Switch board	1	**BG115**
Cut-out	1	**BG81**
Electric horn	1	**BG83**
Head lamps	2	**BG97**
Tail lamp	1	**BG87**

When ordering parts quote your car number.

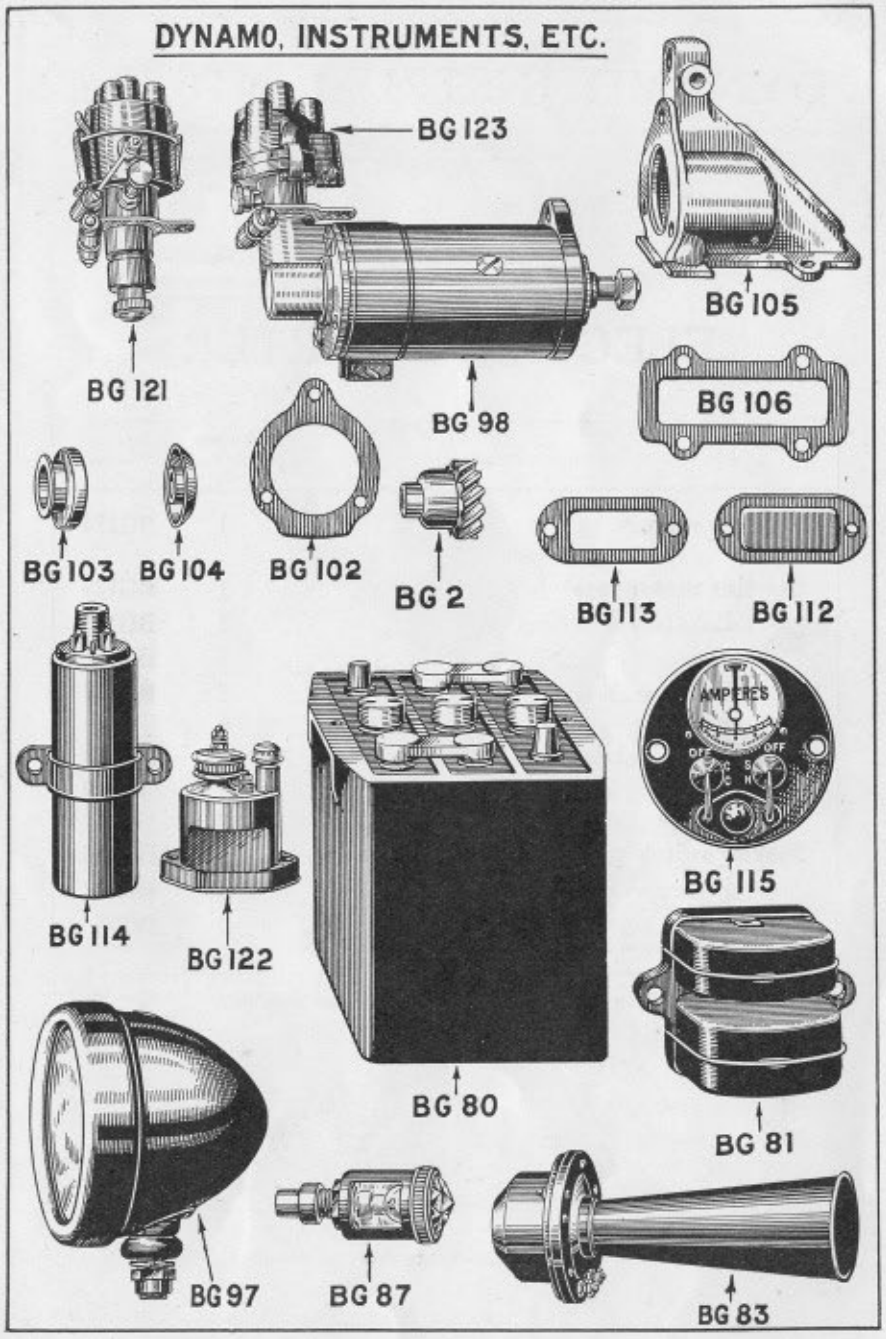


ELECTRIC STARTER


DESCRIPTION	Number per Car	Reference Number
Starting motor	1	**BG124**
Starting motor case	1	**BG125**
Bolts (motor to case)	2	**BG130**
Nuts	2	**BG131**
Spring washers	2	**BG132**
Switch terminal cover	1	**BG128**
Screw to starter	1	**BG129**
Starter switch	1	**BG126**
Set screws to case	3	**BG127**
Spring washers	3	**BG75**

When ordering parts quote your car number.

ELECTRIC STARTER

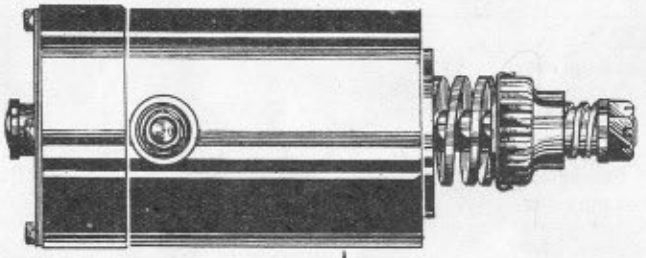

BG 124

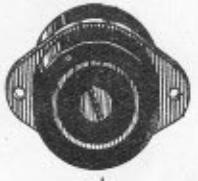


BG 126



BG 129



BG 127

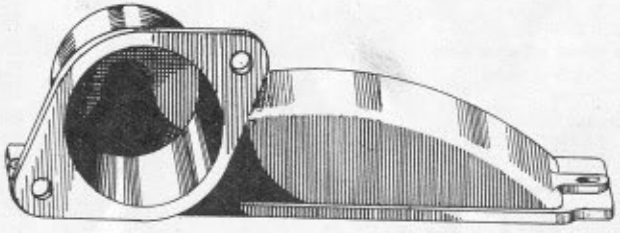


BG 125

GEAR BOX

DESCRIPTION	Number per Car	Reference Number
Gear box	1	BH93
Gear box front cover	1	BH124
Spring ring	1	BH127
Joint washer	1	BH125
Screws	6	BH4
Spring washers	6	BH111
Packing washers	1 or as required	BH112
Gear box top cover	1	BH116
Joint washer	1	BH6
Studs	4	BH7
Nuts	4	BH8
Spring washers	4	BH9
Gear box inspection cover	1	BH18
Screws	2	BH19
Gear box rear cover	1	BH128
Joint washer	1	BH95
Studs	4	BH96
Studs	3	BH110
Nuts	7	BH13
Spring washers	7	BH14
Speedometer driving gear	1	BH100
Peg for gear	1	BH101
Speedometer driving spindle	1	BH102
Bush for spindle	1	BH109
Thrust button for spindle	1	BH104
Speedometer	1	BG91
Flexible drive complete	1	BG92
Change speed lever	1	BH113
Change speed lever (coupe only)	1	BH114
Knob	1	BH115
Lower ball seat	1	BH117
Lock ring	1	BH118
Locking screw	1	BH119
Spring washer	1	BH120
Cover for drain hole	1	BH28
Washer	1	BH29
Oil plugs	2	BH30
Washers	2	BH31
Change speed selector arm	1	BH32
Fulcrum plates	2	BH33
Screws	4	BH34
Gear change forks	2	BH123
Springs	2	BH36
Balls	2	BH37
1st speed and reverse fork rod	1	BH121
Peg	1	BH122
2nd speed and third speed fork rod	1	BH39
Packing shims	4	BH40
Packing shim	1	BH41


When ordering parts quote your car number.

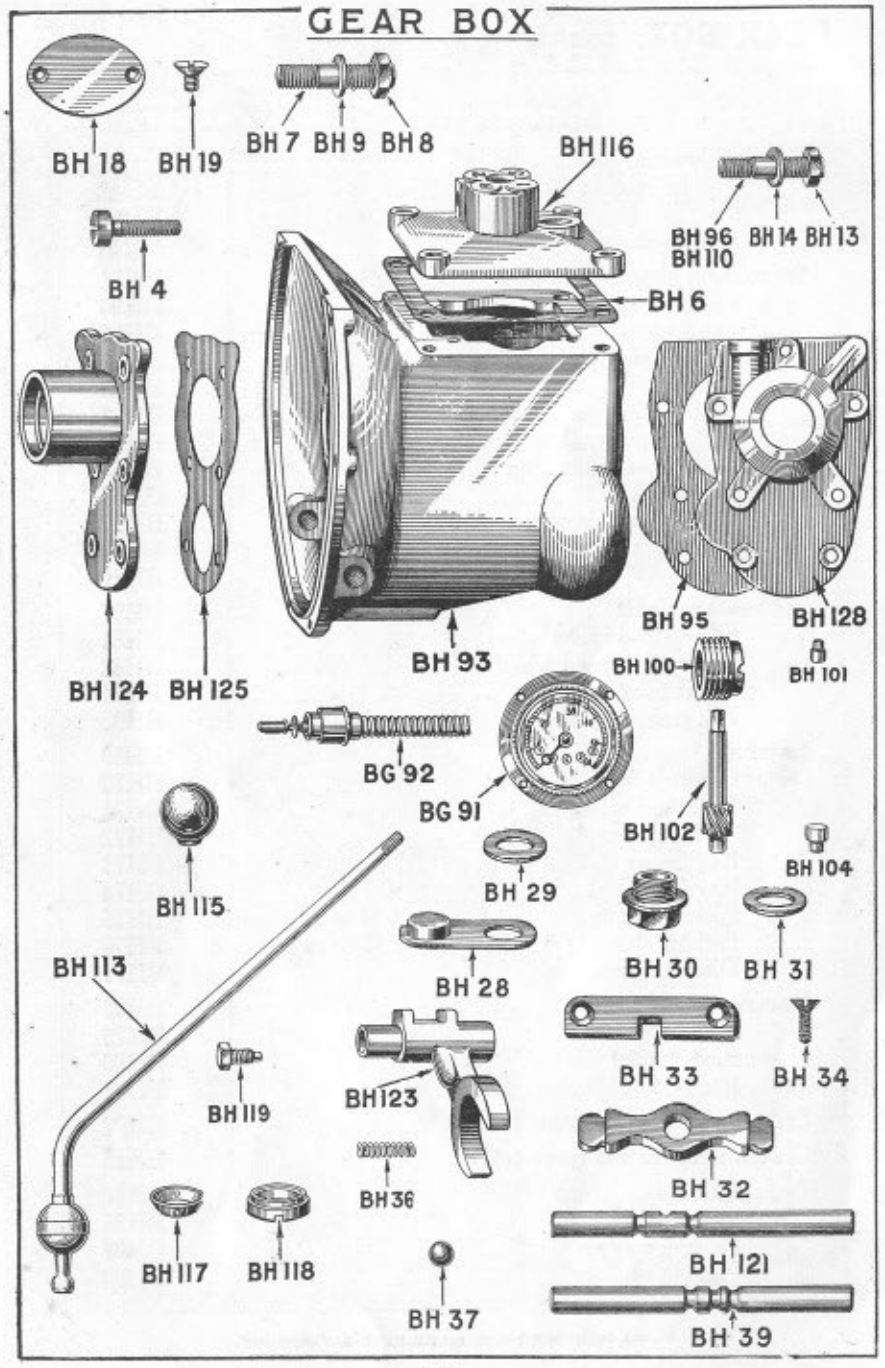

GEAR BOX, contd.

DESCRIPTION	Number per Car	Reference Number
Bearing journal		
For 1st motion shaft 1¼in.×2⅜in.×11/16in. ...	1	**BH42**
For 3rd motion shaft, 1in.×2½in.×¾in. ...	1	**BH43**
For lay shaft ¾in.×2in.×11/16in.	2	**BH44**
1st motion shaft, including BH60	1	**BH51**
Grub screw	1	**BH50**
Oil thrower	1	**BH52**
Packing washer	1	**BH112**
Ring	1	**BH53**
Spring Ring	1	**BH127**
Dished washer (rear face of roller race) ...	1	**BH126**
Roller race (outer ring only)	1	**BH55**
Rollers	17	**BH56**
Plain washer (front face of roller race) ...	1	**BH57**
Felt ring	1	**BH58**
Bush	1	**BH60**
3rd motion shaft	1	**BH97**
Sliding 2nd speed wheel	1	**BH61**
Sliding 1st speed wheel	1	**BH62**
Bearing washer	1	**BH64**
Felt ring	1	**BH98**
Layshaft	1	**BH69**
Constant mesh wheel	1	**BH70**
2nd speed wheel	1	**BH71**
1st speed wheel	1	**BH72**
Key (long)	1	**BH73**
Key (short)	1	**BH74**
Packing shims	4 or as required	**BH75**
Packing shims	1 or as required	**BH76**
Distance piece	1	**BH77**
Reverse wheel	1	**BH78**
Spindle	1	**BH79**
Bush (short)	1	**BH80**
Bush (long)	1	**BH81**
Clutch withdrawal lever (near)	1	**BH82**
Clutch withdrawal lever (off)	1	**BH83**
Pedal spindle	1	**BH84**
Taper pins	2	**BH85**
Packing washers	4	**BH87**
Packing washers	2	**BH88**


When ordering parts quote your car number.

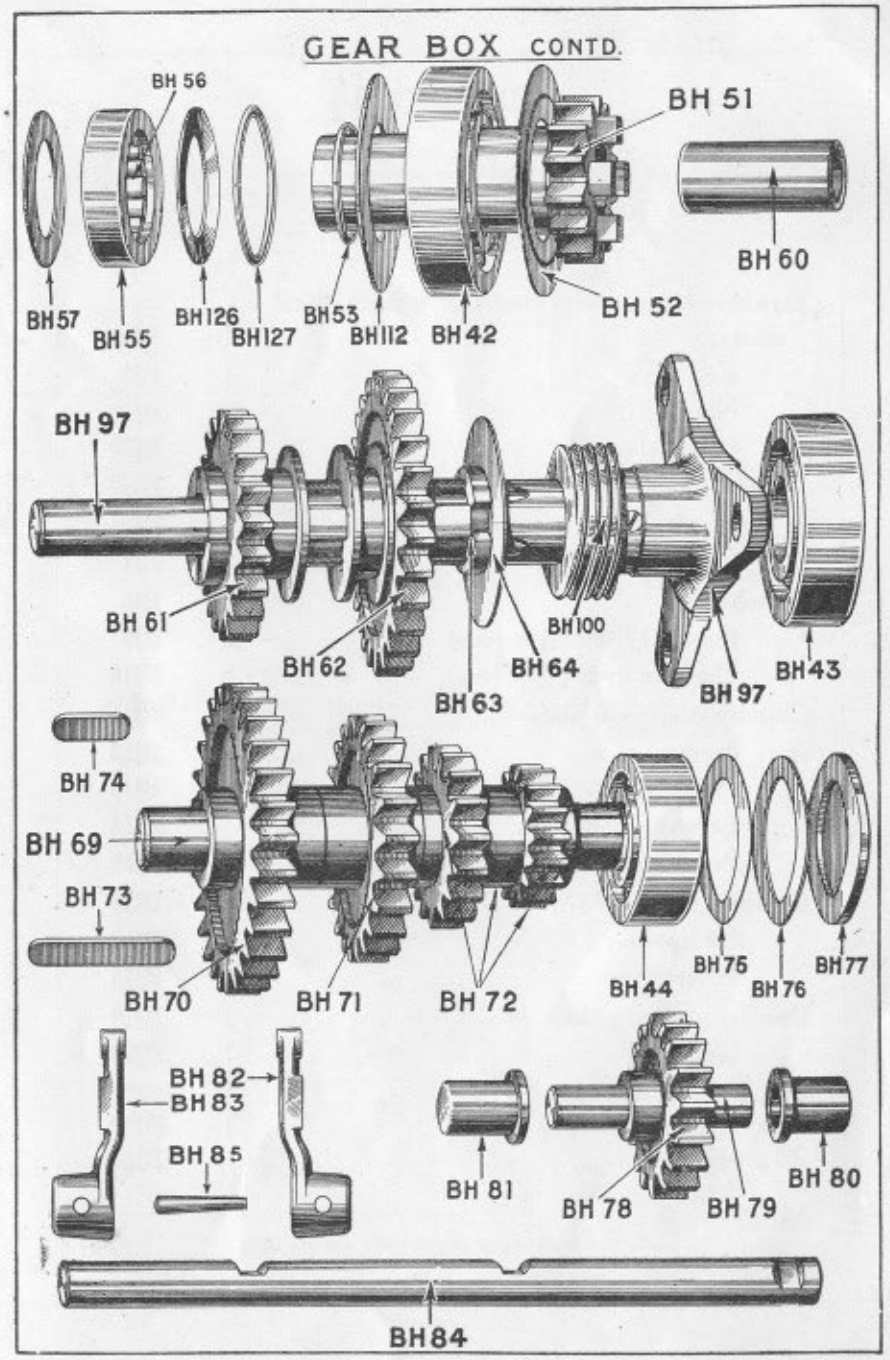

CLUTCH

DESCRIPTION	Number per Car	Reference Number
Flywheel, for cars with electrical or mechanical starter	1	**BJ28**
Key	1	**BJ2**
Nut	1	**BJ29**
Lockwasher	1	**BJ30**
Clutch plate	1	**BJ5**
Centre	1	**BJ26**
Rivets	6	**BJ7**
Clutch rings	2	**BJ8**
Flat head rivets ($\frac{5}{16}$in. long)	6	**BJ9**
Flat head rivets ($\frac{3}{16}$in. long)	6	**BJ10**
Clutch withdrawal plate	1	**BJ11**
Springs	12	**BJ12**
Pins	3	**BJ13**
Levers	3	**BJ14**
Pegs	3	**BJ15**
Flywheel cover	1	**BJ24**
Set screws	6	**BJ17**
Lockwashers	6	**BJ18**
Bearing pressure plate	1	**BJ19**
Washer	1	**BJ20**
Clutch thrust bearing	1	**BJ21**
Housing (including oil pipe)	1	**BJ22**
Oil pipe	1	**BJ27**


When ordering parts quote your car number.

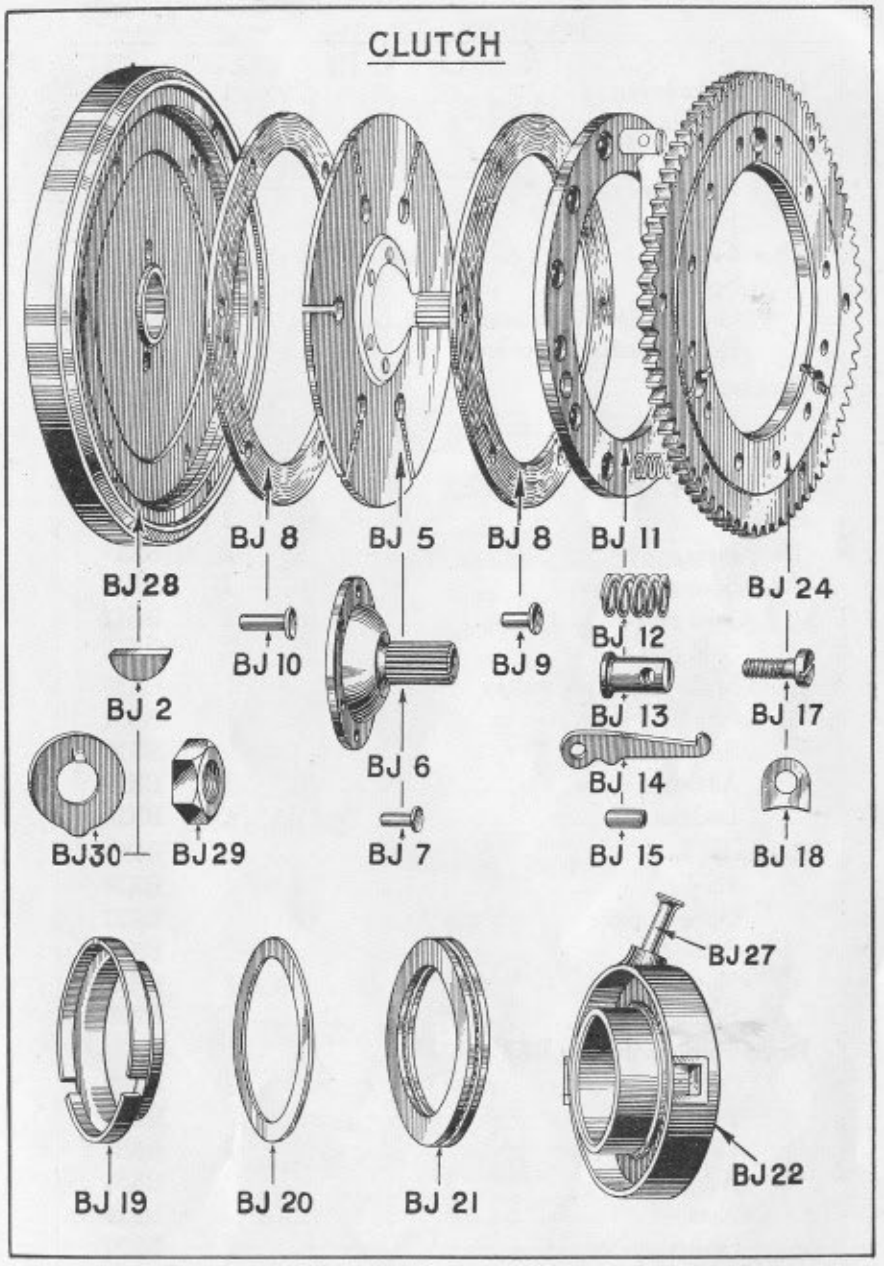

HAND BRAKE

DESCRIPTION	Number per Car	Reference Number
Handbrake lever	1	**BK1**
Handle	1	**BK2**
Trigger	1	**BK39**
Snap-head rivet	1	**BK4**
Rod	1	**BK5**
† Catch	1	**BK41**
† Spring	1	**BK42**
Guide	1	**BK40**
Rivets (catch guide to lever)	1	**BK9**
Bracket	1	**BK10**
Bolts	2	**BK11**
Nuts	2	**BK12**
Spring washers	2	**BK13**
Pivots	2	**BK14**
Nuts	2	**BK15**
Spring washers	2	**BK16**
Joint pins	2	**BK17**
Split pins	2	**BK19**
Hand brake adjusting pulley	1	**BK20**
Adjusting screw boss	1	**BK21**
Snap-head rivets	3	**BK22**
Adjusting screw	1	**BK23**
Locknut	1	**BK24**
Ratchets	2	**BK25**
Pivot	1	**BK38**
Distance piece	1	**BK27**
Bolts	2	**BK28**
Nuts	2	**BK29**
Spring washers	2	**BK30**
Brake rope, including BK32 to 37	1	**BK31**
Spikes	2	**BK32**
Ends	2	**BK33**
Cam lever sockets	2	**BK34**
Bolts	2	**BK35**
Nuts	2	**BK36**
Spring washers	2	**BK37**


When ordering parts quote your car number

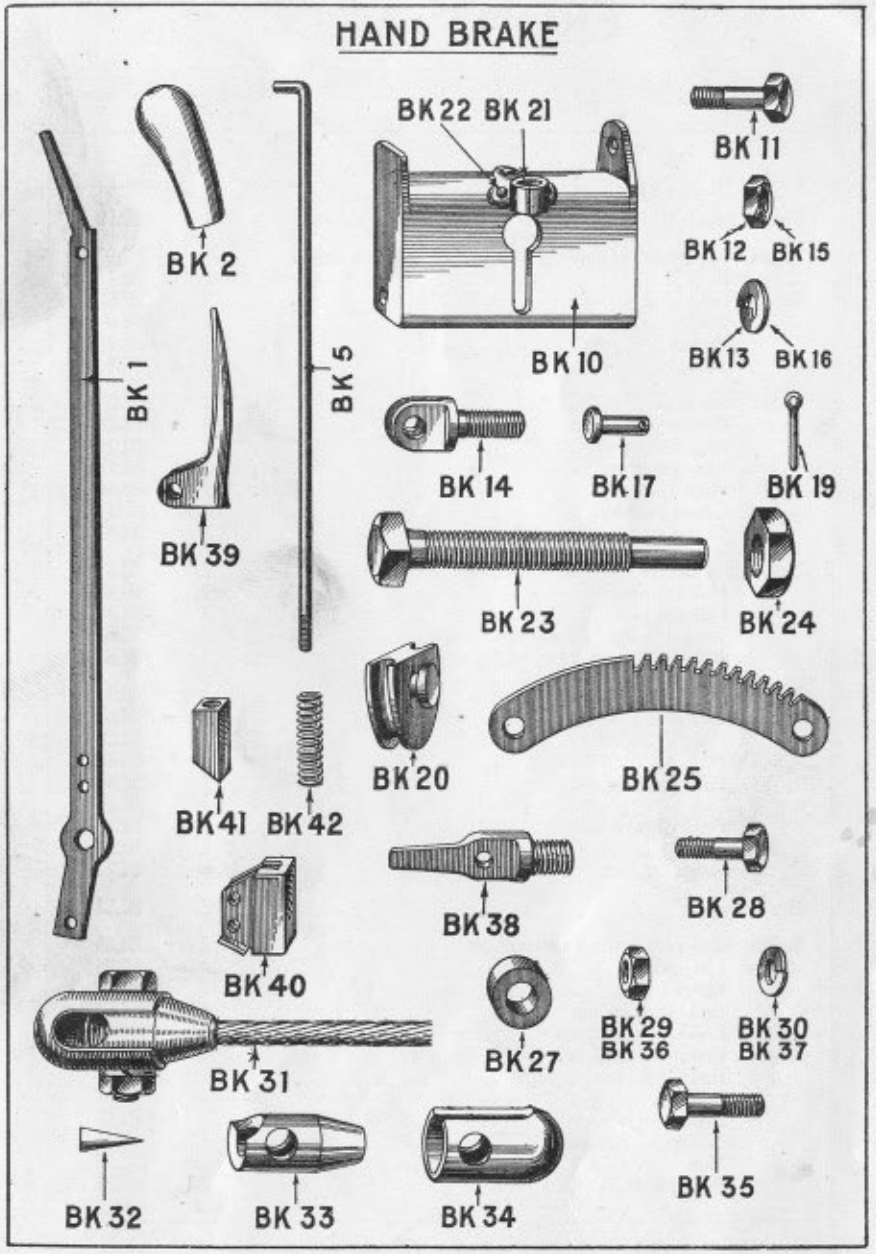

FRONT AXLE

DESCRIPTION	Number per Car	Reference Number
Front axle	1	**BL1**
Swivel axle (off) including BL7 and 8 and dust shield	1	**BL59**
Swivel Axle (near) including BL7 and 8 and dust shield	1	**BL60**
Nuts	2	**BL4**
Split pins	2	**BL5**
Washers	2	**BL6**
Bushes (top)	2	**BL7**
Bushes (bottom)	2	**BL8**
Swivel axle pins	2	**BL9**
Cotters	2	**BL10**
Nuts for cotters	2	**BL11**
Spring washers	2	**BL12**
Plugs	2	**BL48**
Grease Nipples	2	**BX1**
Grease gun connection elbow nipple	2	**BR51**
Hub felt housings	2	**BL61**
Hub felt rings	2	**BL62**
Hub felt plate	2	**BL17**
Journal bearings, $\frac{3}{4}$in.$\times 1\frac{7}{8}$in.$\times \frac{3}{16}$in.	2	**BL41**
Journal bearings, $1\frac{1}{4}$in.$\times 2\frac{3}{4}$in.$\times \frac{11}{16}$in.	2	**BL63**
Front wheel hubs	2	**BL15**
Clamping screws	6	**BL67**
Distance pieces	2	**BL20**
Plugs	2	**BL45**
Paper washers	2	**BL46**
Hub caps	2	**BL21**
Road wheel dowels	6	**BL22**
Bolts	6	**BL23**
Rivets	6	**BL24**
Brake drums	2	**BL53**
Brake shoes with linings rivetted on	2 prs.	**BL54**
Linings	4	**BL55**
Rivets	16	**BL56**
Brake shoe springs	4	**BL58**
Brake shoe pivot pin	2	**BL68**
Brake cam (off)	1	**BL31**
Brake cam (near)	1	**BL32**
Bushes	2	**BL33**
Brake cam levers	2	**BL57**
Cotters for cam levers	2	**BL35**
Nuts	2	**BL36**
Spring washers	2	**BL37**


When ordering parts quote your car number.

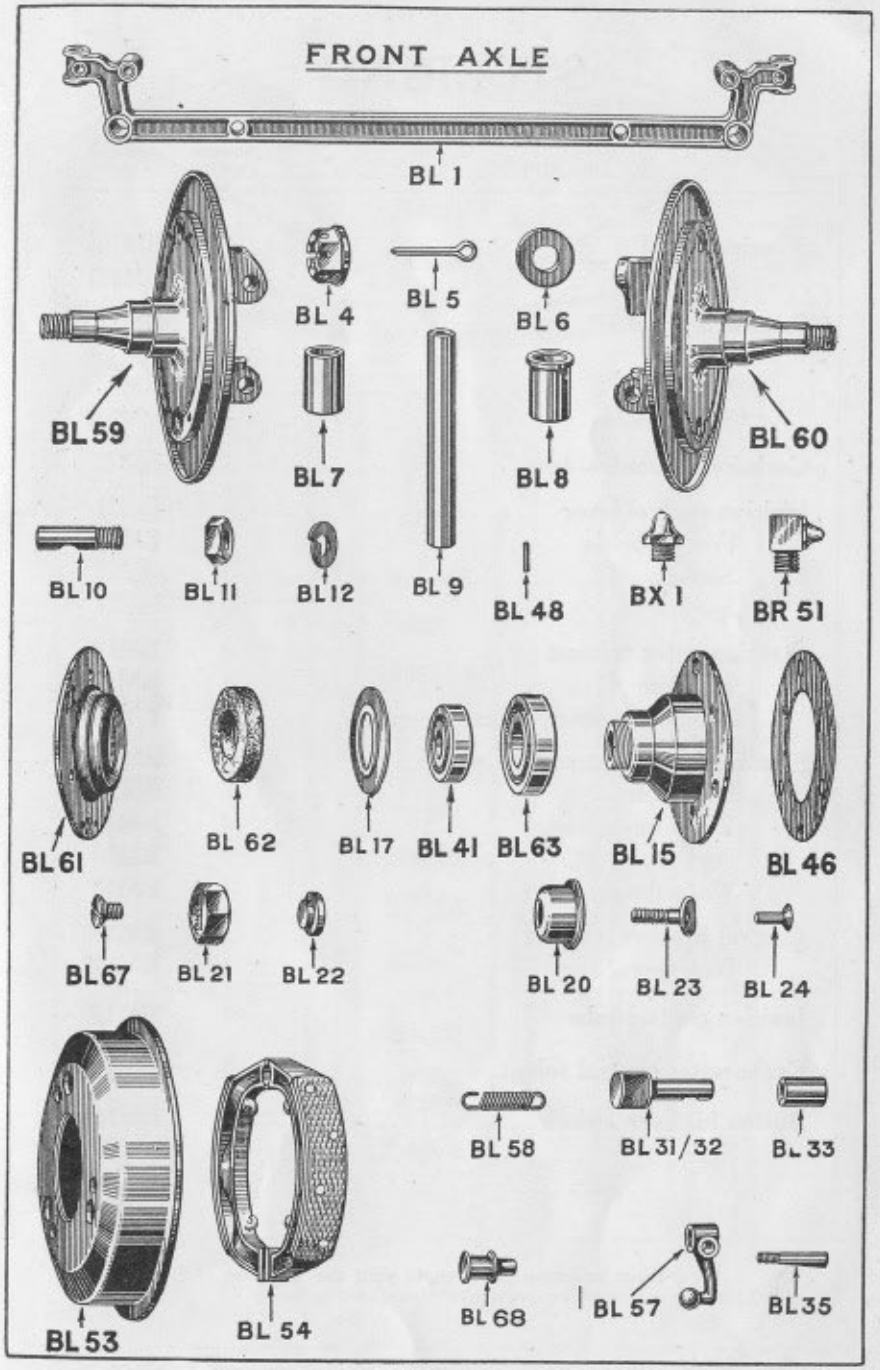

STEERING

DESCRIPTION	Number per Car	Reference Number
Steering wheel	1	**BM126**
Nut	1	**BM127**
Control bracket	1	**BM128**
Bolt	1	**BM7**
Nut	1	**BM8**
Spring washer	1	**BM9**
Carburetter control lever	1	**BM72**
Ignition control lever	1	**BM11**
Friction blocks	2	**BM12**
Screws	2	**BM13**
Springs	2	**BM14**
Steering outer column	1	**BM131**
Felt bush	1	**BM133**
Felt bush support washer	1	**BM134**
Steering inner column and worm	1	**BM135**
Bush (bottom)	1	**BM22**
Worm thrust washer	1	**BM41**
Peg	1	**BM20**
Worm thrust washer	1	**BM42**
Control bracket tube	1	**BM136**
Bush (brass)	1	**BM142**
Ignition control tube	1	**BM130**
Carburetter control tube	1	**BM129**
Button for horn switch	1	**BM74**
Spring	1	**BM75**


When ordering parts quote your car number.

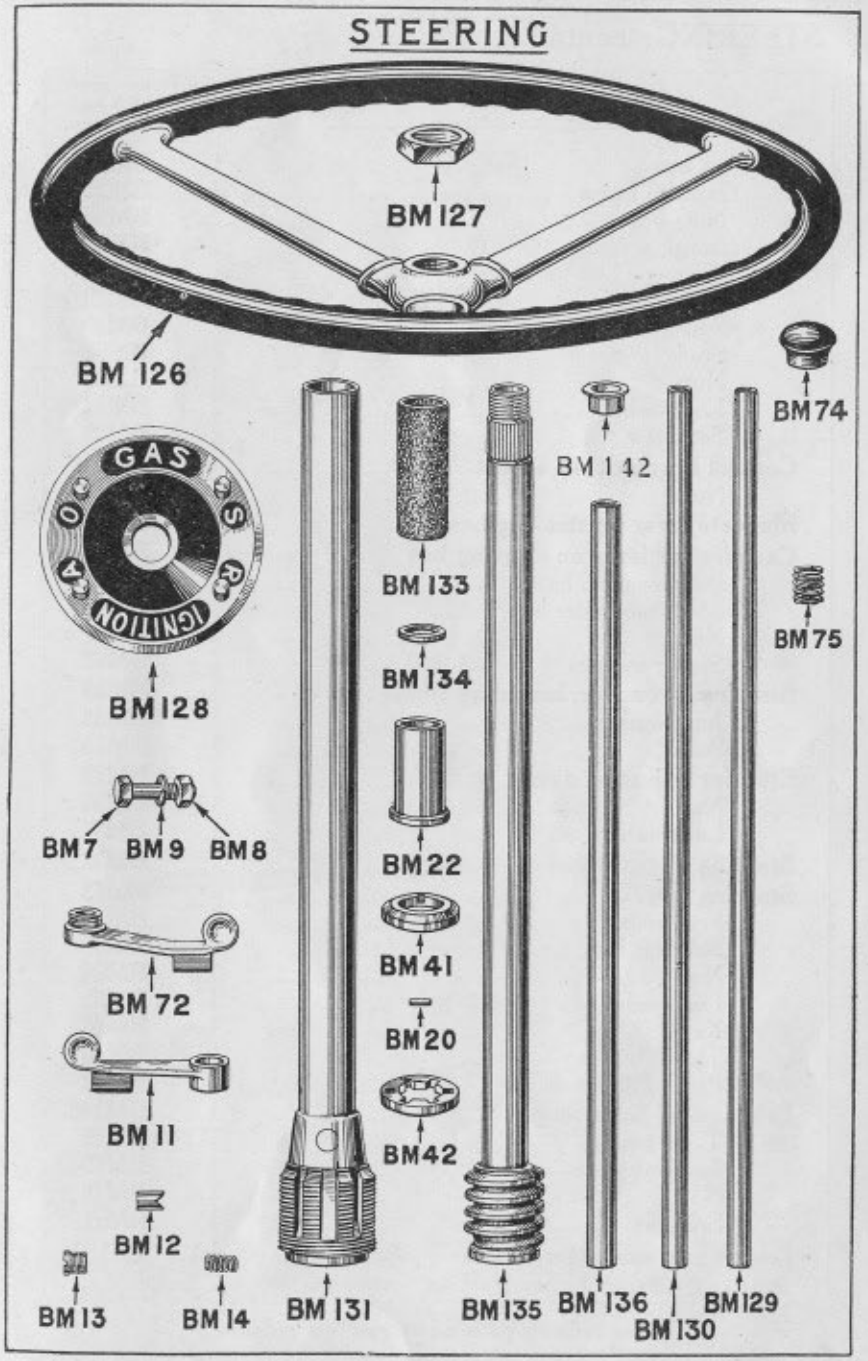

STEERING, contd.

DESCRIPTION	Number per Car	Reference Number
Steering box	1	BM24
Bolts to frame	2	BM25
Nuts	2	BM26
Spring washers	2	BM27
Clamping bolt for socket	1	BM28
Nut	1	BM29
Spring washer	1	BM30
Studs for cover	3	BM50
Nuts	3	BM51
Lockwashers	2	BM52
Set screw	1	BM23
Control bracket tube socket	1	BM47
Nut	1	BM48
Magneto lever on steering box	1	BM57
Carburetter lever on steering box	1	BM59
Bolt, magneto lever	1	BM58
Bolt, carburetter lever	1	BM60
Nuts	2	BM61
Spring washers	2	BM62
Steering box cover, including BM53	1	BM49
Joint washer	1	BM56
Bush	1	BM53
Stud for adjusting cover	1	BM33
Nut	1	BM34
Lockwasher	1	BM37
Steering worm wheel	1	BM32
Steering lever	1	BM63
Felt washer	1	BM54
Felt housing	1	BM55
Nut	1	BM64
Lockwasher	1	BM65
Key	1	BM66
Thrust button	1	BM43
Packing shims	3	BM44
Brake pedal fulcrum pin	1	BM140
Taper washer	1	BM68
Locating plate	1	BM69
Nut	1	BM70
Split pin	1	BM71
Grease gun connector nipple	1	BX1


When ordering parts quote your car number.

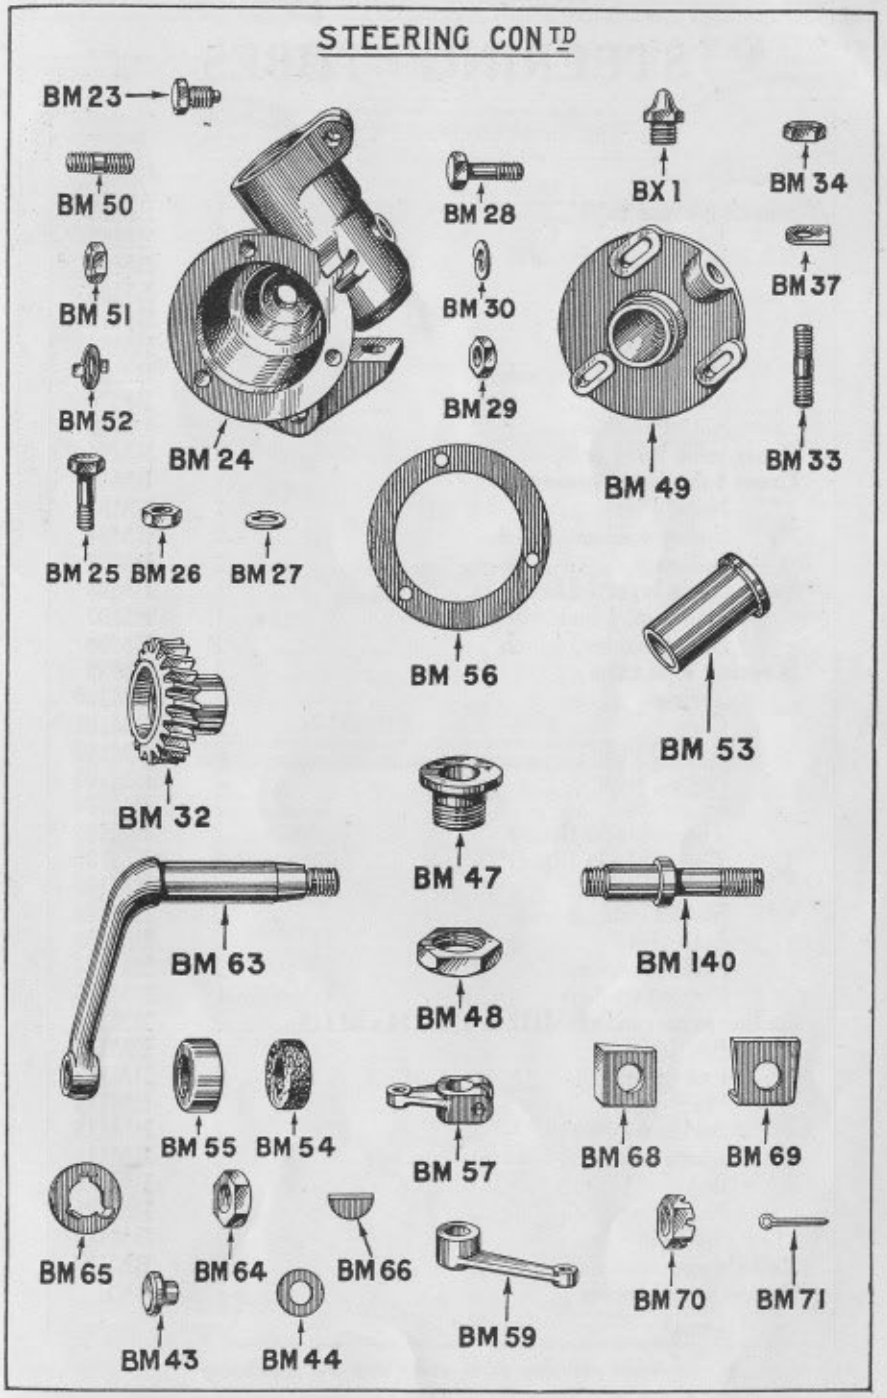

STEERING TUBES

DESCRIPTION	Number per Car	Reference Number
Steering cross tube	1	**BM81**
Jaws	2	**BM82**
Pins	2	**BM84**
Cotters	2	**BM85**
Nuts	2	**BM86**
Spring washers	2	**BM87**
Bolt for jaw (near side)	1	**BM88**
Nut	1	**BM89**
Spring washer	1	**BM90**
Cross tube lever (off)	1	**BM91**
Cross tube lever (near)	1	**BM92**
Nuts, ½ inch.	2	**BM93**
Spring washers, ½ inch	2	**BM94**
Bushes	2	**BM95**
Swivel axle lever (side tube)	1	**BM96**
Plain nut, ½ inch	1	**BM97**
Spring washer, ½ inch	1	**BM98**
Steering side tube	1	**BM99**
Springs	2	**BM100**
Caps	2	**BM101**
Bolts, ¼ inch	2	**BM102**
Nuts, ¼ inch	2	**BM103**
Split pins	2	**BM104**
Thrust blocks (loose)	2	**BM105**
Thrust blocks (fixed)	2	**BM106**
Ball-pins		**BM107**
Slotted nuts, 5/16 inch	2	**BM108**
Split pins	2	**BM109**
Packing washers	2	**BM124**
Packing washers ... ... as required		**BM125**
Radius arms, with BM112 or 113, 114 and 115 ...	2	**BM110**
End (offside)	1	**BM112**
End (nearside)	1	**BM113**
Plain nuts	2	**BM114**
Spring washers	2	**BM115**
Ball sockets	2	**BM116**
Bolt	1	**BM120**
Nut	1	**BM121**
Split pin	1	**BM122**
Ball flange	1	**BM123**
Grease gun nipples	—	**BX1**


When ordering parts quote your car number.

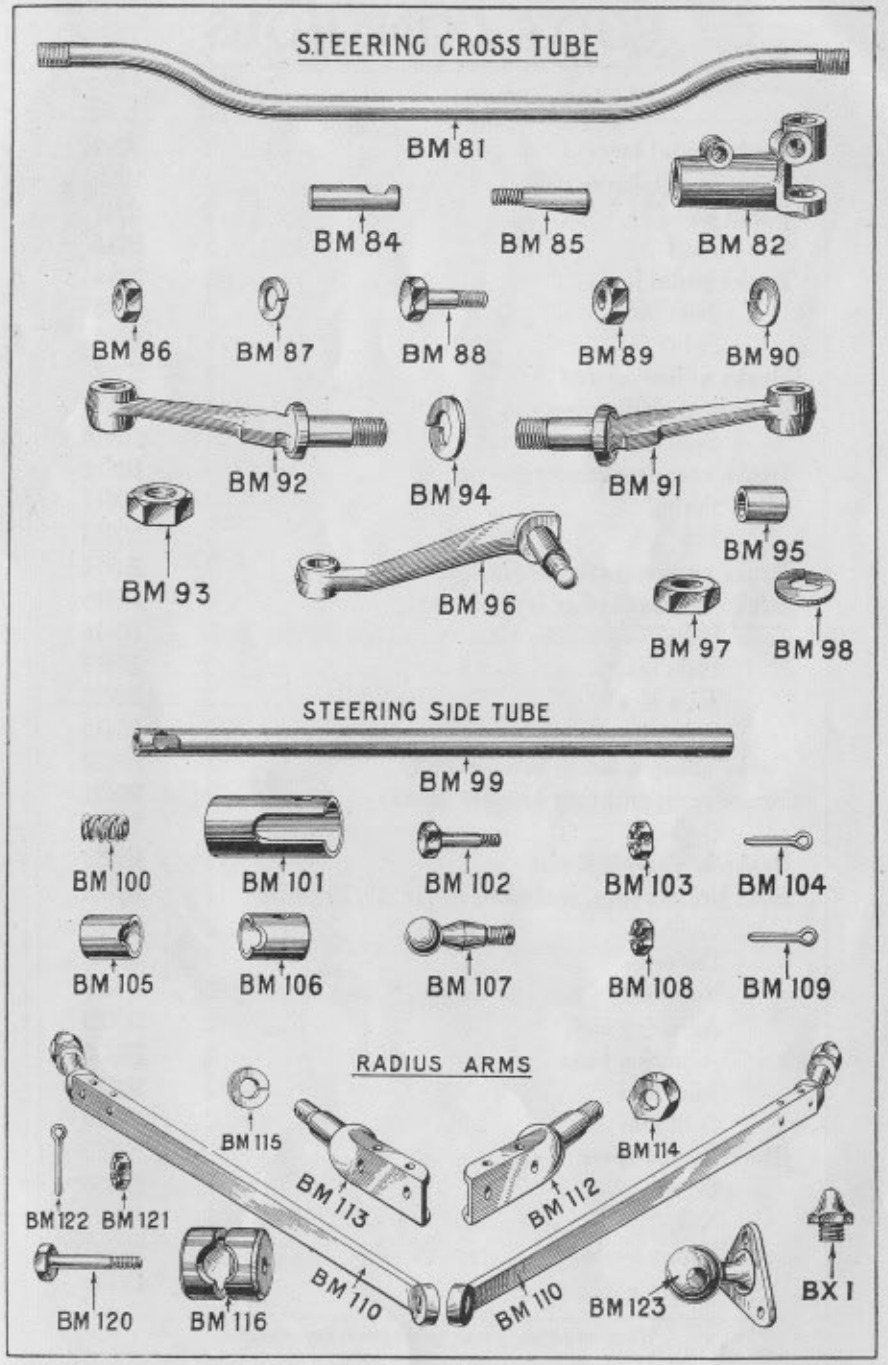

FOOT CONTROLS

DESCRIPTION	Number per Car	Reference Number
Brake pedal lever	1	**BN44**
Nut (fulcrum pin)	1	**BN2**
Pedal pads	2	**BN3**
Nuts	2	**BN4**
Brake pedal jaw	1	**BN5**
Joint pin	1	**BN6**
Split pin	1	**BN7**
Brake adjusting rod	1	**BN8**
Rear brake adjusting nut	1	**BN9**
Split pin	1	**BN10**
Brake compensating tube	1	**BN11**
Spring	1	**BN12**
Peg	1	**BN13**
Brake compensating lever (off)	1	**BN14**
Brake compensating lever (near)	1	**BN15**
Bolts	2	**BN16**
Plain nuts	2	**BN17**
Joint pins	2	**BN18**
Split pins	2	**BN19**
Brake compensating bracket (off)	1	**BN20**
Brake compensating bracket (near)	1	**BN21**
Bushes	2	**BN22**
Brake lever swivel pin	1	**BN23**
Rear brake ropes, including BN18, 19, 25 to 34	2	**BN24**
Guides	2	**BN25**
Locknuts	2	**BN26**
Rope ends	2	**BN27**
Adjusting ends	2	**BN29**
Adjusting forks	2	**BN30**
Joint pins	2	**BN18**
Split pins	2	**BN19**
Clutch pedal lever	1	**BN35**
Cotter	1	**BN36**
Nut	1	**BN37**
Spring washer	1	**BN38**
Spring	1	**BN39**


When ordering parts quote your car number.

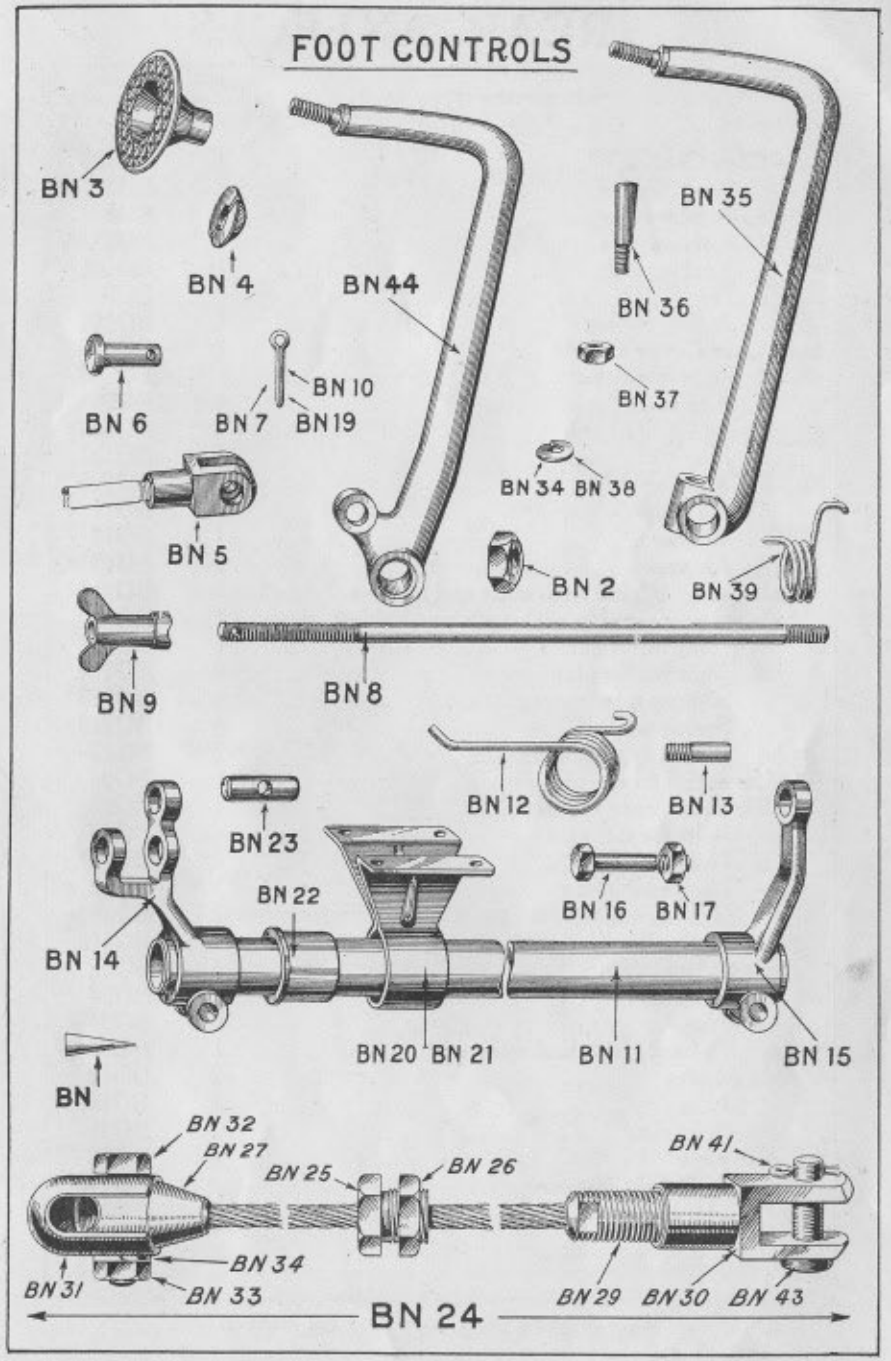

REAR AXLE

DESCRIPTION	Number per Car	Reference Number
Axle Case Centre	1	BO100
Joint Washer	2	BO2
Setscrews	12	BO8
Lockwashers	12	BO7
Locking bolt	1	BO101
Nut	1	BO9
Spring washer	1	BO102
Axle Case Cover Plate	1	BO103
Joint Washer	1	BO104
Setscrews	4	BO105
Spring washers	4	BO106
Plug	1	BO107
Washer	1	BO108
Oil Plug	1	BO11
Washer	1	BO12
Air vent	1	BO13
Axle case—offside with ends and bushes ...	1	BO111
Axle case—nearside with ends and bushes ...	1	BO112
Adjustment covers	2	BO113
Joint washers for covers	2	BO114
Setscrews for covers	4	BO115
Spring washers	4	BO116
Bushes for axle case	2	BO23
Differential case—offside	1	BO94
Differential case—nearside	1	BO95
Bolts for diff case	6	BO96
Nuts	6	BO97
Lockwashers	3	BO98
Ball bearings—$1\frac{1}{4}\times 2\frac{3}{4}\times \frac{11}{16}\times \frac{21}{32}$ ...	2	BO109
Adjusting collar	2	BO110
Differential pinion	6	BO32
Spindles	6	BO93
Pegs	6	BO34
Crown wheel (supplied only with BP88) ...	1	BO99
Axle Shafts	2	BO18
Nuts	2	BO19
Split pins	2	BO21
Keys	2	BO22
Axle Shaft Felt Housing	2	BO118
Felt rings	2	BO43
Covers	2	BO120
Spring rings	2	BO119


When ordering parts quote your car number.

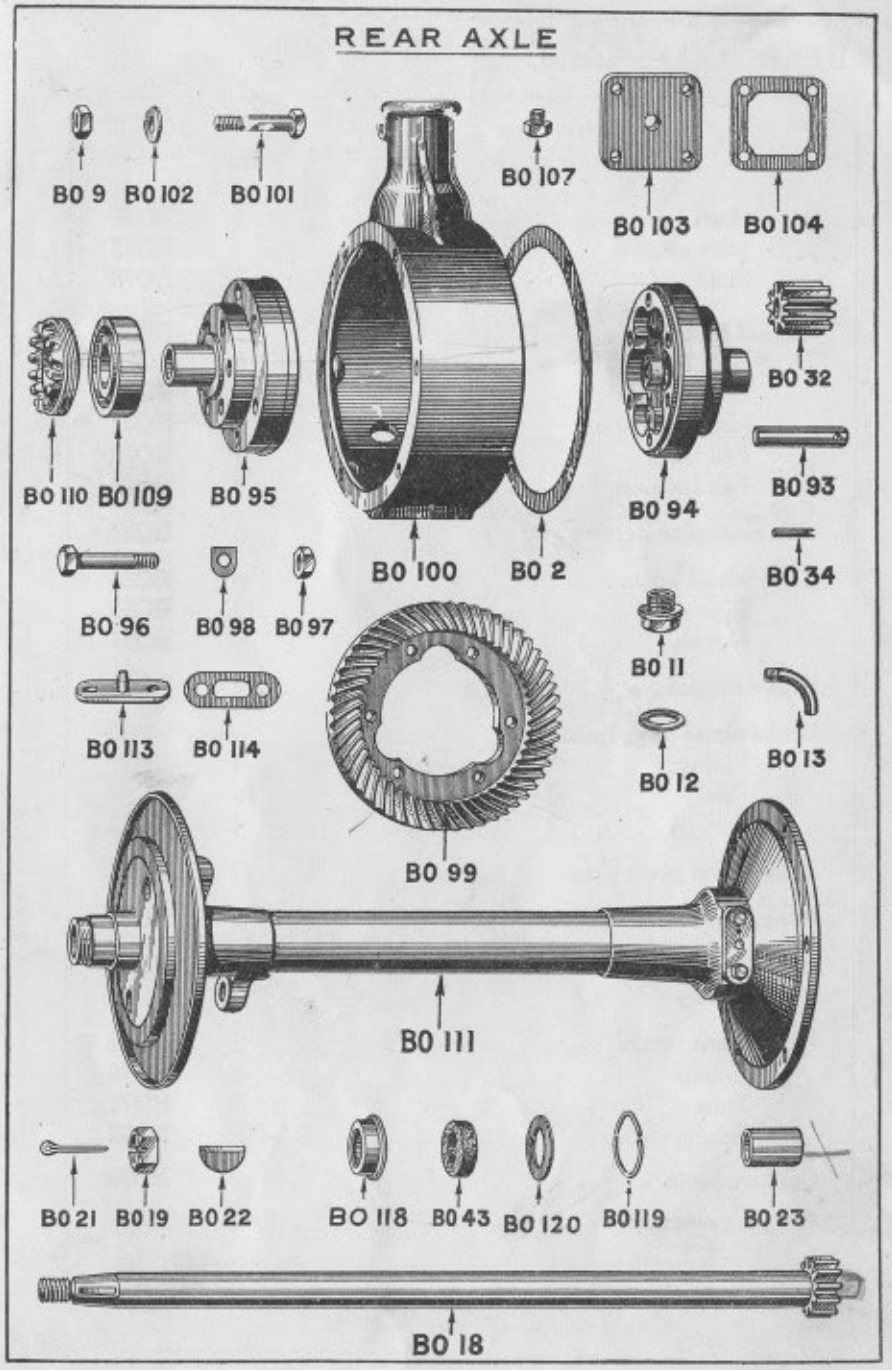

REAR AXLE, contd.

DESCRIPTION	Number per Car	Reference Number
Rear wheel hubs	2	**BO45**
Joint washers	2	**BO75**
Plugs	2	**BO78**
Journal ball bearings—$1\frac{1}{4}\times 2\frac{3}{4}\times \frac{11}{16}$	2	**BO89**
Nuts for hubs	2	**BO52**
Lockwashers	2	**BO53**
Hub felt plates	2	**BO47**
Felt rings	2	**BO88**
Felt housings	2	**BO87**
Hub clamping screws	6	**BO92**
Road wheel bolts	6	**BO54**
Rivets	12	**BO55**
Dowels	6	**BO57**
Brake drums	2	**BO79**
Brake shoes with linings	2 pairs	**BO80**
Linings	4	**BO81**
Rivets	16	**BO82**
Springs	4	**BO83**
Brake shoe pivot pins	2	**BO77**
Brake cam—offside	1	**BO66**
Brake cam—nearside	1	**BO67**
Bushes	2	**BO68**
Brake cam levers	2	**BO84**
Cotters	2	**BO70**
Nuts	2	**BO71**
Spring washers	2	**BO72**
Oil Conductors	2	**BO74**
Grease gun nipples	2	**BX1**


When ordering parts quote your car number.

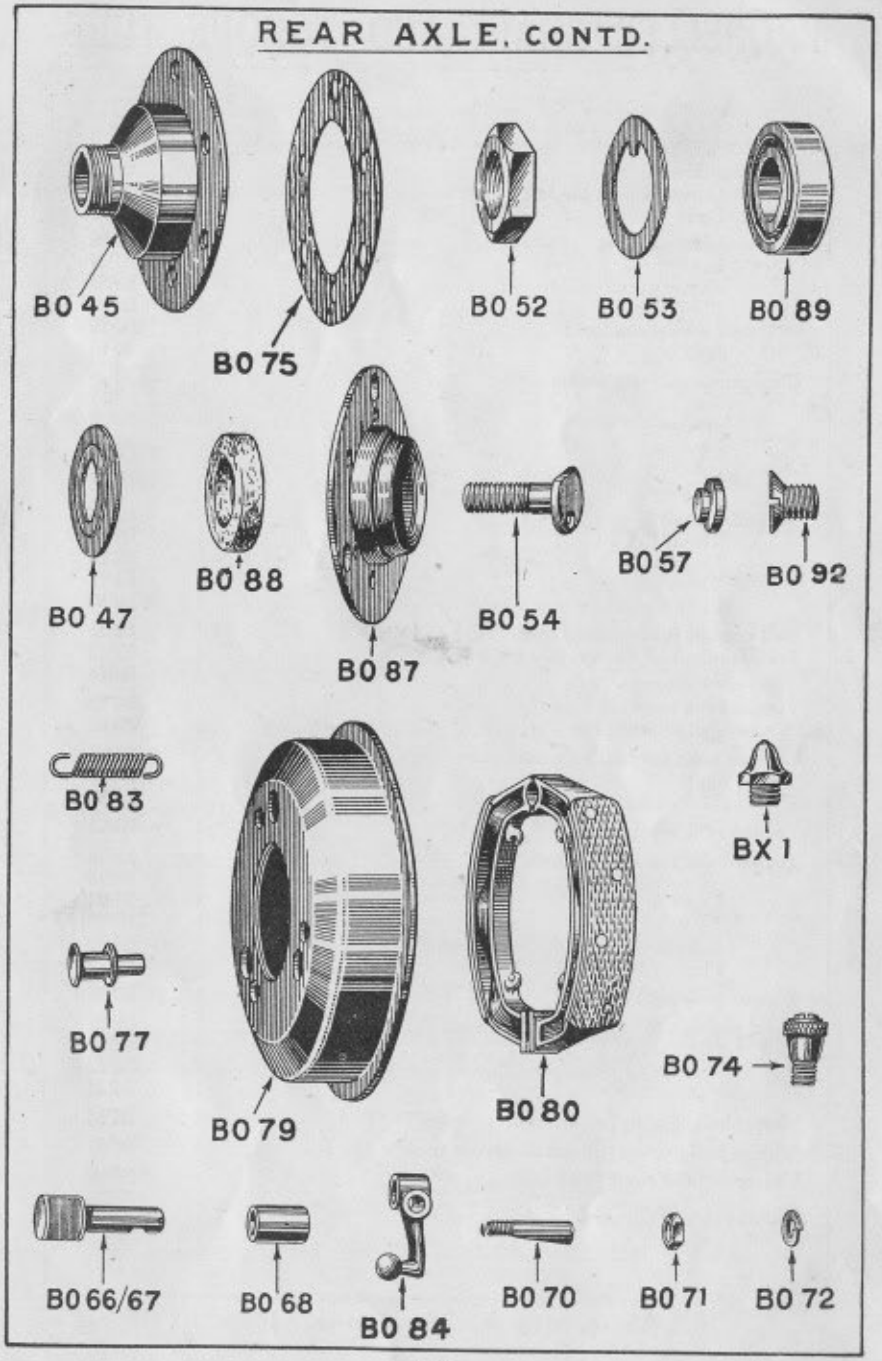

PROPELLER SHAFT AND TORQUE TUBE

DESCRIPTION	Number per Car	Reference Number
Propeller Shaft	1	BP73
Universal Joint blocks	2	BP11
Pins	2	BP12
Fabric universal joint	1	BP29
Bolts	6	BP57
Slotted nuts	6	BP58
Plain nuts	6	BP59
Lockwashers	6	BP60
Split pins	6	BP61
Rear universal joint socket	1	BP10
Plug	1	BP17
Washer	1	BP79
Studs	4	BP18
Nuts	4	BP19
Lockwashers	4	BP20
Propeller shaft flange	1	BP65
Thrust locknut	1	BP14
Lockwasher	1	BP16
Thrust adjusting nut	1	BP15
Packing gland for torque tube	1	BP80
Ball bearing (pinion shaft front end) $\frac{7}{8}\times 2\frac{1}{4}\times \frac{11}{16}\times \frac{21}{32}$	1	BP81
Torque tube ball flanges (see page 54)	1	BP43
Rivets	4	BP44
Torque tube socket	1	BP86
Ball adjusting nut	1	BP83
Locking bolts for ball adjusting nut	2	BP89
Nuts	2	BP90
Lockwashers	2	BP91
Torque tube seating—top	1	BP74
Torque tube seating—bottom	1	BP75
Distance piece	1	BP76
Locknut	1	BP71
Lockwasher	1	BP70
Nut	1	BP69
Plug	1	BP92
Torque tube with ball end	1	BP82
Bevel pinion shaft (supplied only with BO99)	1	BP88
Nut	1	BP32
Lockwasher	1	BP33
Key	1	BP34
Thrust ball bearing (pinion shaft rear end) $1\times\frac{5}{8}\times 1\frac{25}{32}$	1	BP84
Journal ball journal (pinion shaft rear end) $1\times 2\frac{1}{2}\times\frac{5}{8}$	1	BP85
Universal joint cover (leather)	1	BP53
Packing piece	1	BP54
Clip—large	1	BP77
Clip—small	1	BP78


When ordering parts quote your car number.

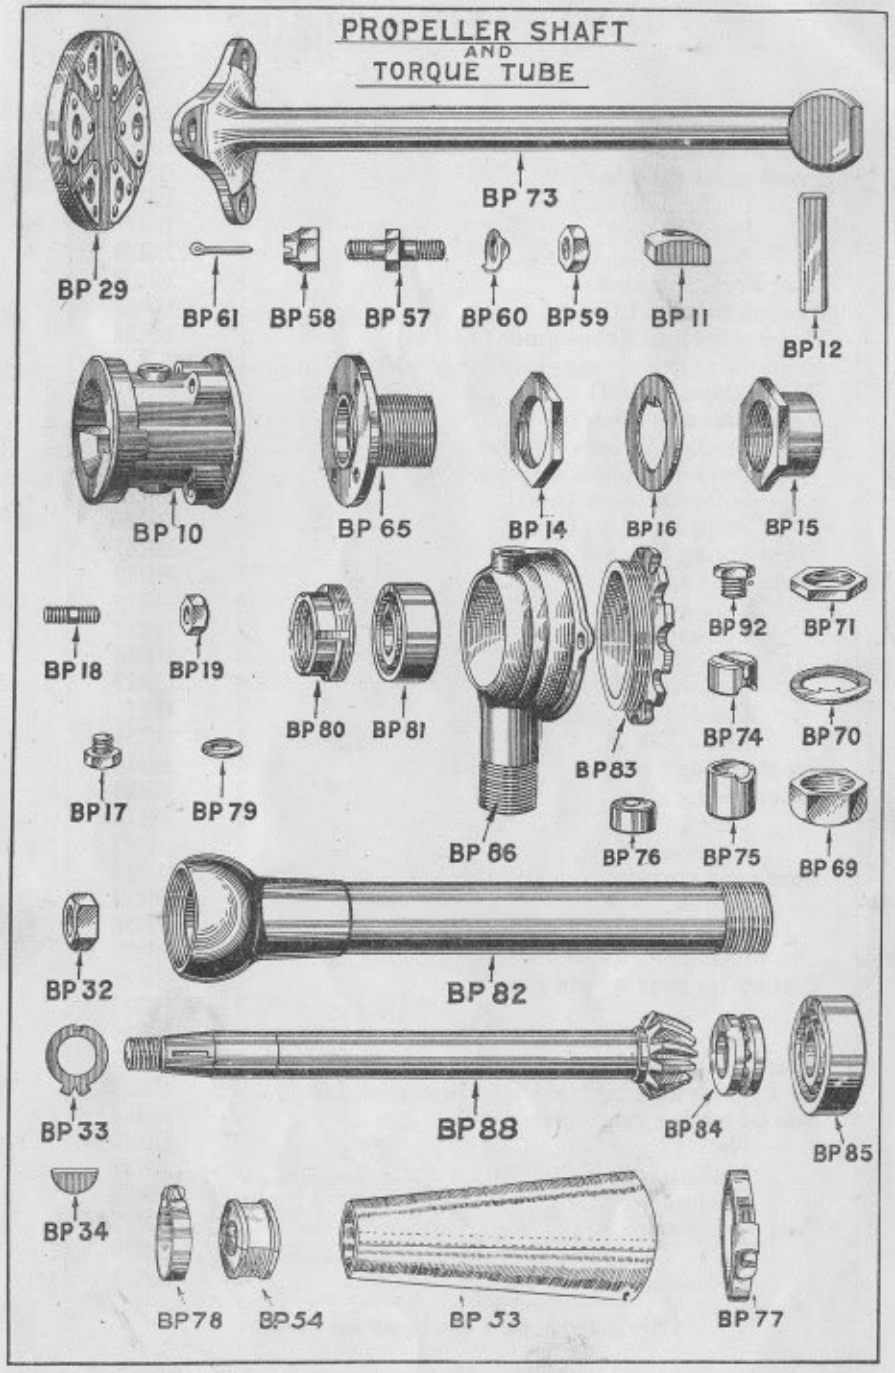

FRAME AND DETAILS

DESCRIPTION	Number per Car	Reference Number
Frame complete	1	BR87
Side members	2	BR69
Front cross member	1	BR83
Bracket (off)	1	BR6
Bracket (near)	1	BR7
Body brackets (centre)	2	BR48
Rear cross member	1	BR82
Torque tube ball flange	1	BP43
Bracket for brake rope guide (offside)	1	BR84
Bracket for brake rope guide (nearside)	1	BR85
Rear extension (off)	1	BR71
Rear extension (near)	1	BR72
Bracket for shock absorber (off)	1	BR73
Bracket for shock absorber (near)	1	BR74
Stiffening plates (rear)	2	BR75
Stiffening plates (front)	2	BR76
Front spring bracket	1	BR47
Front road spring	1	BR79
Spring shackles	4	BR13
Bushes	2	BR14
Plain nuts	4	BR15
Lockwashers	4	BR17
Grease gun nipples	2	BX1
Elbow nipples	2	BR51
Front spring packing	1	BR19
Front spring clips	2	BR80
Nuts	4	BR21
Lockwashers	2	BR42
Rear road springs	2	BR23
Bushes	4	BR24
Spring pins for shock absorbers	2	BR58
Nuts	4	BR59
Cotters for rear spring pins	2	BR26
Nuts	2	BR27
Spring washers	2	BR28
Rear spring packing	2	BR63
Rear spring packing (saloon and van chassis only)	2	BR81
Bolts, locating rear springs	2	BR64
Nuts	2	BR33
Lockwashers	2	BR34
Washers	2 or as required	BR52
Rear spring clips	2	BR77
Nuts	4	BR30
Lockwashers	2	BR31


When ordering parts quote your car number.

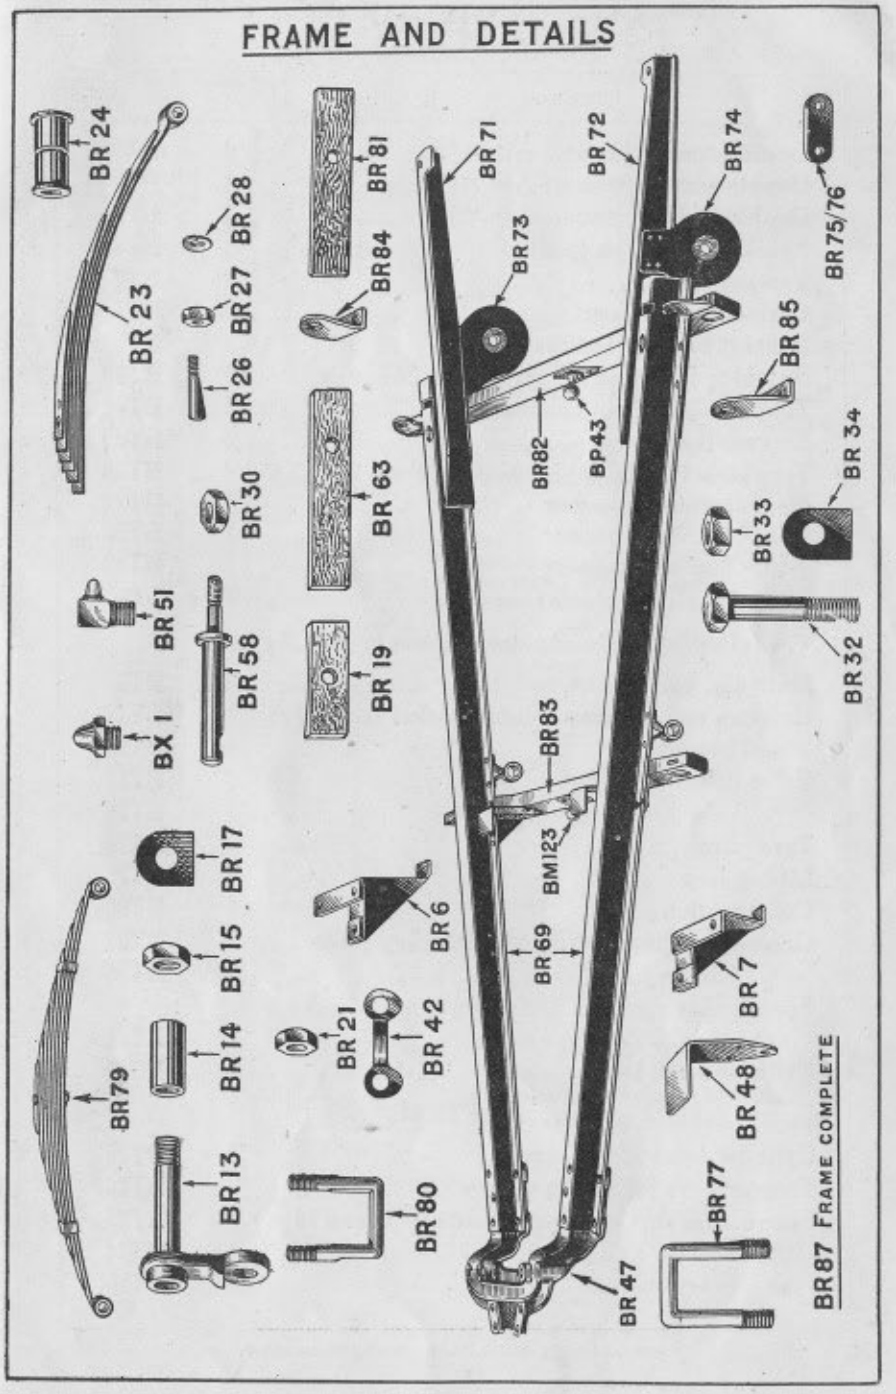

TOOLS

DESCRIPTION	Number per Car	Reference Number
Double ended spanner, $\frac{7}{16}$in.×$\frac{1}{2}$in.	1	BT1
Double ended spanner, $\frac{5}{16}$in.×$\frac{3}{8}$in.	1	BT2
Double ended spanner, $\frac{3}{16}$in.×$\frac{1}{4}$in.	1	BT3
Sparking plug box spanner	1	BT6
Tommy bar	1	BT7
Carburetter jet key	1	BT8
Contact breaker spanner	1	BT39
Sparking plug and tappet clearance gauge ...	1	BT10
Tappet adjustment spanner	1	BT12
Screwdriver	1	BT13
Tyre levers (Dunlop) for balloon tyres ...	1	BT35
4in. adjustable spanner	1	BT22
$\frac{3}{16}$in.×$\frac{1}{2}$in. box spanner	1	BT32
$\frac{5}{16}$in.×$\frac{3}{8}$in. box spanner	1	BT40
Wrap for all the above items	1	BT23
The following are in addition to those in Tool Wrap :—		
$\frac{5}{8}$in.×$\frac{3}{4}$in. box spanner	1	BT5
Hub cap and steering column socket spanner	1	BT11
Wheel brace	1	BT16
Valve lifter	1	BT17
Valve lifter screw	1	BT18
Tyre pump	1	BT20
Lifting jack	1	BT21
Combination pliers	1	BT36
Grease gun, auto ram type, including BT38...	1	BT37
Adaptor for BT37	1	BT38
Spanner for dynamo casing nut and cylinder nut	1	BT31
Cylinder head joint washer	1	BC29
EXTRAS.		
Cylinder head lifting screws	2	BT25
Tommy bars for lifting screws	2	BT26
Spanner for thrust adjusting nuts BP14 and 15	1	BT27
Hub extractor and screw BT29	1	BT24
Hub extractor screw	1	BT29


When ordering parts quote your car number.

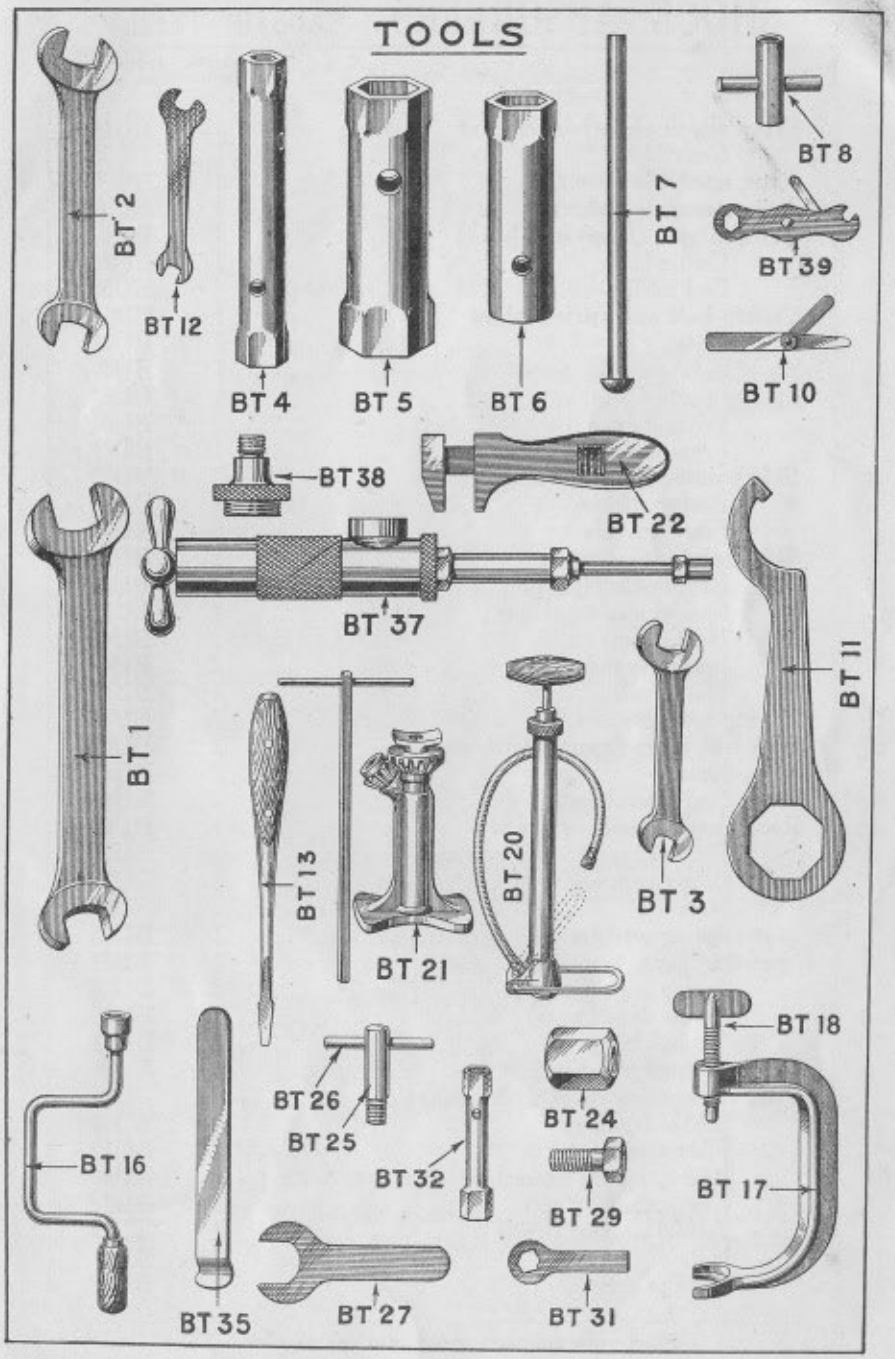


SHOCK ABSORBERS. "AUSTIN TYPE."

DESCRIPTION	Number per Car	Reference Number
Front shock absorber bracket	1	**BU1**
Centre bush	1	**BU33**
Arm, nearside (front)	1	**BU2**
Arm, nearside (back)	1	**BU3**
Arm, offside (front and back)	1	**BU4**
Centre bush	1	**BU34**
End bushes	4	**BU39**
Centre bolt and spring plate	1	**BU5**
Nuts	2	**BU6**
Spring washer	1	**BU7**
Spring plate front	1	**BU8**
Friction discs (back and front)	2	**BU9**
Friction disc (centre)	1	**BU10**
Side connecting links with bushes	2	**BU49**
Bushes rubber	4	**BU50**
Fibre washers	8	**BU12**
Side link bolts (lower)	2	**BU36**
Key washers (plain)	2	**BU14**
Special washers (bent)	2	**BU15**
Nuts (front)	2	**BU43**
Spring washers	2	**BU44**
Nuts (rear)	4	**BU45**
Spring washers	2	**BU46**
Side link bolts (upper) with peg	2	**BU40**
Nuts	2	**BU47**
Spring washers	2	**BU48**
Rear shock absorber arms	2	**BU23**
End bushes	4	**BU39**
Bolts (front end)	2	**BU24**
Nuts	4	**BU25**
Spring washers	2	**BU26**
Springs	2	**BU27**
Spring cups (inner)	2	**BU28**
Spring cups (outer)	2	**BU29**
Spring plates	2	**BU30**
Friction discs	4	**BU9**
Rear connecting links with bushes	2	**BU41**
Bushes (rubber)	4	**BU42**
Fibre washers	8	**BU12**
Rear link bolts (lower) with peg	2	**BU40**
Key washers (plain)	2	**BU14**
Special washers (bent)	2	**BU15**
Nuts	2	**BU31**
Spring washers	2	**BU32**

When ordering parts quote your car number.

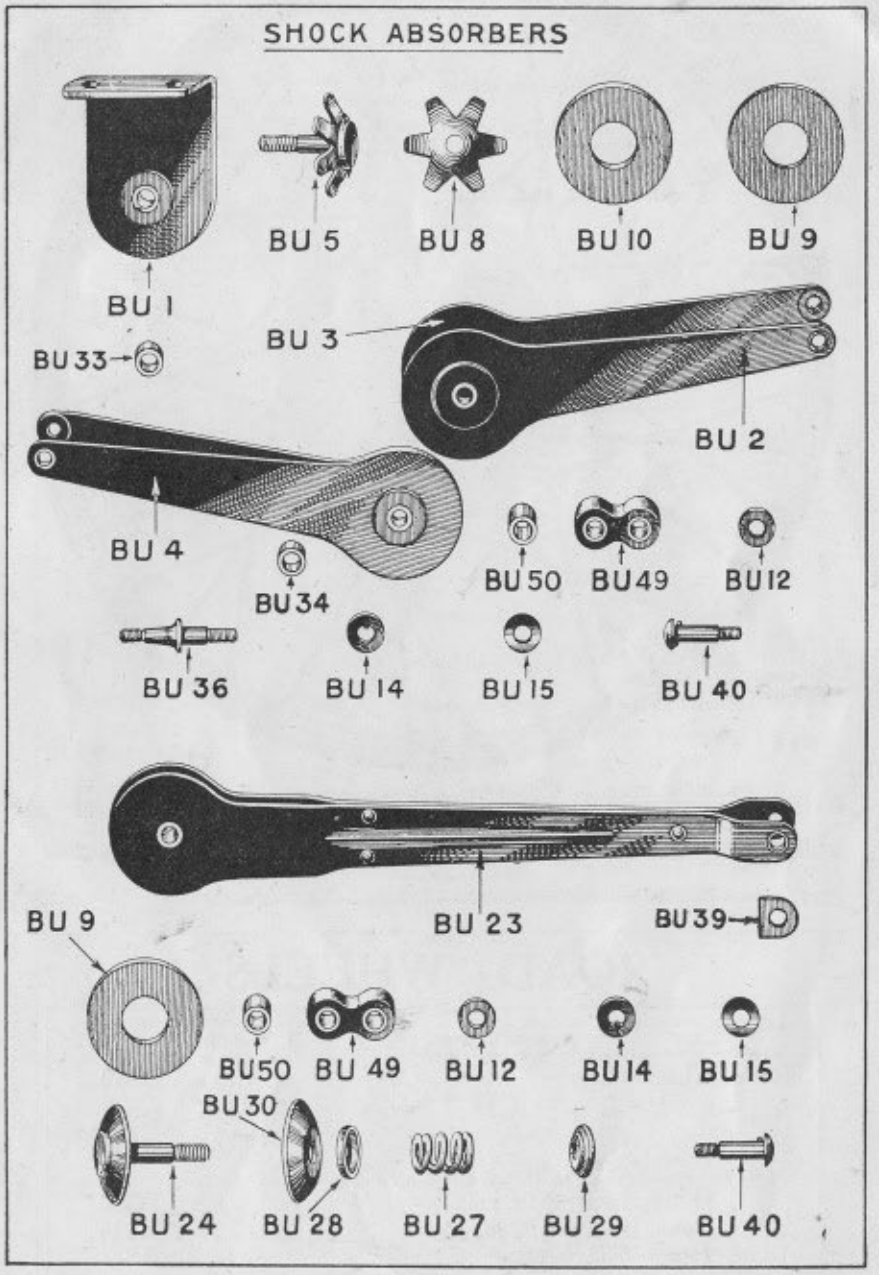

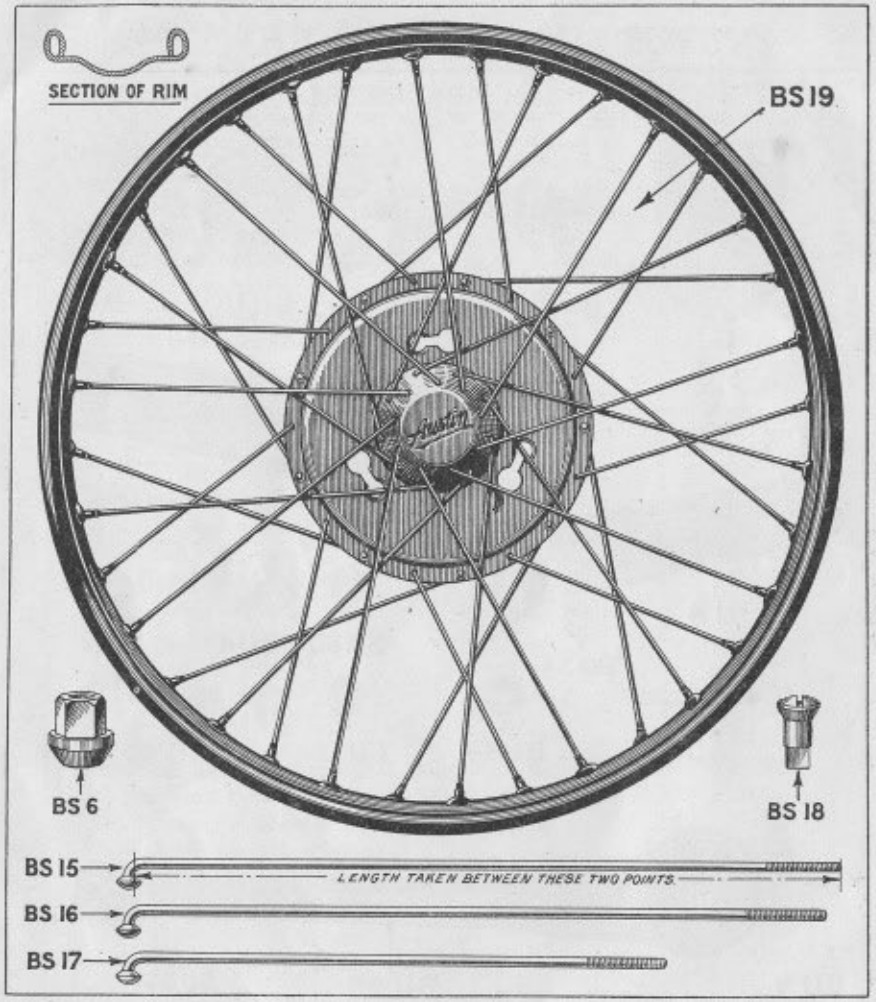

ROAD WHEELS

DESCRIPTION.	Number per Car.	Reference Number.
Road Wheel	5	**BS19**
	No. per wheel.	
Nuts	3	**BS6**
Nipples	36	**BS18**
Spokes (measure with care from inside of bend. See illustration).		
Outer, long—8⅝in. long	9	**BS15**
Outer, short—8½in. long	9	**BS16**
Inner—6½in. long	18	**BS17**

When ordering parts quote your car number.

EQUIPMENT APPLICABLE to ALL 7 H.P. MODELS

THE AUSTIN MOTOR CO., LTD., accept no liability under the terms of their Warranty for Tyres, Speedometers, or the Electrical Equipment, or other goods, including Coachwork not of their own manufacture.

All claims relating to any of these parts or fittings or orders for repairs to them should be addressed to their manufacturers.

For our clients' convenience, we give below the names and addresses of the manufacturers, or suppliers of the goods in question.

IMPORTANT.—When claims under guarantee are being made, it is absolutely necessary to quote the type and number of car, and also the commissioning date.

HORNS.

"LUCAS" (King of the Road)	Joseph Lucas, Ltd., Great Hampton Street, Birmingham, and Dordrecht Road, Acton Vale, London, W.3.
"SPARTON" ..	Graham and Co., St. Andrew's Works, Crofton Park, London, S.E.4.
"A.R." ..	A. Rist, Ltd., Waveney Works, Lowestoft.
"KLAXON" and "KLAXET" ..	Klaxon, Ltd., Landor Street, Birmingham, and 36, Blandford Street, London, W.1.
"BENJAMIN" ..	Benjamin Electric, Ltd., Brantwood Works, Tariff Road, Tottenham, London, N.W.17.
"SYGNOL" ..	Clear Hooters, Ltd., 79, Lombard Street, Birmingham.
"DESMO" ..	Desmo Ltd., Desmo House, 31, Stafford Street, Birmingham.
"BUTLER" ..	Butlers, Ltd., Grange Road, Small Heath, Birmingham.

WINDSCREEN WIPERS.

"LUCAS" (King of the Road) ..	Joseph Lucas, Ltd., Great Hampton Street, Birmingham.

ELECTRICAL EQUIPMENT.

"LUCAS."	Dynamos	Joseph Lucas, Ltd., Great Hampton Street, Birmingham, and Dordrecht Road, Acton Vale, London, W.3.
	Starters	
"C.A.V."	Cutouts	C. A. Vandervell and Co., Ltd., (Service by). Joseph Lucas, Ltd., Dordrecht Road, Acton Vale, W.3.

LAMPS.

"LUCAS" ..	Joseph Lucas, Ltd., Great Hampton Street, Birmingham, and Dordrecht Road, Acton Vale, London, W.3.
"C.A.V." ..	Joseph Lucas, Ltd., Great Hampton Street, Birmingham, and Dordrecht Road, Acton Vale, London, W.3.

BATTERIES.

"LUCAS" and "C.A.V." ..	Joseph Lucas, Ltd., Great Hampton Street, Birmingham, and Dordrecht Road, Acton Vale, London, W.3.

GREASE GUNS and OIL INJECTORS.

"ENOTS" ..	Benton and Stone, Ltd., Bracebridge Street, Birmingham.

SPEEDOMETERS.

"SMITH" .. S. Smith and Sons (M.A.), Ltd., Cricklewood Works London, N.W.2.

BODIES and FITTINGS.

"MULLINER" .. Mulliners, Ltd., Bordesley Green Road, Birmingham

"GORDON ENGLAND" Gordon England, Ltd., Palace of Industry, Wembley.

"STARTIN" .. Thomas Startin, Junr., 71, Aston Road North, Birmingham.

"SWALLOW" Swallow Sidecar & Coachbuilding Co., Holbrook Lane, Foleshill, Coventry.

DRIVING MIRRORS.

"LUCAS" (King of the Road) .. Joseph Lucas, Ltd., Great Hampton Street, Birmingham.

"DESMO" .. Desmo Limited, Desmo House, 31, Stafford Street, Birmingham.

TYRES and TUBES.

"DUNLOP" .. Dunlop Rubber Co., Ltd., Fort Dunlop, Erdington, Birmingham.

CARBURETTERS.

"ZENITH" .. Zenith Carburetter Co., Ltd., 40-42, Newman Street, London, W.1.

LIFTING JACKS.

"MIDAS" .. Lake and Elliott, Ltd., Albion Works, Braintree, Essex.

"SHELLEY" .. R. T. Shelley, Ltd., Aston Brook Street, Birmingham.